

FAAC XT2 & XT4 SLH TO FDS
REMOTE PROGRAMMING INSTRUCTIONS

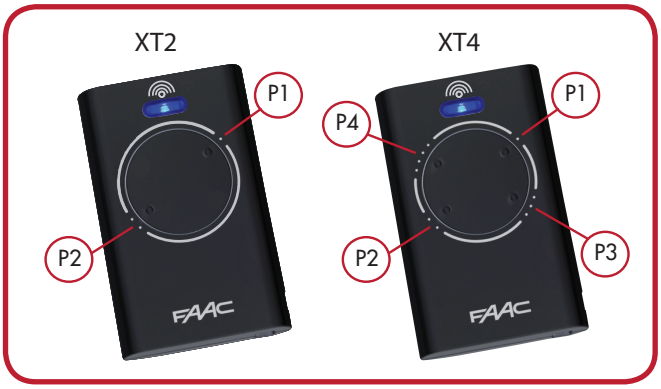


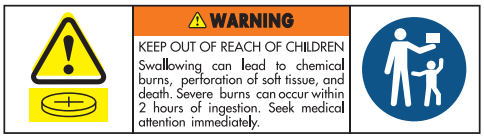

SLH **FDS**




STEP 1 - CONVERT THE FDS TRANSMITTER TO SLH

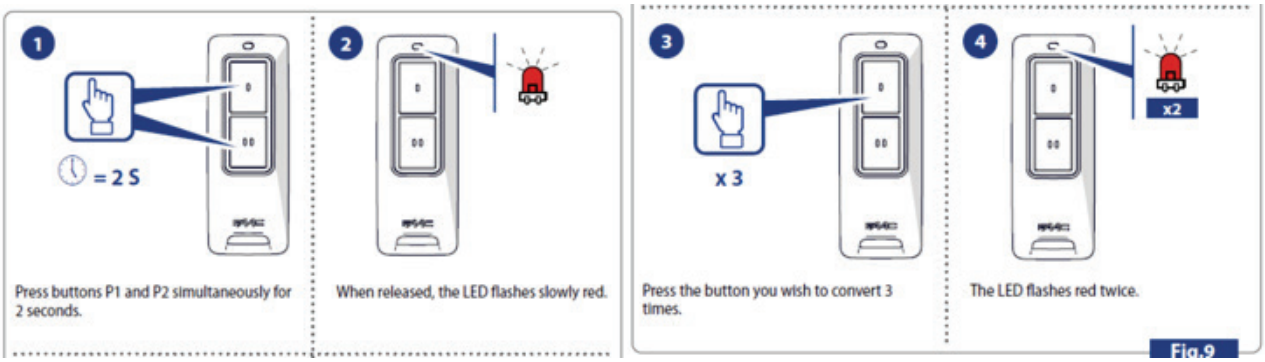

STEP 2 - PLACE THE SLH TRANSMITTER INTO LEARN MODE

a. Simultaneously Press P1 + P2 on the working SLH transmitter
b. Release buttons when LED starts flashing

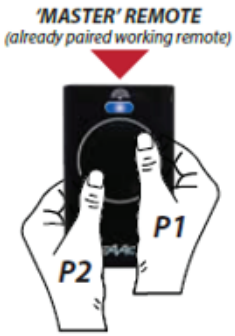

STEP 3 - TEACHING

a. Place the SLH & FDS remotes head-to-head (touching)
b. Press & Hold down P1 on the working SLH transmitter
c. Press & Hold down P1 on the FDS transmitter
d. Release buttons after LED flashes twice and goes off



STEP 4 - TEST THE NEW FDS TRANSMITTER

a. Test the new FDS transmitter, try pressing the button several times
b. If transmitter doesn't activate device, repeat procedure
c. Repeat procedure for all buttons if required