REPACKING INSTRUCTIONS

IMPORTANT! SAVE PACKING MATERIALS

FOR REPACKING COMPLETED UNIT AS SHOWN BELOW
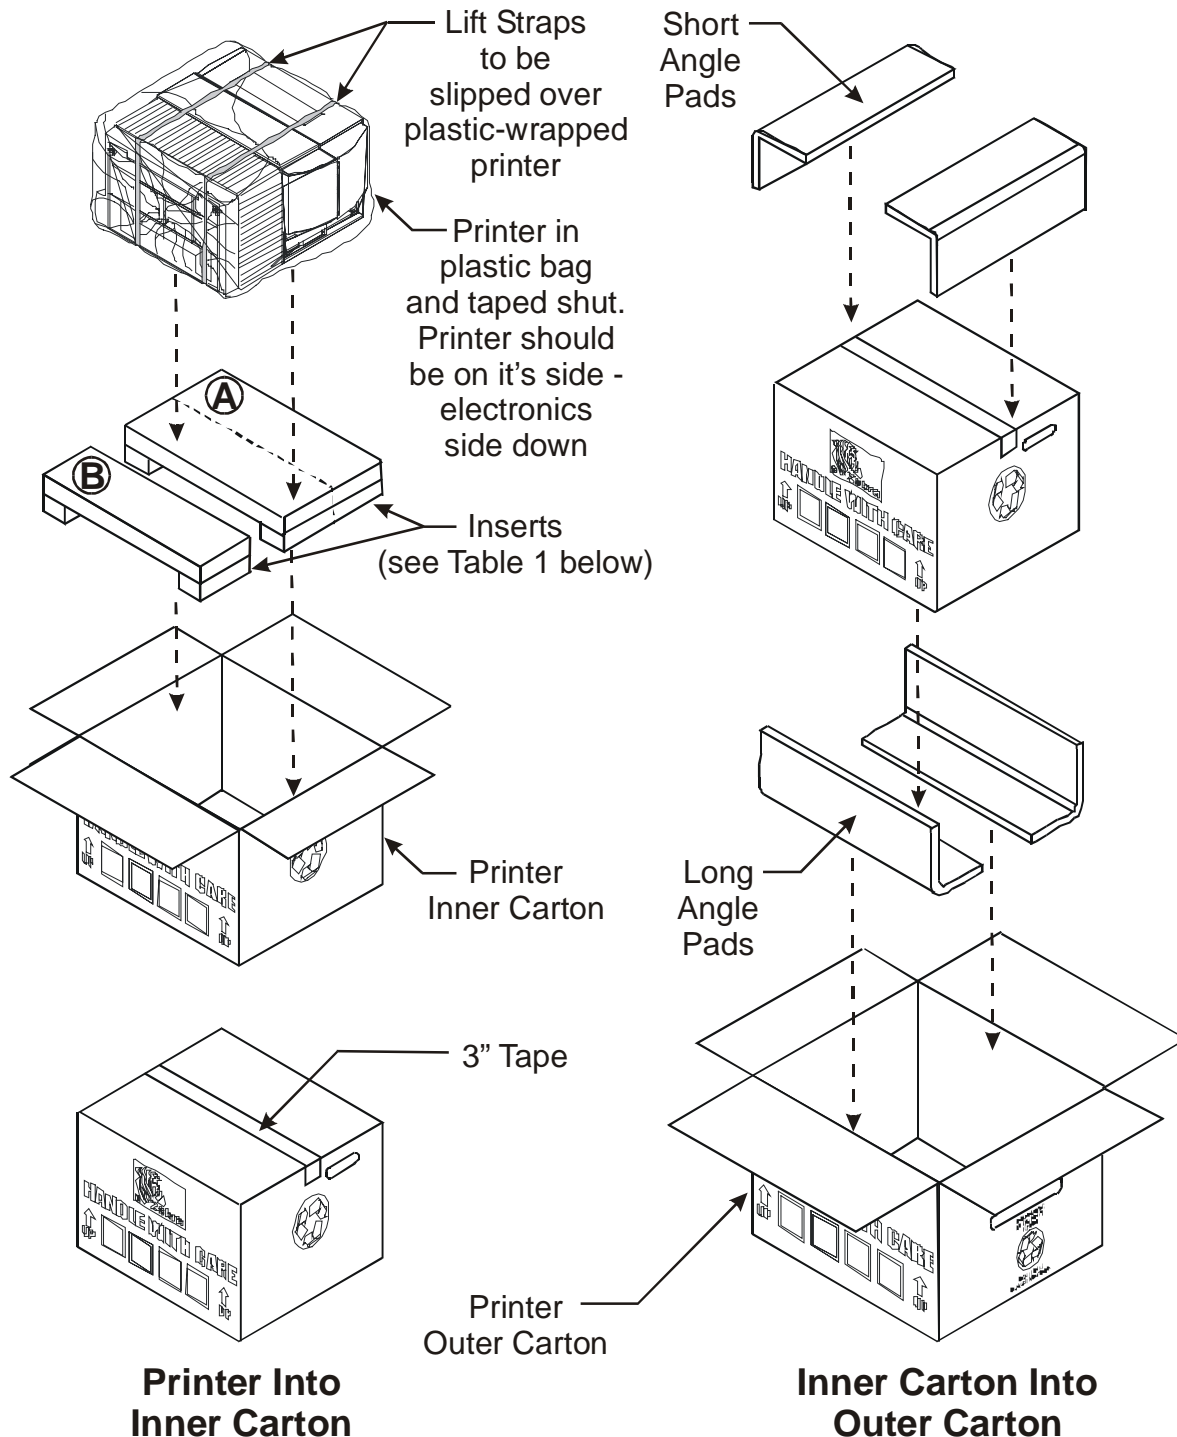
Lift Straps to be slipped over plastic-wrapped printer

Short Angle Pads

Printer in plastic bag and taped shut. Printer should be on it's side - electronics side down

Ⓐ

Ⓑ

Inserts (see Table 1 below)

Printer Inner Carton

Long Angle Pads

3" Tape

Printer Outer Carton

Printer Into Inner Carton

Inner Carton Into Outer Carton

Table 1. Inserts Needed For Packing

Printer Model	Inserts Provided
Z4000 (with Tear/Cutter Options Only)	A Only
Z4000 (with Rewind Option)	A & B
Z6000 (All)	None