Basic overview of a Rainmaker Bushfire Sprinkler System

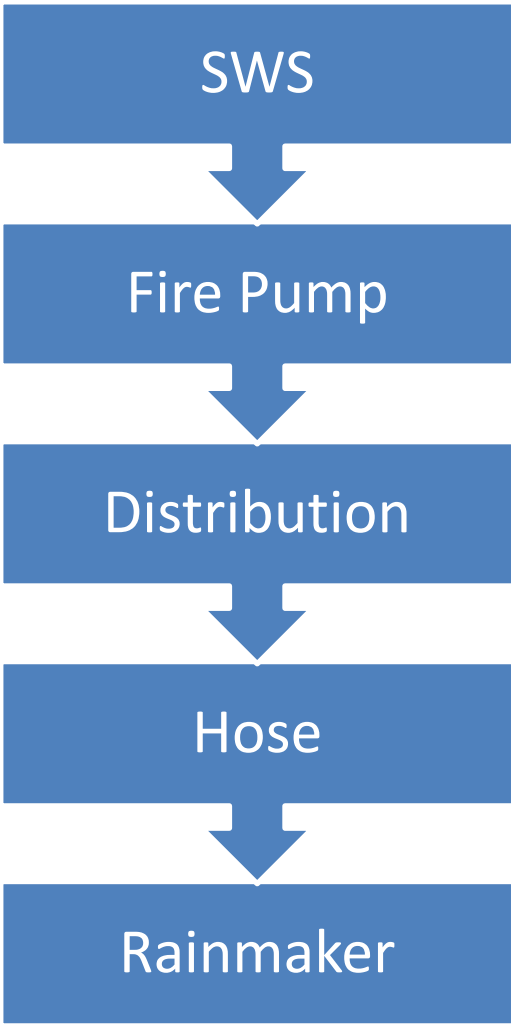

Your Static Water Supply can be a water tank, pool or any vessel of water not under pressure.
We recommend at least 5000 litres or fitting a float valve to smaller capacity vessels.

Your fire pump needs to have at least 50M of head and push at least 200 litres per minute of water.
We recommend a 6.5hp Honda or a Diesel engine powered pump.

We recommend adding valves to control the distribution of your water.
Connect a 20mm hose to your pump with an adaptor or use a splitter valve to supply two or four hoses.

We recommend quality 15M x 12mm garden hoses to connect to your Rainmakers.

Hang the rainmaker off you gutter on the side of your home facing the fire front and turn on the pump.
Adjust the sprinkler and valving to give the best coverage.