
Raynic

User Manual
Calendar Clock
CR1029

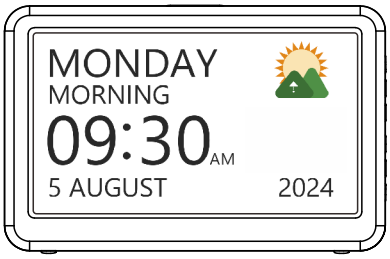


Support

Website:**http://www.raynic.com**
E-mail: **support@raynic.com**
Phone Number: **+ 1(323)616 - 1209**
Telephone Support: Mon-Thur,18:00-21:00 PDT

RoHS Made in China Version 1.2

Powering Up


Plug the power adapter into a wall outlet, connect the charging cable to the power port on the right side of the back of the digital calendar.

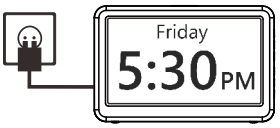

Note:
1. The original power supply is full 5V=2A (including power supply and DC line). It is recommended to use the original power supply to ensure stability.
2. If not, please be sure that the power supply used meets the requirements of "voltage 5V, current ≧2A".

Battery Backup


The battery feature works for memorizing the time and alarm settings in the case of main power outage. During the battery backup, the screen will go blank and alarm will not sound, but the clock will display correct time once power returns.

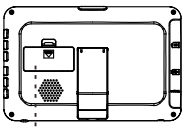

AAA Battery
(AAA Battery not included)

Start Setting

1. Press the **"MENU"** on the right side of the machine to enter the "Menu".
2. Select "Date & Time".
3. Press the **"Select"** to set "Time"& "Date" , "Time Format", "Date Format" and "Daylight Saving Time" .

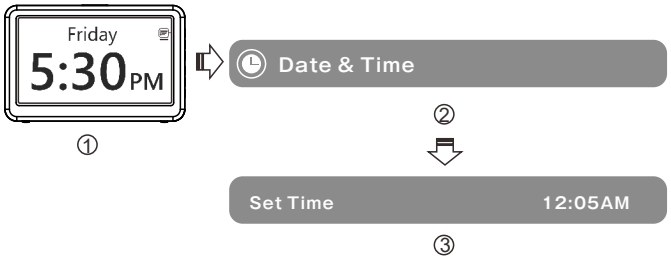

Daylight Saving Time

The default region is North America and the DST Settings are enabled by default. (Note: Please select your region or turn off Daylight Saving Time before setting the time.)

Daylight Saving Time < North America >

Time Setting

1. Highlight the "Set Time" option.
2. Press the **"Select"** button to enter the settings.
3. Press the **"Up"**, **"Down"**, **"Left"**, and **"Right"** buttons to adjust to the correct time.
4. Press the **"Select"** button to confirm.



Date Setting

1. Highlight the "Set Date" option.
2. Press the **"Select"** to enter the settings.
3. Press the **"Up"**, **"Down"**, **"Left"**, and **"Right"** buttons to adjust to the correct date.
4. Press the **"Select"** to confirm.



Select 12H/24H

1. Highlight the "Time Format" option.
2. Press the **"Left"**, and **"Right"** to select the time format.

Time Format < 12H >

Select Date Format

1. Highlight the "Date Format" option.
2. Press the **"Left"**, and **"Right"** to select the date format.

Date Format < Day-Month-Year >

Set Alarm

1. Press the **"MENU"** button on the right side of the machine to enter the "Menu".
2. Press the **"Up"** and **"Down"** button to highlight "Alarms".
3. Press the **"Select"** button to enter the alarm settings, select "Add New Alarm".
4. Press the **"Select"** button to add a new alarm.

1) Highlight the "Time" option, and press the **"Select"** button to set the alarm time.
2) Press the **"Up"**, **"Down"**, **"Left"**, and **"Right"** buttons to adjust the alarm time.
3) Press the **"Select"** button to confirm.

Alarms

Set Alarm Repeat

1. Highlight the "Repeat" option
2. Press the **"Left"**, and **"Right"** to select the alarm clock repeat mode.
3. Adjust it to Customize, and press the **"Select"** to customize repeat settings.

You can create a repeating alarm by selecting more than one day of the week.
(1) Use the **"Left"**, and **"Right"** buttons to select the day of the week for the alarm.
(2) Use the navigation buttons to customize these settings such as Label, Ringtones, Volume, Ring Duration, Snooze Duration and ON/OFF to activate the alarm.

Repeat < Customize >

S M T W T F S

Edit Alarms

1. Press the **"MENU"** button on the right side of the machine to enter the "MENU".
2. Press the **"Up"** and **"Down"** to highlight Alarms.
3. Press the **"Select"** to enter the alarm settings.
4. Use the **"Up"** and **"Down"** to select the alarm that you wish to edit, and then use the **"Left"** and **"Right"** buttons to choose between "On", "Off", "Edit", or "Delete".



Set a Schedule

1. Press the **"MENU"** button on the machine to enter the settings.
2. Press the **"Up"** or **"Down"** to highlight "Schedule".
3. Press the **"Select"** to enter the schedule settings.
4. Press the **"Select"** again to add a new event.
5. Press the **"Up"** or **"Down"** to select the type of reminder or customize.
6. Press the **"Select"** once to confirm the type of reminder.



Please Note:

(1) Use the **"Up"** and **"Down"** buttons to navigate the programmed message options, or use "Customize" to create your own text.

(2) When you need to change an existing schedule, use the **"Up"** and **"Down"** buttons to select the schedule to be edited. Then, use the **"Left"** and **"Right"** buttons to choose On, Off, Edit, or Delete.

Set Schedule Repeat

After selecting the type reminder, you can schedule your reminder as a "Recurring Schedule" or a "One Time Event".

1. Set the reminder to "Recurring Schedule":

(1) Highlight the Repeat option, select the day you want to repeat with the navigation buttons.

(2) Press the **"Select"** button to confirm.

2. Set the reminder as a "One Time Event":

(1) Highlight the Date option, select the date with the navigation buttons.

(2) Press the **"Select"** button to confirm.



Please Note:

(1) "Activate" will set your reminder using the default settings on the clock.

(2) "Customize" will allow you to choose the settings like Ringtones, Volume, Ring Duration, Snooze Duration, and ON/OFF.

(3) Use the navigation buttons to customize these settings and activate the reminder.

Modify a Schedule

1. Press the **"MENU"** button on the machine to enter the menu.
2. Press the **"Up"** or **"Down"** to highlight "Schedule".
3. Press the **"Select"** to enter the schedule interface.
4. Press the **"Up"** or **"Down"** to highlight the schedule you want to modify.
5. Press the **"Left"** or **"Right"** button to On, Edit, Delete or Off the schedule.
6. When "Edit" is highlighted, press the **"Select"** button to modify the schedule details.



Select a Theme

1. Press the **"MENU"** button, use **"Up"** or **"Down"** to highlight the Themes option.
2. Press the **"Select"** to enter.



Please Note:

(1) We offer a total of 12 themes,use the navigation buttons to select your favorite theme. Only some themes support custom colors, patterns, date display.

(2) The "Time Album" theme requires you to insert a USB drive or SD card (not included in packing) to get more pictures and use photo frame function.

(3) Please note that the maximum compatible external storage is 64GB.

Brightness Settings

1. Manual Brightness Adjustment

(1) Tap the **"MENU"** button, use the **"Up"**and **"Down"** to highlight the Brightness option. Tap the **"Select"** to enter.

(2) Highlight the "Manual Settings" option, press the **"Select"** again to enter the brightness adjustment, use the **"Left"** and **"Right"** to adjust the brightness as needed.


(3) Press the **"Select"** once to confirm.



2. Time Period

(1) On the Brightness Settings interface, use the **"Up"**and **"Down"** to highlight the "Time Period".

(2) Press the **"Select"** to set the start time of the daytime and nighttime periods, and the corresponding brightness.

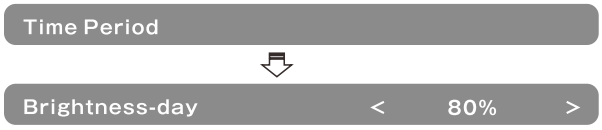


Language

1. Press the **"Menu"** button to enter the menu interface, use the **"Up"** and **"Down"** to highlight the "Settings" and press the **"Select"** to enter the settings.

2. Highlight the Language option and use the **"Left"** or **"Right"** to adjust the language.

Supported Languages: English, French, Italian, German, Spanish, and Japanese.

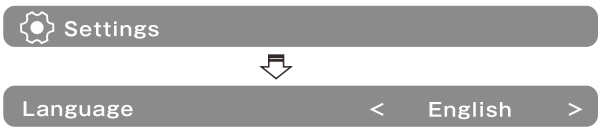

Album

1. Press the **"Menu"** button to enter the setting interface, use the **"Up"** and **"Down"** to highlight the Album option and press the **"Select"** to enter the Album mode.
2. Use the **"Left"** and **"Right"** to select the device you want to read and press the **"Select"** once to enter settings.

Please Note:

(1) When using external storage, it's recommended to only store plain photos. Other file types could make the storage unreadable or even cause the machine to restart.

(2) External storage only supports 2 image formats: JPG and JPEG.



Play Album & Exit

1. Select a picture you like and press the **"Select"** button to edit.
2. Press the **"Play"** button to set the time to switch photo.
3. Press the **"Down"** to adjust the photo to Fit or Fill the screen.
4. Press the **"Left"** and **"Right"** to browse the previous or next picture.
5. Press the **"Select"** once to confirm settings.
6. Press **"Back"** to exit Album mode and back to the menu interface.

