CPT
EXCLUSION ZONE

SOCOTEC

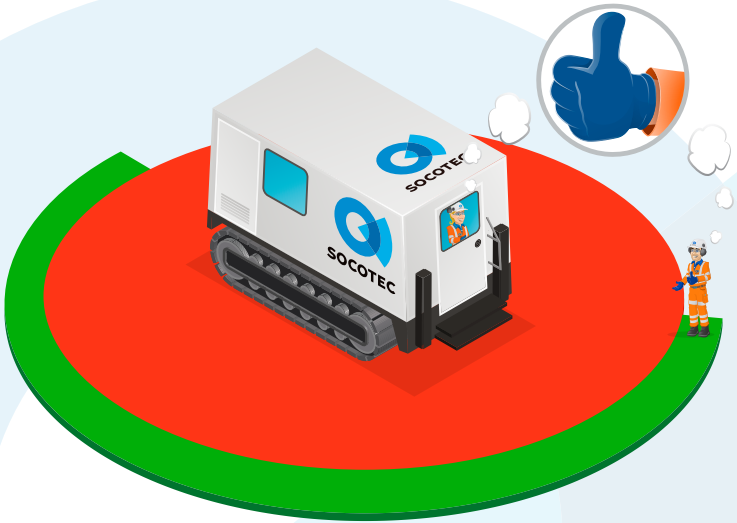

TRAVEL

Red Zone: Keep out of this area at all times. Allow a 5m exclusion zones around the whole machine. Authorised personnel only (operators).

Green Zone: Always signal 'Thumbs up' to the operator of CPT (who will stop the machine from travelling) and receive a positive 'Thumbs up' response prior to entering the Red Zone.

TESTING

Red Zone: Keep out of this area at all times. Allow a 3m exclusion zones around the whole machine. Authorised personnel only (operators).

Green Zone: Always signal 'Thumbs up' to the operator of the CPT and receive a positive 'Thumbs up' response prior to entering the Red Zone.