


## How to measure for your WinsMor Garage Door

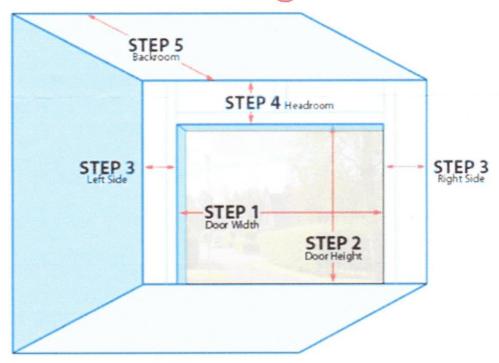

Step 1: Exact finished opening width	
Step 2:Exact finished opening height	
Step 3: Sideroom - distance from the edge of the door opening to any wall or obstruction	
Step 4: Headroom - distance from the top of the finished door opening to the ceiling or underside of joists	
Step 5: Roomdepth - distance from the finished door opening to the back point where hardware or the opener would extend	