

# EZ MAGNET GUN HOLDER


# EZTRUNK™ ASSEMBLY — MANUAL —

## MAKE IT EZ

Print the latest manual &  
Watch the EZTRUNK Video



Scan QR CODE for Video &  
PDF MANUALS

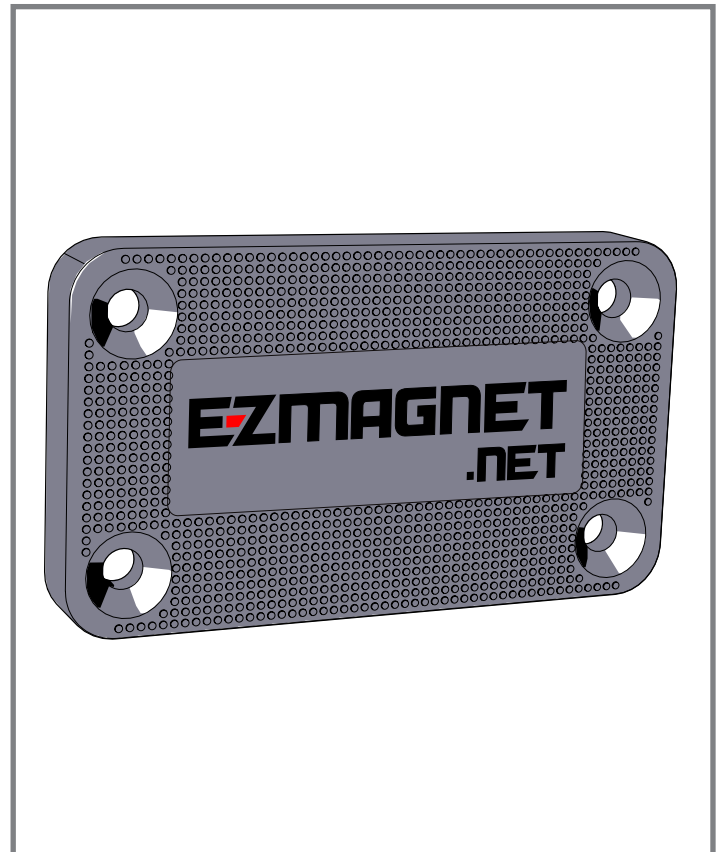

## Customer Service

*Any question? WE ARE HERE TO HELP!*

Text or Call **203-901-0055** / Call **203-591-9060**








**EMAIL US: SERVICE@EZTRUNK.NET**

*7 days a week 8:30 am EST*


## WE CAN HELP YOU!

PO# :

**Please read instructions fully before beginning assembly**

NO	Illustration	Description	Part#	1 PK	2 PK
1		EZ Magnet	EZM 001	1	2
2		Double Side Tape	EZM 002	1	2
3		Screw M4x16 mm	54161	4 + 1 extra	8 + 1 extra
4		Lock Nut M4	10041	4 + 1 extra	8 + 1 extra
5		Metal Washer ( Small )	1404012	4 + 1 extra	8 + 1 extra
6		Drill Bit	#5	1	1
7		Adhesion Promoter Bag	#20	1	2

**RECOMMENDED TOOLS**

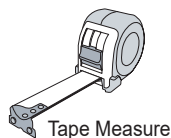

To Begin installation of your EZ Magnet Gun Holder to your EZTRUNK.

Start with your trunk in open position (Diagram 1).


Use Painters / masking tape to mark off location inside of EZTRUNK just right of the back panel seam ( Diagram 1).

Test placement location: fold in wings on trunk to ensure it does not interfere with normal closing process. \*If wings hit taped area, adjust location of tape outside of wings.

There are (2) Versions of Installation: **TAPED** -or- **SCREWED**. Follow directions for each choice.

**Adhesive TAPE Installation**


**1**

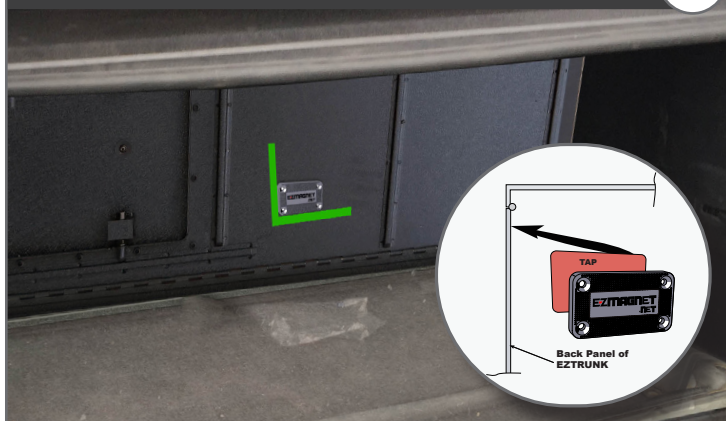

Once you have taped off proper location for install, clean both trunk area & back of magnet well with Adhesion Promoter (supplied).  
Once dry, peel double sided adhesive (supplied) and attach to back of magnet. Then proceed to peel other side of adhesive and attach magnet to the taped area of the EZTrunk. Press and hold for 60 seconds.

**SCREW Installation**

**2**

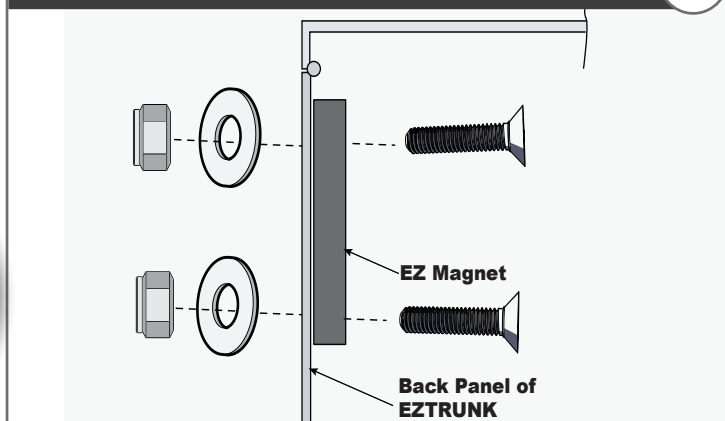

Once you have taped off proper location for install, Use tape / pencil to mark alignment holes for screws.  
Drill (4) holes on the backside panel of the EZTRUNK with supplied drill bit.  
Attach EZ Magnet with the (4) screws supplied