



Retrofit frame windows are installed into existing window frames

Retrofit windows, on the other hand, use the existing frame as the opening in which to install the new windows. No trim removal, no stucco or siding to repair. A seemingly much simpler and cleaner job. It can be.



Block Frame
For replacement applications. Block with sloped sill adapter is also available.

Block frame(box unit) installation involves replacing only the window's existing sash and leaving the window frame intact.




Nail-On Frame
For new construction applications. This frame type allows targeted installation in a newly created opening.


A New Construction window includes nailing fins used to fasten the window in place and to flash it, helping to make it airtight and waterproof. This usually requires installation of new interior woodwork




GRIDS PATTERN

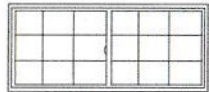


Colonial (Standard)

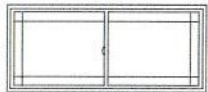


6-Lite Prairie

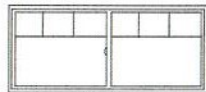

Victorian

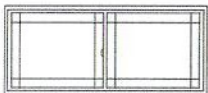

9-Lite Prairie

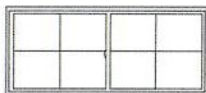

Custom (equally divided)
Additional patterns available



1" sculp



5/8" flat

WHITE & ALMOND COLOR



Double glazed windows are an ideal energy efficient choice with the added benefit of minimising noise

GLASS TEXTURE



RAIN



BAMBOO



OBSCURE



ACID ETCH