


Heel Guard 1510AR Installation Instructions for 2014 - Later Indian Footboard

- 1) With the footboard removed from the bike, first remove the rubber pad by using needle nosed pliers to pinch and push the rubber darts through the metal base plate. Then, place the footboard bottom side up as shown below.
- 2) Drill two 1/4 inch holes in the approximate locations as shown below:

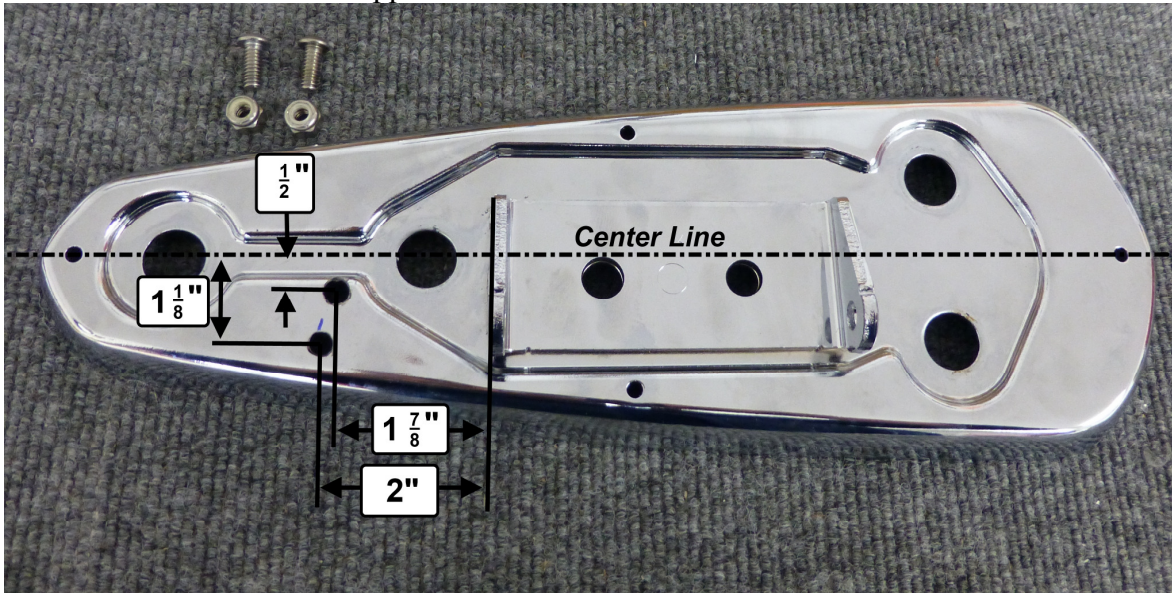

- 3) With the supplied 1/4" bolts arranged as shown below, attach the Heel Guard to the footboard and secure with the provide nuts and tighten the hardware using the supplied 5/32" hex wrench and a 7/16" wrench. You may use the slotted holes to adjust the location of the Heel Guard to your preference.



- 4) Re-assemble the footboard and rubber pad and re-attach assembly to bike.

CARL MILES
HEEL GUARD[™]
STOP BURNING RUBBER!
U.S. Patent 6,626,448 U.S. Patent 7,017,932

Manufactured by:
Heel Guard, Inc.
www.heelguard.com

107 Third Street
Wisdom, MT 59761
Phone: 1(406)689-3102