


# Heel Guard 1710R Installation Instructions for 2018 Harley Davidson Deluxe SofTail Footboard

- 1) With the footboard removed from the bike, first remove the rubber pad by using needle nosed pliers to pinch and push the rubber darts through the metal base plate. Then, place the footboard top side up.
- 2) Align the Heel Guard as shown in the pictures below and then mark holes. Note that bracket should line up

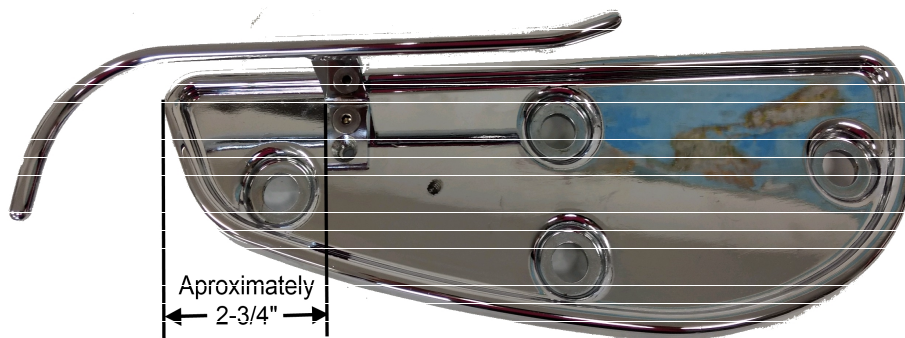

against raised portion of board. Drill two 1/4 inch holes where marked.

- 3) With the supplied 1/4" bolts arranged as shown below, attach the Heel Guard to the footboard and secure with the



provide nuts and tighten the hardware using a 7/16" wrench and the supplied 5/32" hex wrench.



- 4) Reassemble footboard and rubber pad and re-attach to bike.

CARL MILES  
**HEEL GUARD**<sup>TM</sup>  
STOP BURNING RUBBER!  
U.S. Patent 6,626,448 U.S. Patent 7,017,932

Manufactured by:  
Heel Guard, Inc.  
107 Third Street  
Wisdom, MT 59761  
[www.heelguard.com](http://www.heelguard.com)  
Phone: 1(406)689-3102