

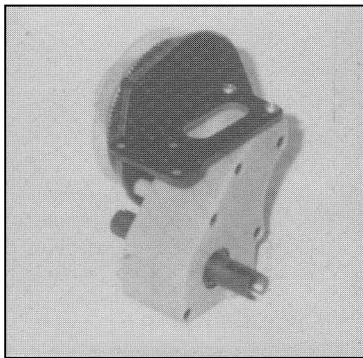


Mounting the Lethal Weapon on the RC10 and RC10T

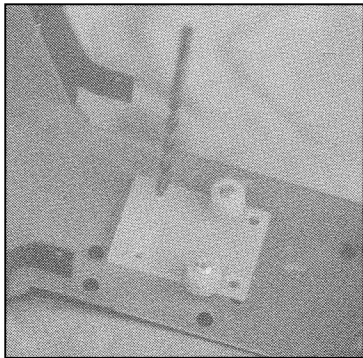

STEP 1: Use two stock 8-32 flathead screws and nuts, and place in the two front holes for mounting the older style stock tranny on chassis and through the two bug eyed holes of drill jig. Put jig on top of chassis. Measure from front side edge of drill jig to side of chassis on both sides to make sure jig is mounted straight on chassis. Then drill through the two front holes in drill jig with a 1/8" drill bit. Then countersink the two holes on the bottom side of chassis with a 82° countersink (as the stock ones are). Now put top brace #226 on top of tranny using the two 4-40 x 1/4" screws supplied with tranny.

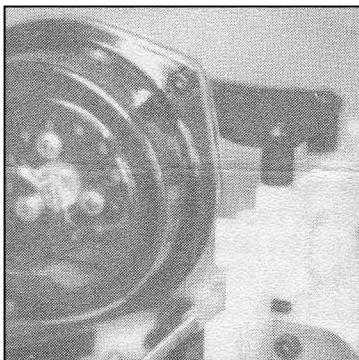

STEP 2: Now mount tranny to chassis using supplied 8-32 x 3/8" flat head screws in the two larger holes. (Do not use stock RC/10 8-32's. They're too long and will cause a malfunction in tranny operation.) Also supplied are two 4-40 x 3/8" flathead screws. They go into the two holes you drilled in chassis. Put the two black spacers supplied with tranny between top brace and rear bulkhead and use two longer 4-40 screws to secure top brace to rear bulkhead. Drill out two holes in gear cover with a hobby knife and use the 4-40 x 1/8" screws to mount the gear cover.