



Mounting the Lethal Weapon on a Tamiya Astute

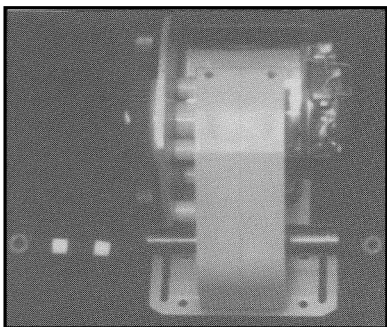

STEP 1: Remove "O" rings out of stock tranny outdrives. Place the two white spacers supplied with your Lethal Weapon 2 inside the right side outdrive (side with 3-48 nut down inside). Now place one of your stock "O" rings inside each outdrive of Lethal Weapon 2 and mount it to adapter plate using supplied screws: The two 8-32 x 3/8" flatheads in rear and the two smaller 4-40 x 3/8" flatheads in front. Install bumper on back of adapter plate using stock screws and nuts.

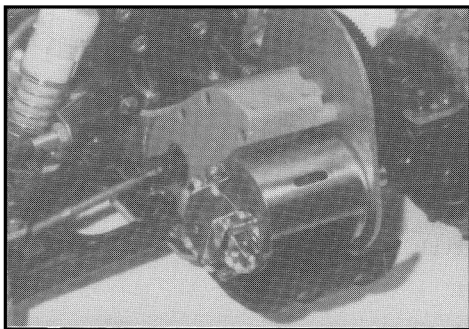

STEP 2: Place adapter plate assembly on chassis lining up holes in both. Take rear suspension mounting blocks and put raised bar into lined up slots of adapter and chassis. Then bolt suspension blocks in place with supplied screws and stock nuts. Now replace dog bones and reassemble rear suspension of car. **Note: Check for dog bone binding through full travel of rear suspension. It may be necessary to limit travel of rear shocks or to move top mounting point of shocks to eliminate dog bone binding. Any binding will greatly increase wear of all related parts and increase possibility of their breakage while greatly reducing performance and speed of car.**