



# Sources of Below Ground Water and Possible Entry Points

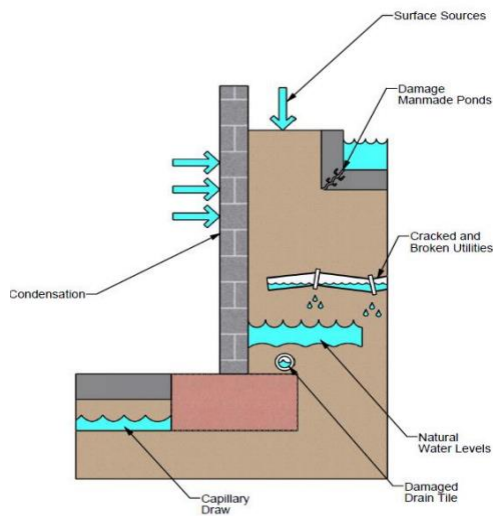


## Common Entry Points include:

- Water through wall / floor joint and wall / wall joints
- Seepage through the substrate (walls / Floors)

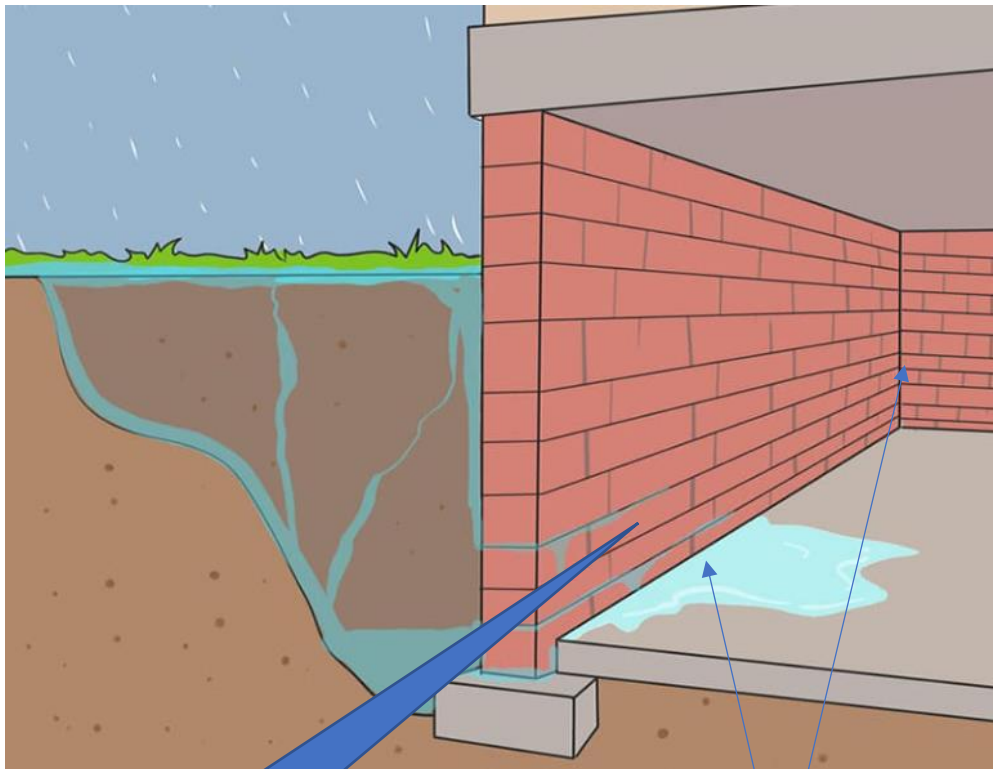

Suitable Negative Side product capable of High Hydrostatic pressure to be applied to walls

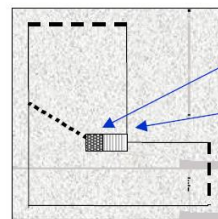

Joint Undercutting and Repair required with suitable Product.