


## K7LI Universal Key Base Instructions

Thanks for purchasing K7LI key base. You should have received, the steel base with rubber feet, the top plate and 6-32 machine screws (2 round head 1/2" brass screws with washers, 2 flat head 1/2" screws and two round head 7/8" screws with nuts). If you are missing anything, please let us know.

The plastic top needs to have the holes completed for your key. Using your straight key select the matching holes in the steel base. Mark the holes and locate the corresponding holes in the cover.

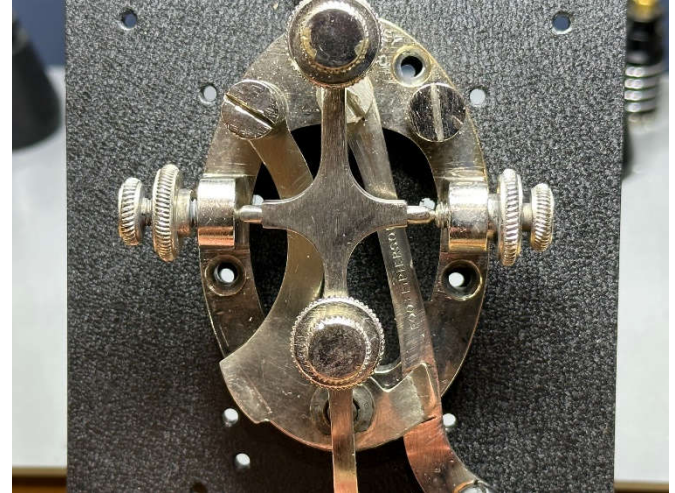

Place the cover on a piece of scrap wood and using a 5/32" drill bit, finish drilling the holes. Flip the cover over and align it with the feet screws that slightly extend through the steel plate.

Select the screws that work best for your key and thread them into the base. If your key has threaded holes, then run the screws through the bottom of the steel plate up into the key body. Most keys mount directly to the base through the cover.

The 7/8" screws with nuts are to be used with the two slightly larger non-threaded holes. The following images show some examples of mounted keys. Contact me via the Contacts page on the CWKeys.com website if you have any questions.

