








## SIMPLE TIPS FOR KIT CONSTRUCTION

- BRACE the back of the walls with 1/8"x1/8" stripwood (**RED**), according to the locations indicated in the direction. More bracing is better than less.
- Paint or stain both sides of the walls. This helps minimize warping.
- Paint the corner trim, windows, and doors before applying to the walls. This creates a clean edge between the two parts.
- Choose complimentary colors when painting the parts of the kit. This will make the finished model more believable.
- It is better to apply a couple thin coats of the paint than one thick layer. Too much paint will hide the details cut and engraved into the wood pieces.
- Use thinned washes of your main color that might be slightly lighter or darker in hue on top of the main color. This will add depth to the walls.
- Reference the "Mine Mount Minute How-to" section of our website for easy techniques to achieve great looking roof shingles, stone, and brick textures.
- Use a variety of weathering materials to create a ton of realistic colors and textures on you models. ex: weathering powders, acrylic and oil paints and washes, texture sprays, different shaped brushes and sponges.
- And you are more than welcome to reach out to us through our website with any questions or if you are looking for suggestions.
- Remember... this is your hobby time. Enjoy it, take your time, always try to improve your skills, and most importantly HAVE FUN!

## STRIPWOOD COLOR CODE

	1/8"x1/8"		3/32"x3/32"
	1/16"x1/16"		1/32"x1/16"
	1/16"x1/8"		1/32"x3/32"

## SCALE RULERS

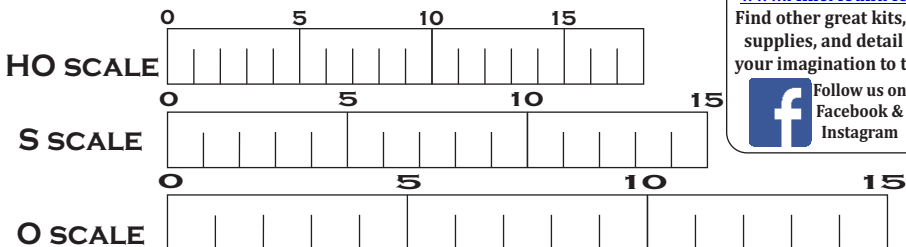

Visit us at  
[www.MineMountModels.com](http://www.MineMountModels.com)  
 Find other great kits, modeling supplies, and detail parts for your imagination to take flight.

Follow us on  
 Facebook & Instagram