

Foam Seal Installation:

Remove all the old foam and any glue residue. You might have to use a straight edge or putty knife.

Apply contact cement and follow the manufacturers instructions for applying.

Peel back protective paper on the foam and start at 1 end of trailer (see picture) and start to apply.

Make your way all around the trailer, going slowly around the corners and just fitting it inch by inch.

Once you are at the other end, cut off excess.


Let the glue completely dry before closing trailer.

The pod foam application follow the same as tub seal.

Please see pictures on the attached pages.



Inch by inch

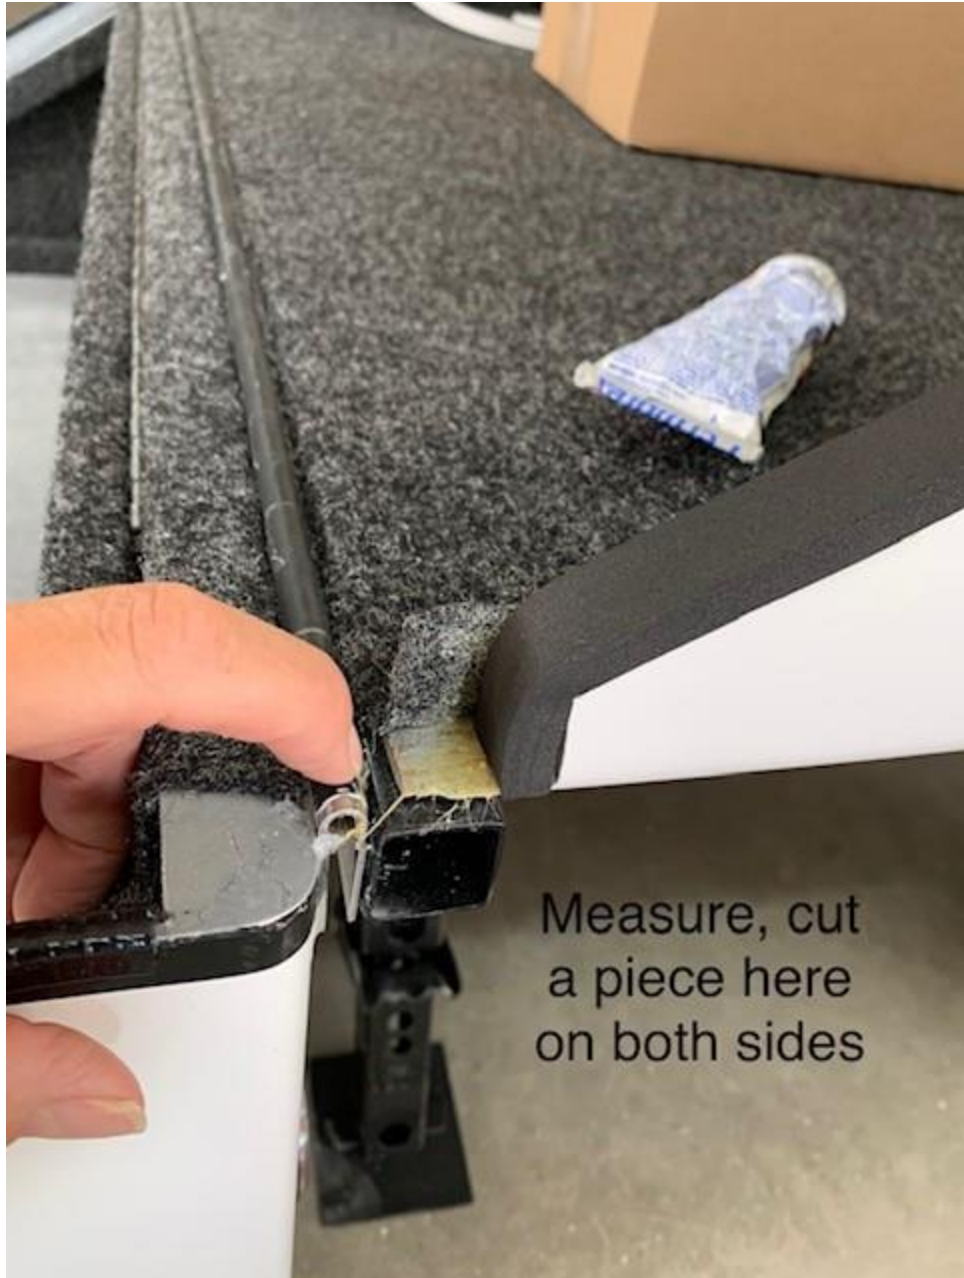

Measure, cut
a piece here
on both sides





Start