

# Bulkhead Bed Extension Installation Instructions

- 1) Tools required for this installation are: a 12mm socket driver or 12 mm socket and a 12 mm wrench (see Figure 1)
- 2) Raise the dump bed to the up position
- 3) Put the safety stop in place on the dump bed cylinder (see Figure 2)
- 4) Remove the upper two bolts on both the driver's side and the passenger's side of the dump bed (see Figure 3)
  - a. Be sure to leave the bottom bolt on each side in place
- 5) Mount the Bulkhead Bed Extension
  - a. This may require more than one person
  - b. Line up the Extension with the 2 holes on each side
    - i. Make sure the words are able to be read from behind the vehicle. This ensures the proper orientation of the Bulkhead Bed Extension
    - ii. Also make sure the bracket in the center of the Bulkhead Bed Extension aligns itself over the wall of the dump bed (see Figure 4)
  - c. Re-install all four bolts removed in Step 3 in the same orientation in which they were removed
- 6) Tighten all four bolts fully (see Figure 5)
- 7) Finished installation should look like Figure 6



Figure 1



Figure 2

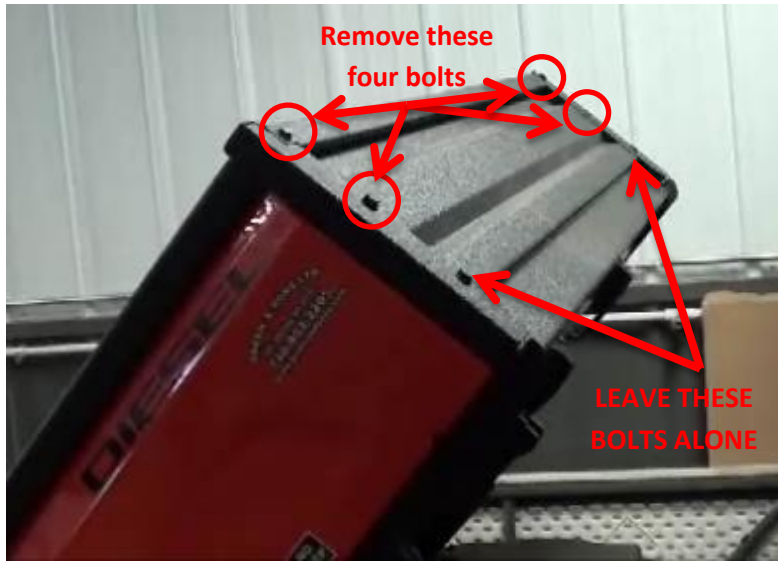


Figure 3



Figure 4



Figure 5



Figure 6