


INNER WHEEL GUARDS

Toyota Prado 150/FJ Cruiser

Installation Instructions

Set of two (2) Full heavy duty Neoprene replacement guards. Replacement for driver and passenger side, to protect the engine from mud and debris penetrating and damaging the engine.

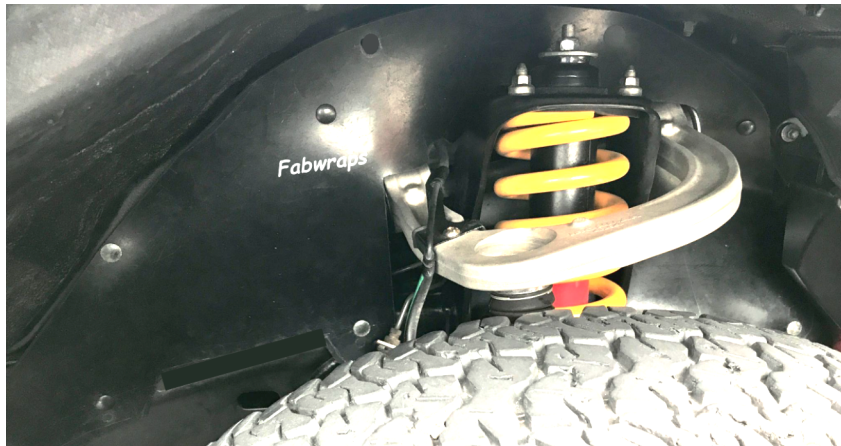

Our guards are made of a premium grade 3mm Reinforced Neoprene Rubber. Included are:

8mm x 20 Clips

Insert into the guard and then find the correlating chassis holes, before locking all clips securely into place.

7mm x 2 Clips into shock cover

Secure through the guard to the shock cover as shown below.

Maintenance

The rubber guards are anti-abrasion, tear and crack resistant and grease, fuels, oil and saltwater resistant. For long term protection from natural drying conditions and maintaining the hydrophobic qualities, an application of sealant can be applied.

Remove the existing guards with a clip remover tool or a wide flat screwdriver, if they haven't torn off already, don't worry about saving the old clips as we've provided the new clips. Using the diagram below select the correct guard for the driver/passenger side position, select the appropriate guard in the correct position and use the correct clips provided.

The guards are not designed to fit tightly as the guard is attached to the body on top and the chassis at the bottom, this allows for vehicle movement.


The following diagram indicates the position for each clip type:

8mm x 20 and 7mm x 2 ☆

Driver Side



Passenger Side

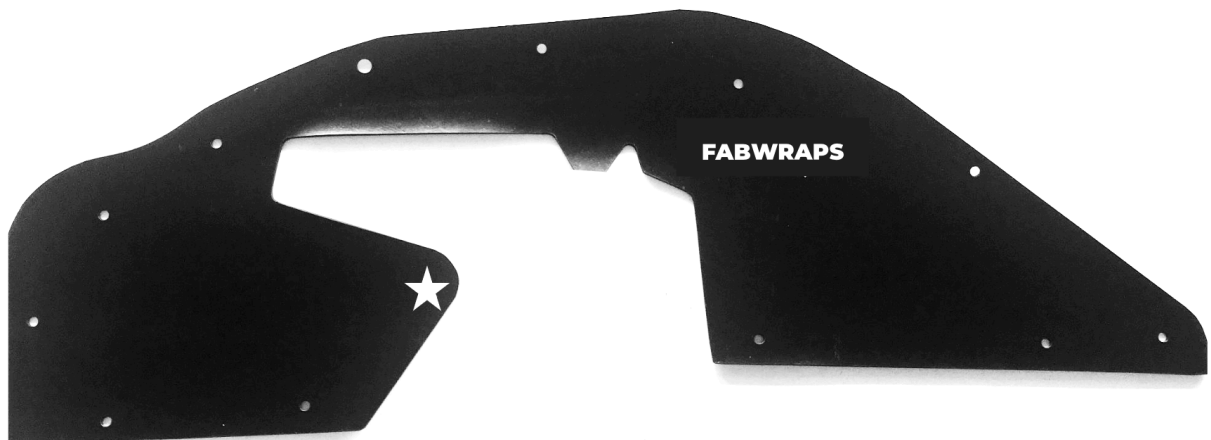

Clip Tip: Pull the 8mm clip apart, place the back piece into the guard, fit guard to the car and then push the clip top into place to secure.

A quality design, proudly made in Melbourne.