

Tacky Tape Placement for PB-U and PB-R Panels

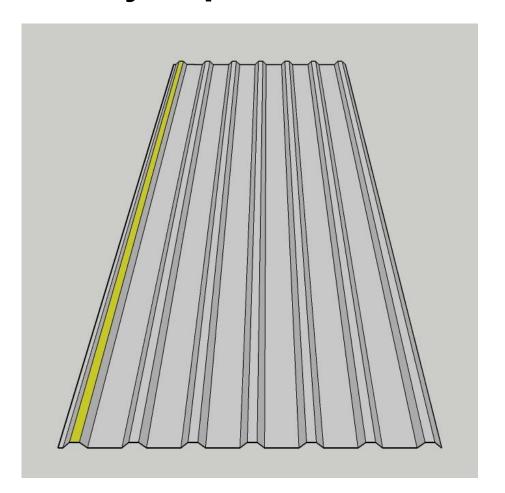

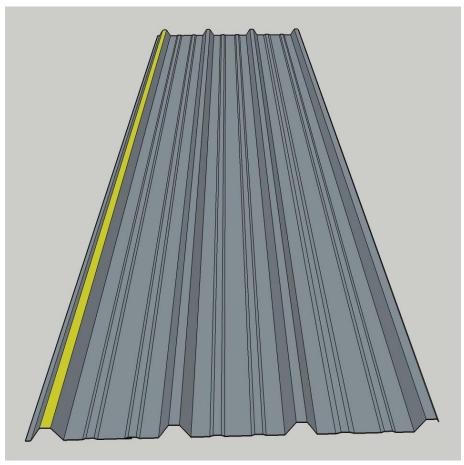

Place Tacky Tape on the rib with the purlin-bearing leg before overlapping the next panel.

