

Bronze Plaque Mounting Methods

WALL MOUNTING METHODS

BOSS & STUD

Drilled and tapped bosses on back of plate. Threaded studs for concealed mounting to brick, stone or cement. Flat backed plates do not have bosses.

HOW-TO-DO-IT




1. Screw studs into threaded bosses in back of plaque.
2. Using studs to locate points on mounting surface, drill holes in mounting surface slightly larger than threaded stud.
3. If wall is solid such as cement or brick;
 1. Discard washers and nuts. Fill holes using 'Liquid Nails', 'Epoxy' or other permanent mastic.
 2. Push studs into the holes and anchor plaque until mastic hardens.
4. If you can get to the back of the wall;
 1. Insert studs through holes and have it held in place.
 2. From the rear, place washers on studs and secure with nut

MACHINE SCREWS & EXPANSION SLEEVES

Expansion sleeves for mounting to brick, stone or cement with optional rosette covers (see below).

HOW-TO-DO-IT

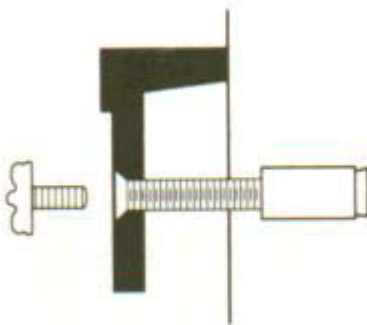

1. Using holes in plaque to locate points on mounting surface, drill holes in mounting surface to accommodate expansion sleeve.
2. Insert expansion sleeves into all holes.
3. Insert screws through plaque and fasten into expansion sleeves.
4. Screw on decorative rosette


RECOGNITION RESOURCES OF THE SOUTHWEST

6607 Connie Lane • Suite 200 • Colleyville, Texas 76034

Tel: 817.329.3202 • Fax: 817.488.8829 • E-mail: mike@recognition-sw.com

MACHINE SCREWS & TOGGLE BOLTS

Toggle bolts for hollow wall installation with optional rosette covers (see below).

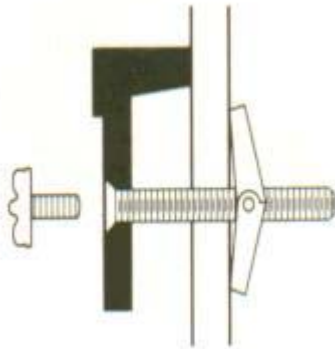

HOW-TO-DO-IT

1. Using holes in plaque to locate points on mounting surface, drill holes in mounting surface to accommodate toggle bolts.
2. Insert machine screws through plaque and screw toggle bolts onto machine screws.
3. Tighten machine screws.
4. Screw on decorative rosette.

ROSETTES & WOOD SCREWS

Wood screws for mounting to wood surfaces. Can also use optional rosette covers (see below).



HOW-TO-DO-IT

1. Using holes in plaque to locate points on mounting surface, drill pilot holes in mounting surface if desired.
2. Insert screws through plaque and tighten.
3. Screw on decorative rosette

RECOGNITION RESOURCES OF THE SOUTHWEST

6607 Connie Lane • Suite 200 • Colleyville, Texas 76034

Tel: 817.329.3202 • Fax: 817.488.8829 • E-mail: mike@recognition-sw.com