

Composite Designs, Inc.
O Scale
Barricade - Quantity 6

Thank you for purchasing this laser cut kit.

Be sure to follow these simple tips to help make the assembly successful. If you are going to paint the tables we recommend priming or sealing the wood prior to painting. A standard wood glue can be used to assemble this kit. We have found a tacky type glue works well and is a good combination of quick stickiness and flexibility to adjust pieces.

Step 1

Prime all pieces if required and let dry completely.



Step 2

Cut Small Tabs to remove the side uprights and cross bar from wooden sprue.

Step 3

Slide the side upright so it sits flush with the end of the cross bar.



Step 4

Apply a small drop of glue on the cross bar directly next to the upright on the inner side. Slide the upright over onto the dab of glue and wipe away any extra glue.



Step 5

Repeat step 4 on the other end of the cross bar and set aside to dry fully.

Step 6

Paint and/or weather as desired.




Be sure to visit our website for more kits and tips.

www.Compositedesignsinc.com

Kit Contents

**Side
Uprights**

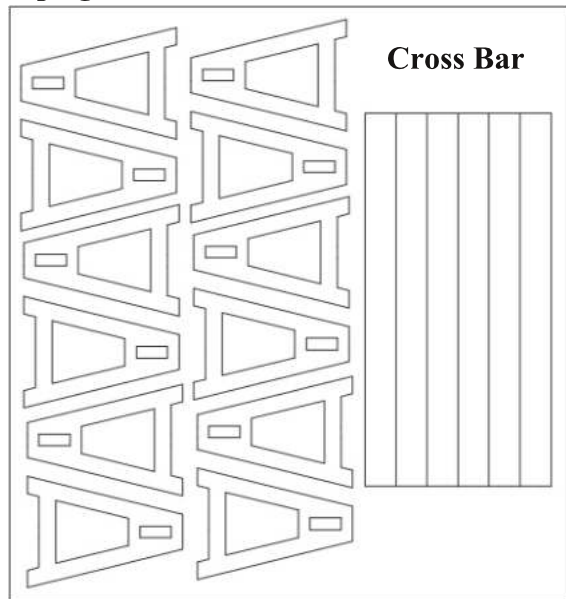

Qty 1