
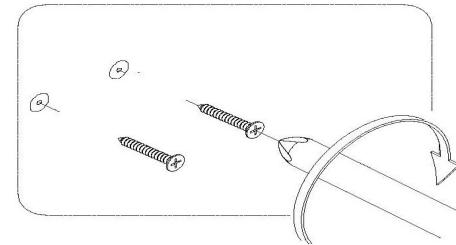
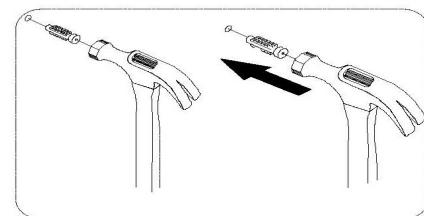
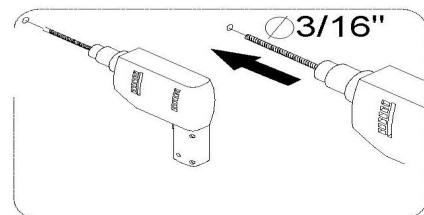


Wayland Jackson Designs

HANGING THE CLOCK / SUSPENDRE L'HORLOGE / COLGANDO EL RELOJ

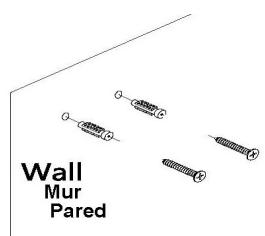

ATTACHING THE WALL ANCHOR

- Drill a 3/16" hole.
- Secure the wall anchor in place.
- Attach the screw to the wall anchor with a screwdriver, leaving enough of the screw exposed to securely hang the clock.

FIXATION DE L'ANCRE DE MUR

- Percer un trou de 3/16".
- Fixer l'ancrage mural en place.
- Fixez la vis à la prise murale avec un tournevis en laissant suffisamment de la vis pour suspendre l'horloge.

FIJACIÓN DEL ANCLA DE PARED

- Taladre un agujero de 3/16".
- Fijar el ancla de pared en su lugar.
- Asegure el tornillo al enchufe de la pared con un destornillador dejando suficientes tornillos para colgar el reloj.

