


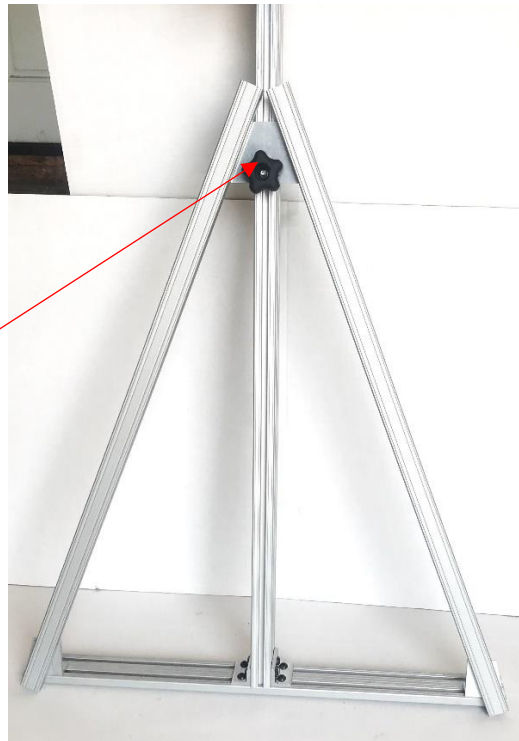


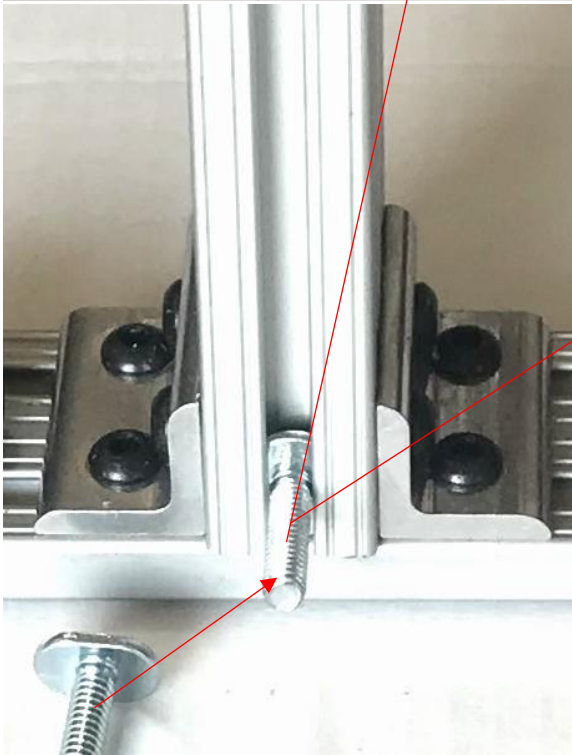

Your struts will arrive assembled. you may need to loosen the feet to install the $\frac{1}{4}$ inch by 1.5 bolt. We are doing the rear first,

Tilt your machine up on its nose to make getting this bolt slid into the guide.

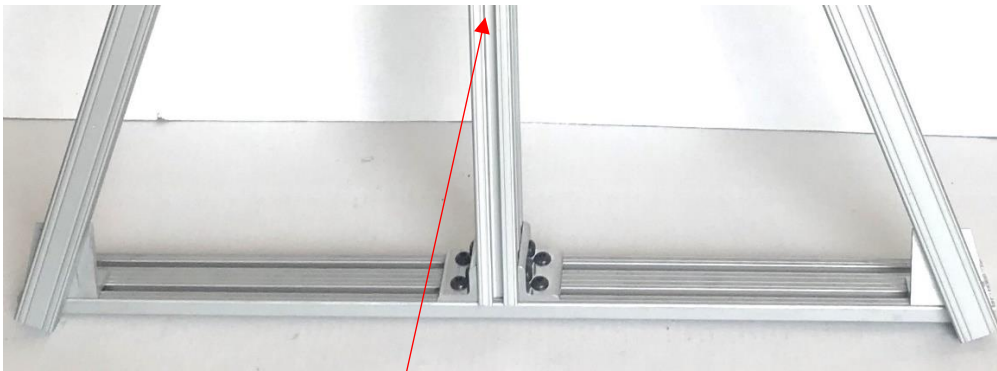

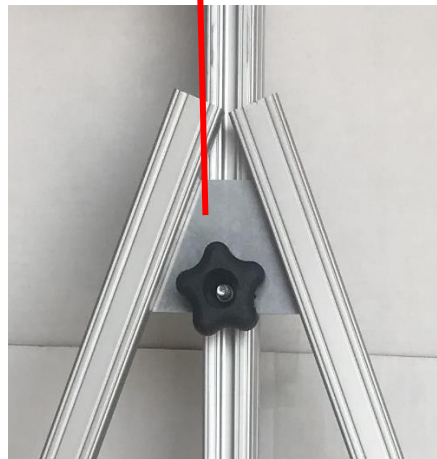



Do the same thing for the front strut.



If you have the paper tuner pay attention that it is set up in this manner



Note the position of the brackets.

They are on the outside.





After it is assembled, you may have to level the machine, if so, loosen the feet screws on the leg and the strut knob



Move the feet so they are flat and tighten back in place.

If you have problems figuring this out how to install please contact me

This is a new product and will be working on a better set of directions.

Vern coop 815 325 9128