



P90 ADDITIONAL INSTRUCTIONS

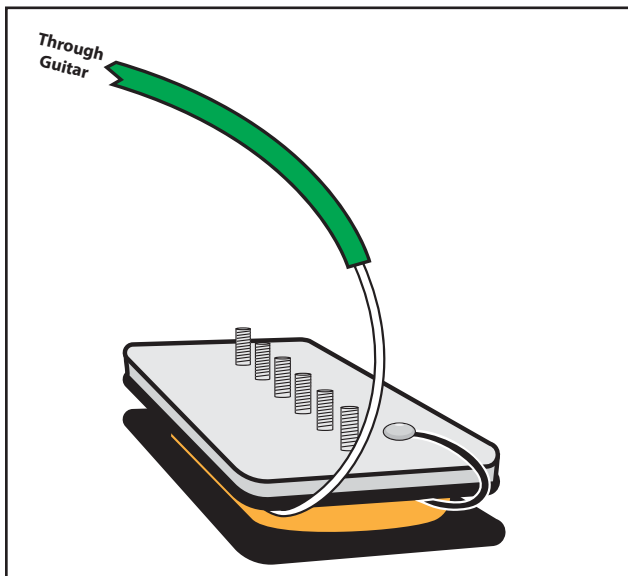

On back of p90 pickup de-solder ground wire (usually black) that is soldered to metal plate

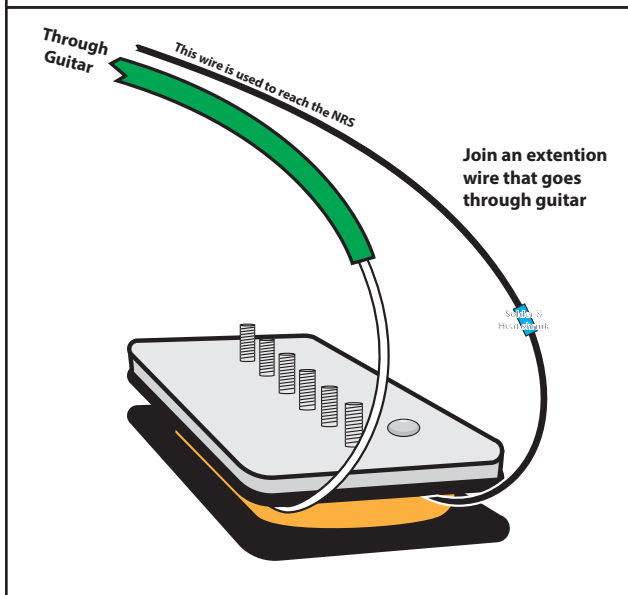

Add a length of wire (not supplied) to ground wire to pass through the guitar alongside the other pickup wire

**This will then be where you connect to one of the NRS wires, the rest of the install is the same as a Strat
~see included instructions~**