
## NRS Reverse Wound Middle Wiring Diagram

Note: If you are still getting hum on middle pickup swap the blue and white wires (Blue to pot, White to pickup)

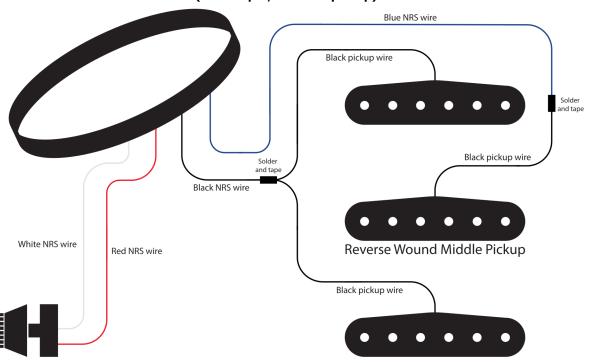

Solder wires to back of volume pot