
# **TUBE REMOVAL TOOLS**

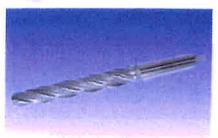






#### Features:

- Used to 'thin' the walls of heavy gauge tubes as a step in their removal from tube sheet.
- Suffix model number with tube gauge when ordering. Example for 3/4"O.D. 16G, model number will be WR-750-16.
- Wall reducers available for mm tube sizes also. Please enquire.
- Wall reducers are suited for tube sheets up to 5" thick. Longer reaches are available.

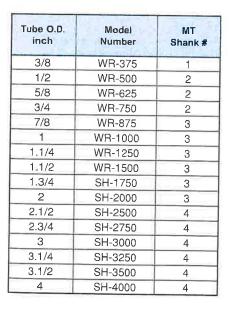



## TUBE DRIFT/KNOCKOUT TOOL

#### Features:

- Used with pneumatic chipping hammer to knock out tubes / tube stubs from tube sheet.
- Available in 01 and 06 shanks as standard. 15 (Jumbo) shank available on request.
- Suffix model number with tube gauge and shank when ordering. Example for 3/4" O.D. 16G, 06 shank, model number will be KT-750-16-06.
- Tube Drifts are available for mm tube sizes also. Please enquire.
- Standard reach is 6". Longer reaches are available.

Tube O.D. inch	Model Number	
3/8	KT-375	
1/2	KT-500	
5/8	KT-625	
3/4	KT-750	
7/8	KT-875	
111	KT-1000	
1.1/4	KT-1250	
1.1/2	KT-1500	
1.3/4	KT-1750	
2	KT-2000	
2.1/2	KT-2500	
2.3/4	KT-2750	
3	KT-3000	
3.1/4	KT-3250	
3.1/2	KT-3500	
4	KT-4000	



#### **COLLAPSING TOOL**

#### Features:

- Used to collapse tube and drive out collapsed tube from tube sheet with a chipping hammer.
- Recommended for use on 16G and thinner tubes.
- Available on 01 and 06 shanks as standard.
- Suffix model number with shank number when ordering. Example for 3/4" O.D. 16G, 06 shank, model number will be CT-750-06.
- Collapsing tools are available for mm tube sizes and larger tube sizes.
  Please enquire,

Tube O.D. inch	Model Number	
3/8	CT-375	
1/2	CT-500	
5/8	CT-625	
3/4	CT-750	
7/8	CT-875	
1	CT-1000	
1.1/4	CT-1250	
1.1/2	CT-1500	
1.3/4	CT-1750	
2	CT-2000	
2.1/2	CT-2500	



Chipping Hammer with safety retainer for use with Tube Drifts / Collapsing Tools.

### MODEL CH-1 - SPECIFICATION

Blows/min	Bore	Stroke	Weight
1600	1.1/8" (28.5mm)	3.1/4" (82.5mm)	16lbs (7.0kg)