

ASSEMBLY INSTRUCTION



ITEM	PAGE	ITEM	PAGE
W0930-W2136	1	B09-B21	16
W0942-W2142	2	B24-B36	17
W2430-W3636	3	DB12-DB36 VDB12-VDB18	18
W2442-W3642	4	SB30-SB42 V2421-V3621	19
W2412-W3621 W301224-W362124	5	BMC24	20
W2424-W3624 W302424-W362424	6	BLS33/BLS36	21
WBC2730-WBC2736	7	EZR33/EZR36	22
WBC2742	8	DCB36	23
WDC2430-WDC2436	9	DCB42	24
WDC2442	10	BPP09	25
WWR3015	11	VSD3021(L/R)	26
WMC24	12	VSD3621(L/R)--VSD4221(L/R)	27
B15FH-B21FH	13	VSD4821/VSD6021	28
B24FH-B36FH	14	VCD6021	29
BBC36-42FH BBC45-48FH	15	VDB1524-2/VDB1824-2	30

ASSEMBLY INSTRUCTION


ITEM	PAGE	ITEM	PAGE
V3024H-V3624H	31		
DKD2421-DKD3621	32		
PC1884-PC1896	33		
PC2484-PC3696	34		
OC2484-OC3084	35		
OC2490-OC3090	36		
OC2496-OC3096	37		

W0930-W2136


ASSEMBLY INSTRUCTION

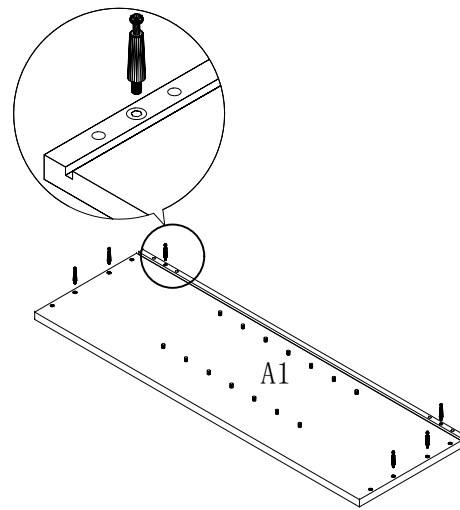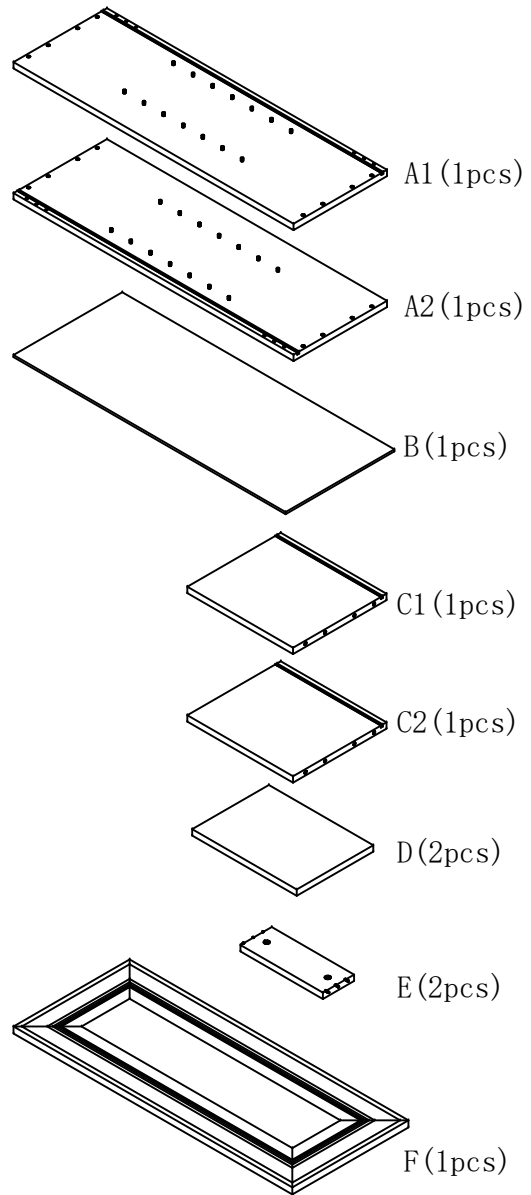


step 1

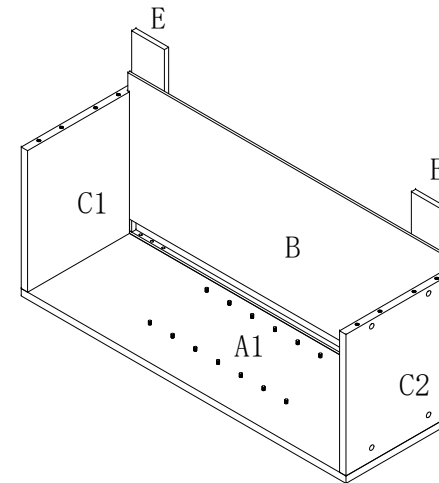


step 2

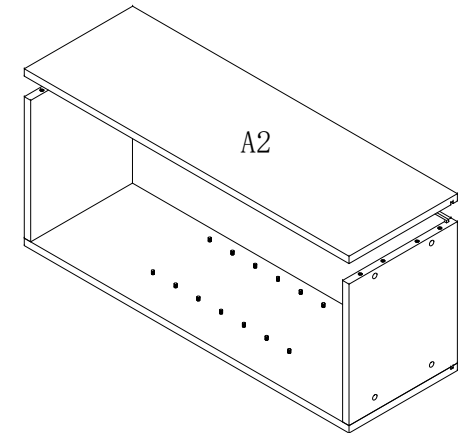


step 3

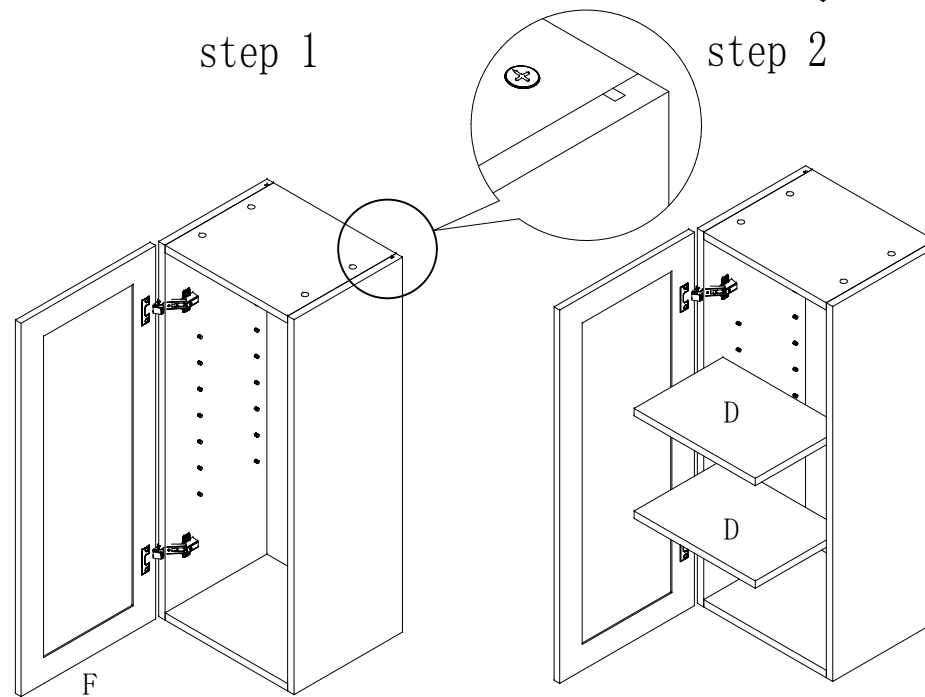

step 4


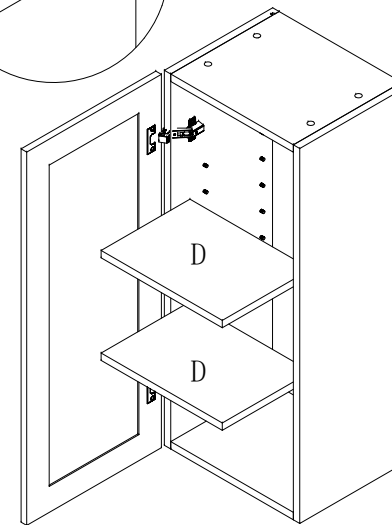


step 5

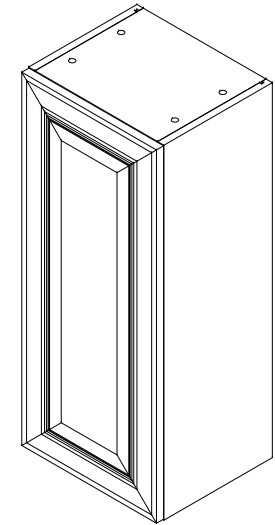


W0942-W2142


ASSEMBLY INSTRUCTION

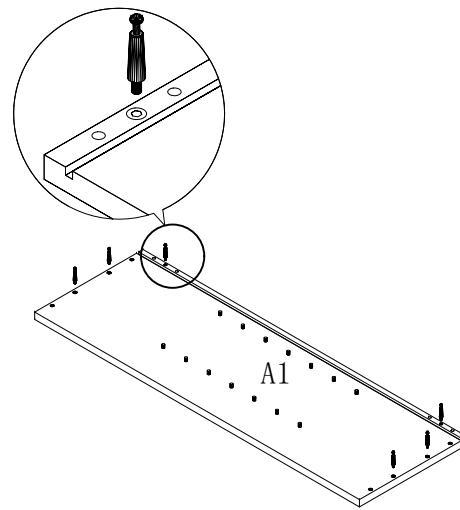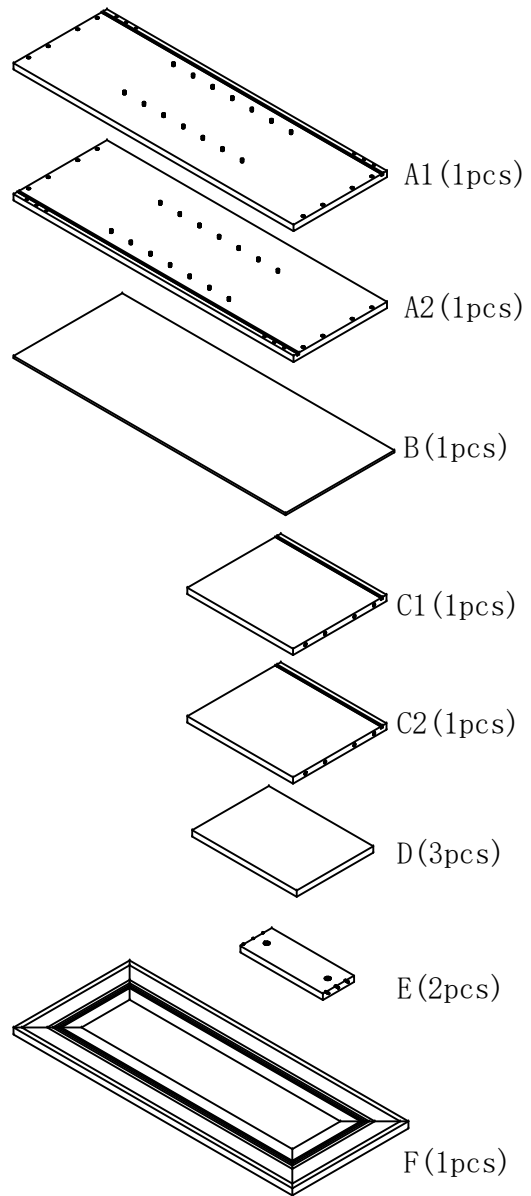


step 1

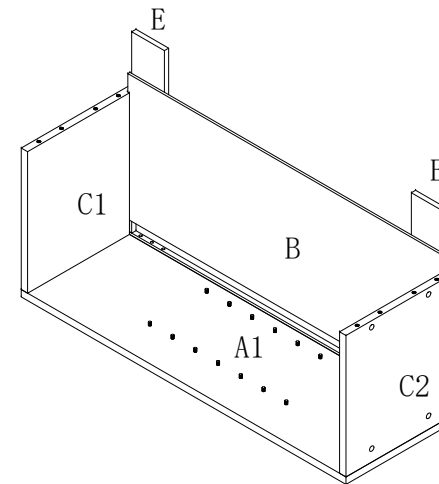


step 2

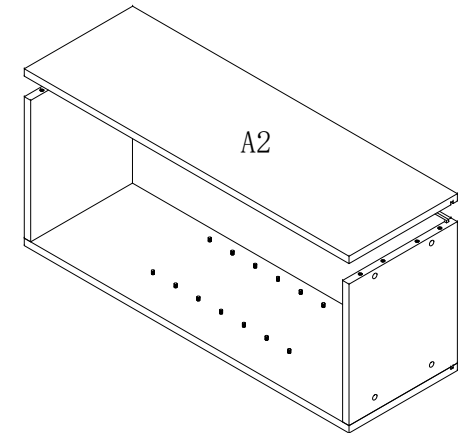


step 3

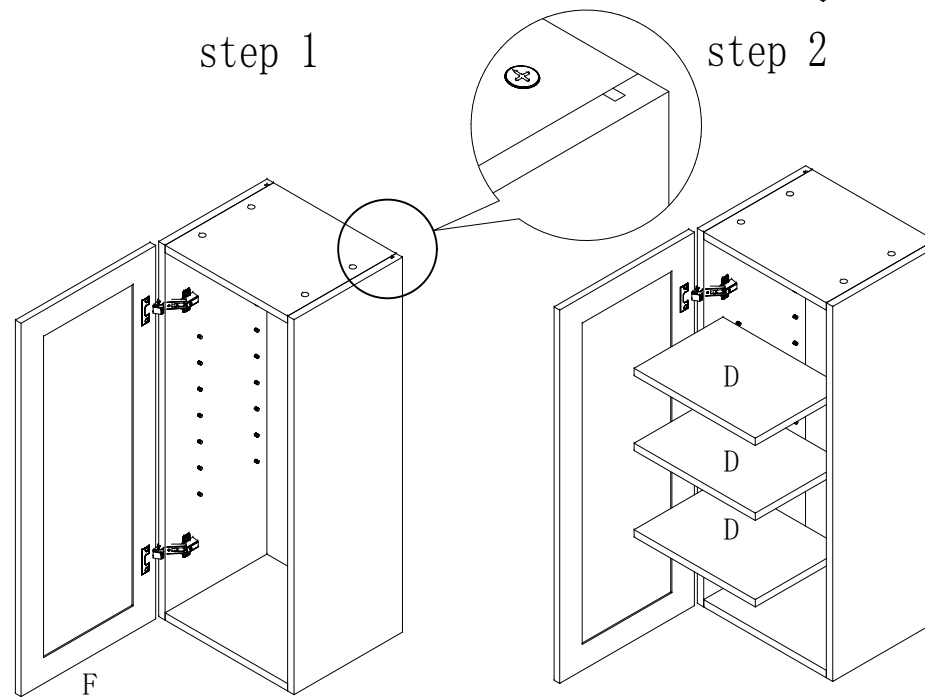

step 4


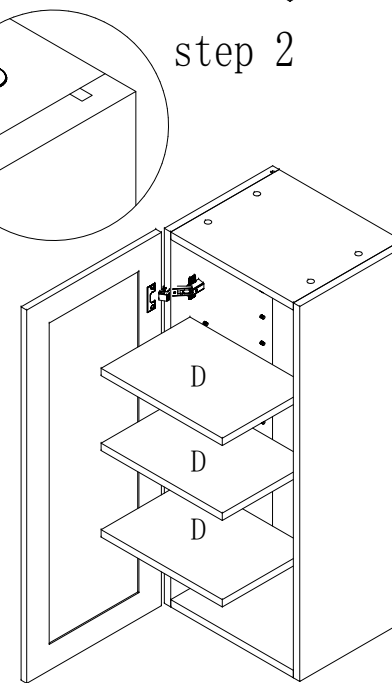


step 5

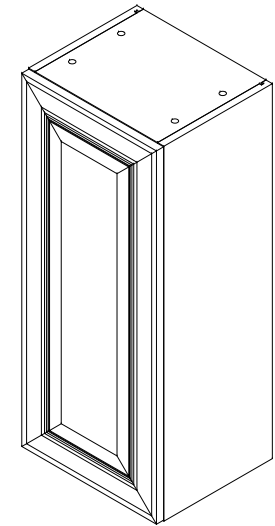


W2430-W3636


ASSEMBLY INSTRUCTION

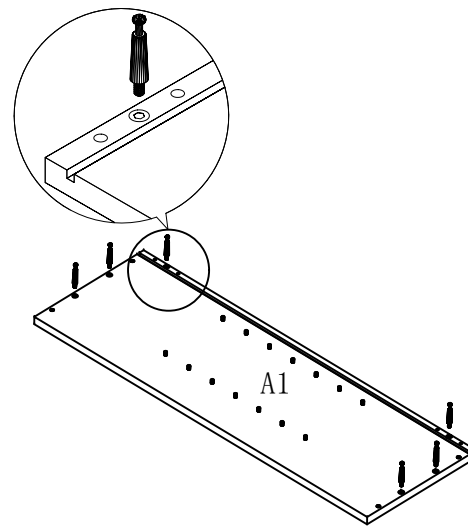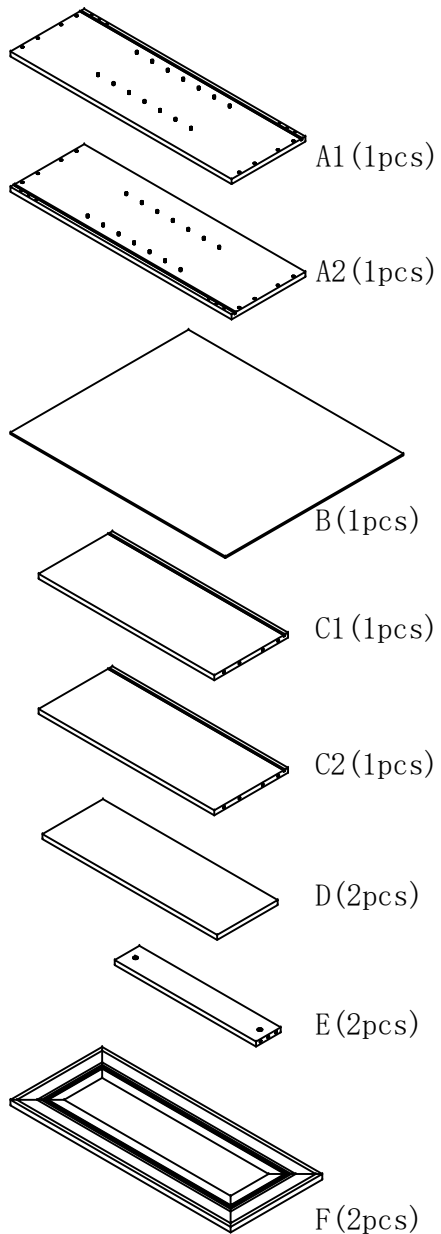


step 1

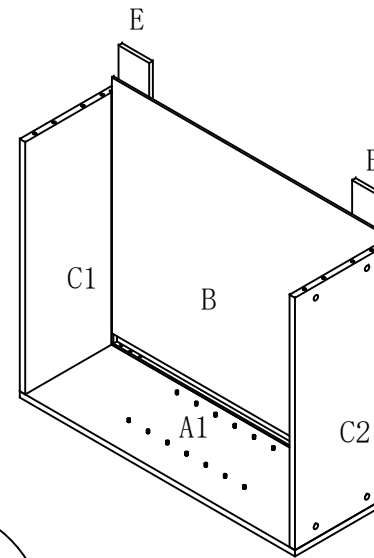


step 2

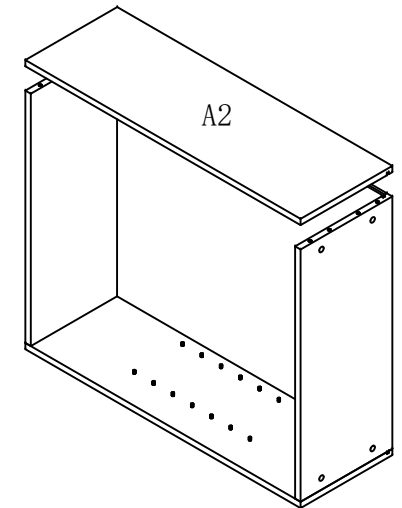


step 3

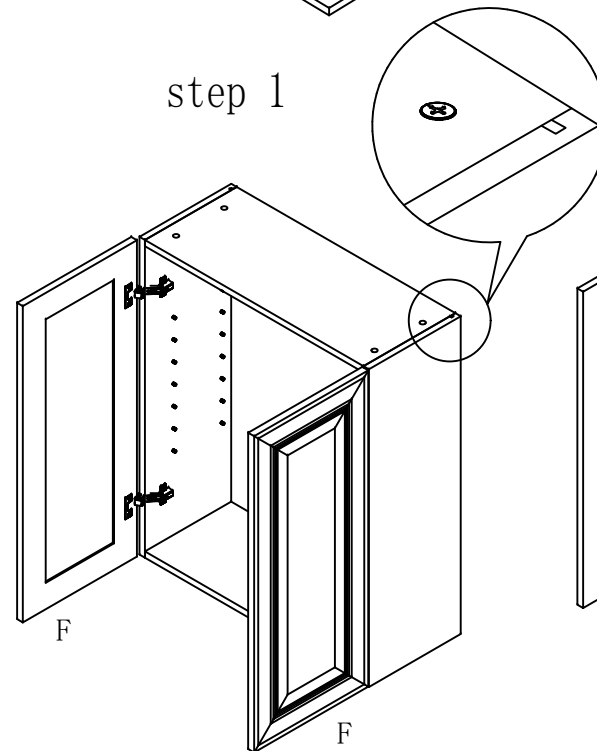

step 4







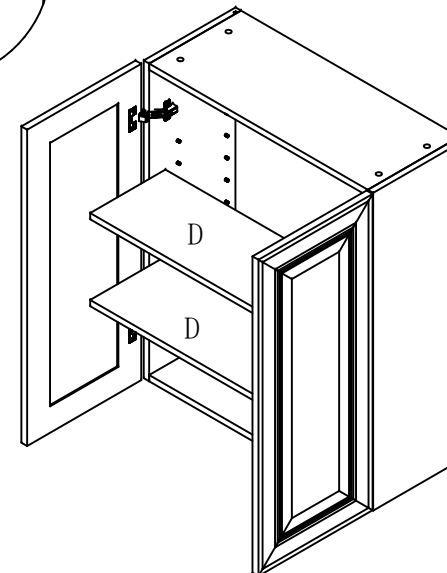


step 5

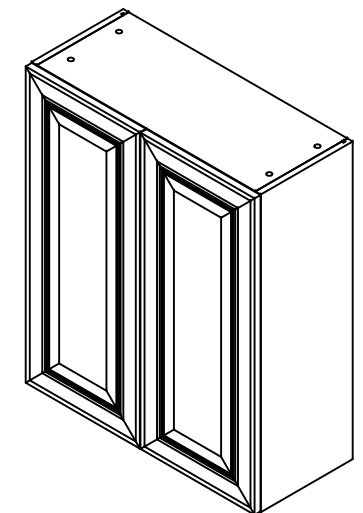



W2442-W3642

ASSEMBLY INSTRUCTION

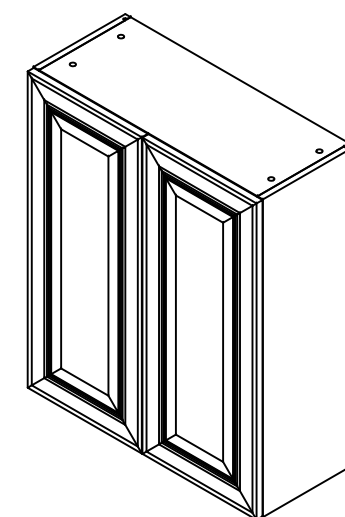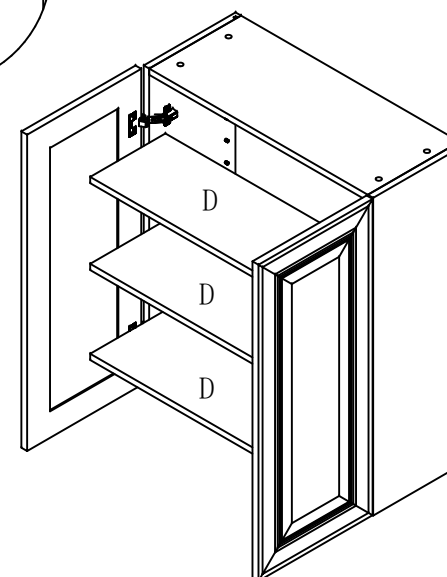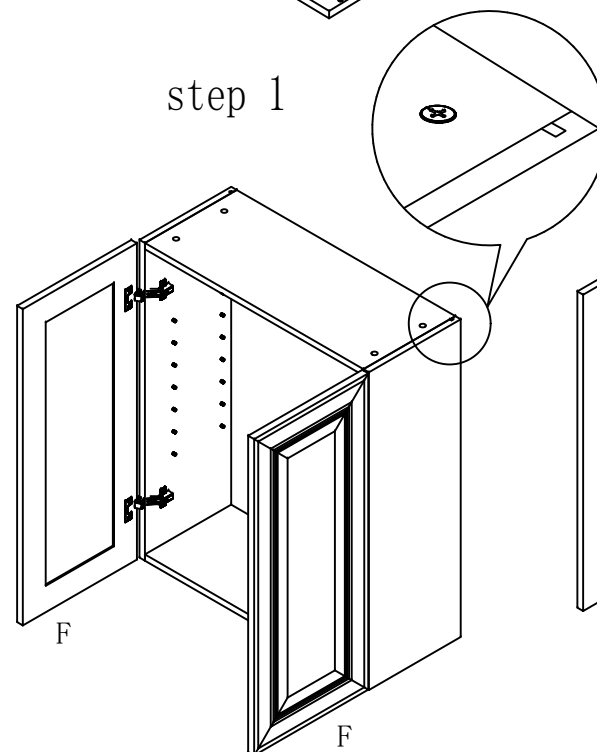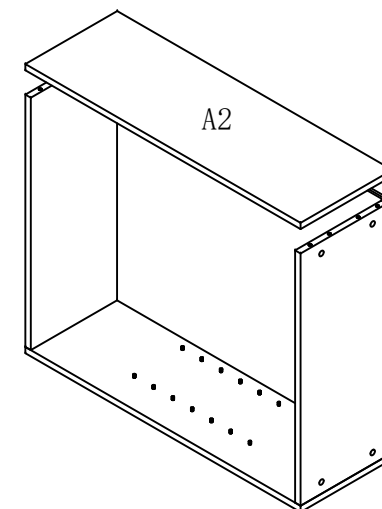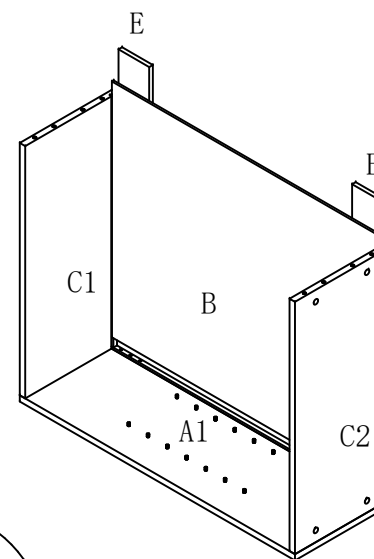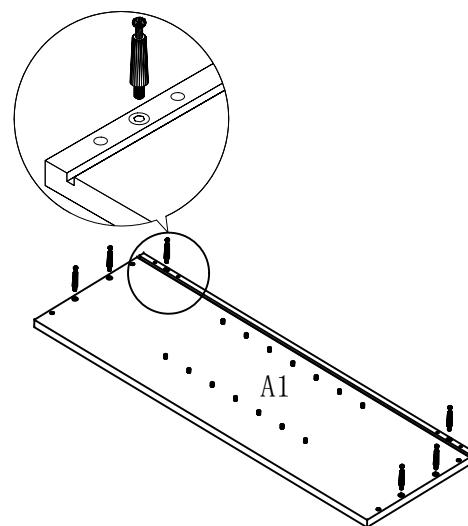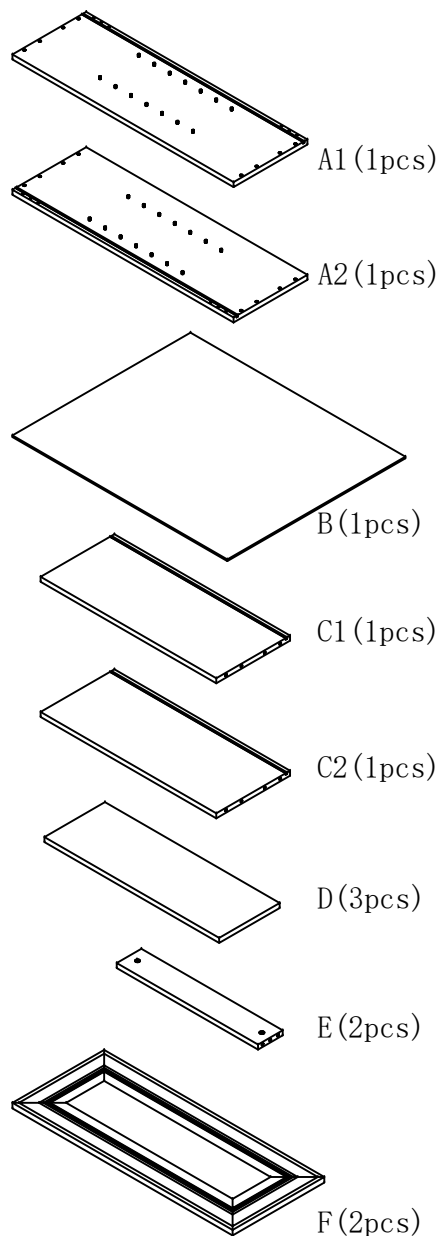


W2412-W3621
W301224-W362124


ASSEMBLY INSTRUCTION

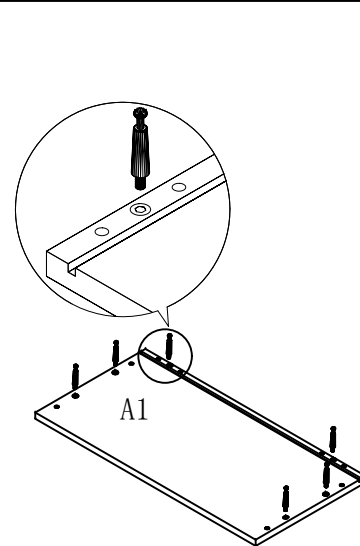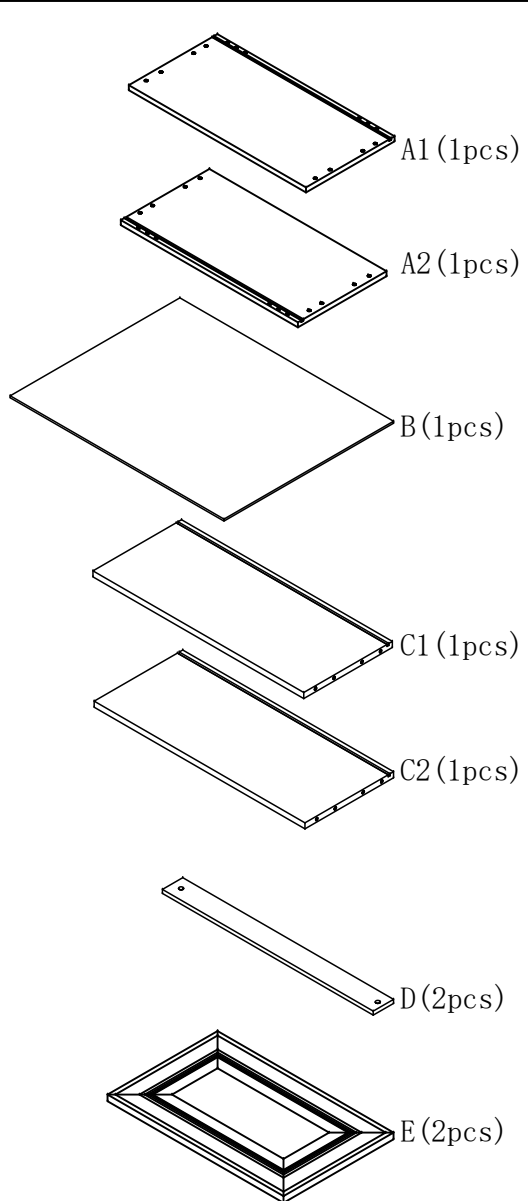


step 1

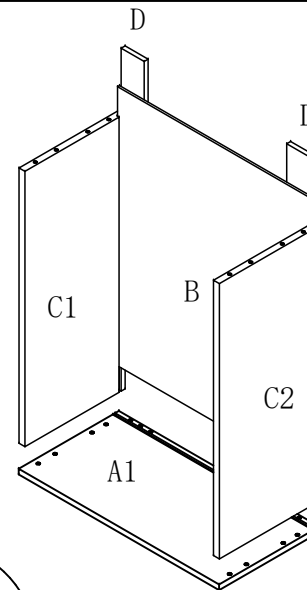


step 2

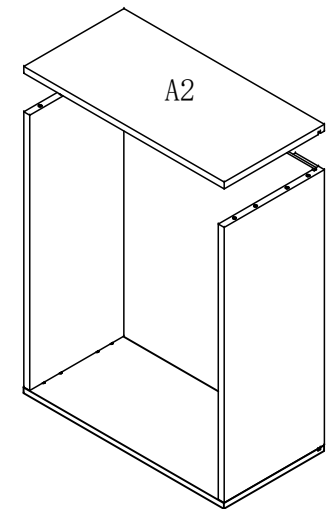

step 3


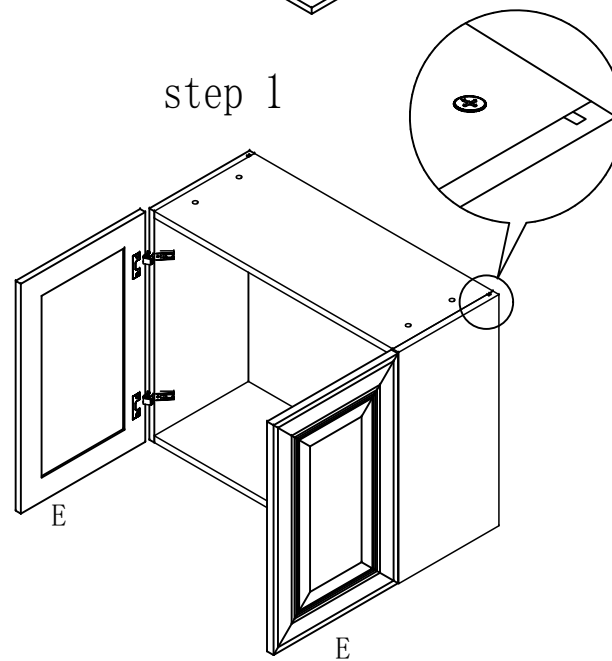


step 4

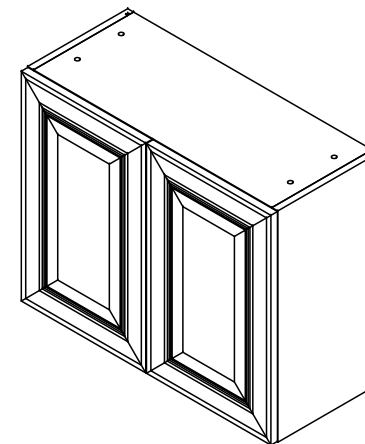


W2424-W3624
W302424-W362424


ASSEMBLY INSTRUCTION

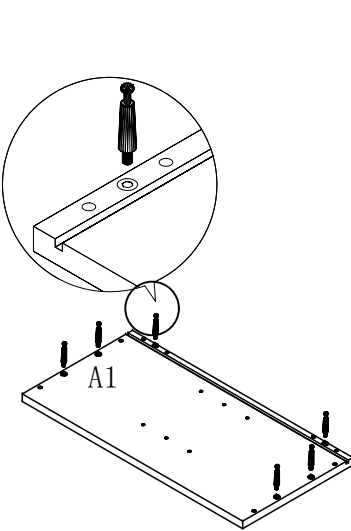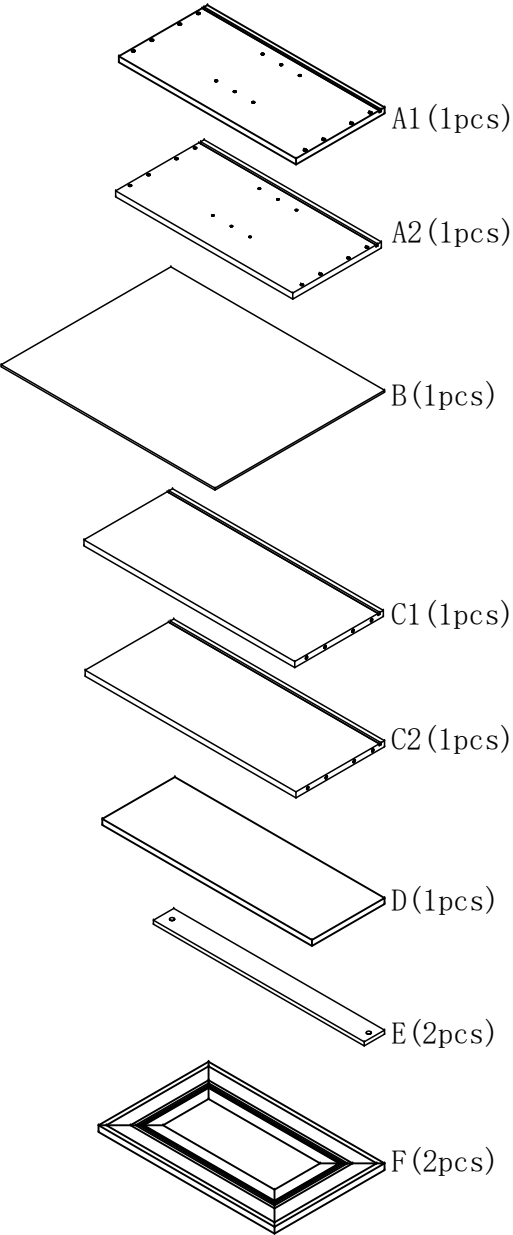


step 1

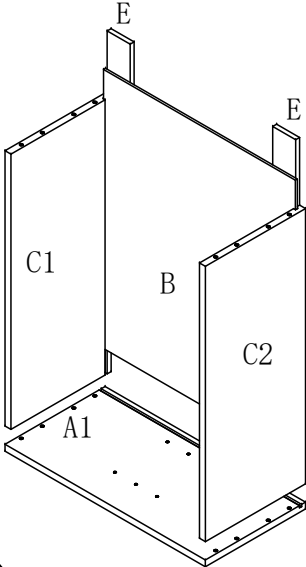


step 2

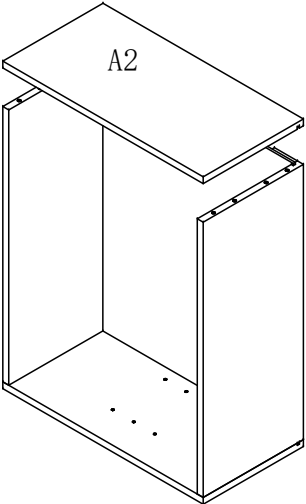


step 3

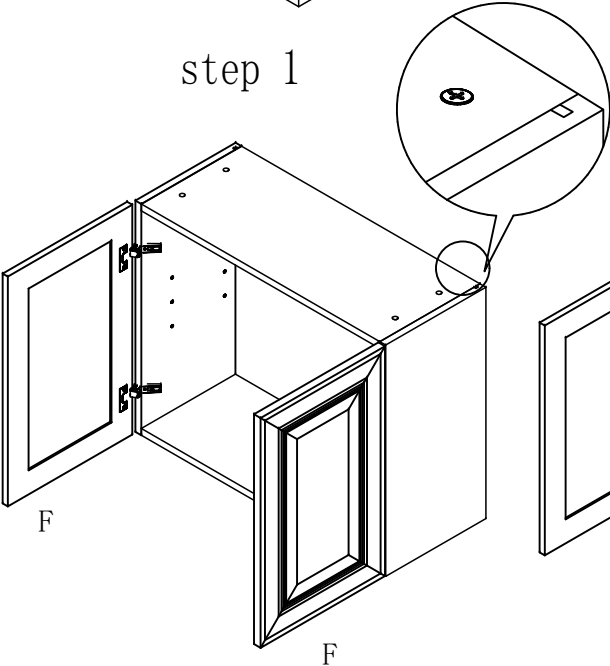

step 4


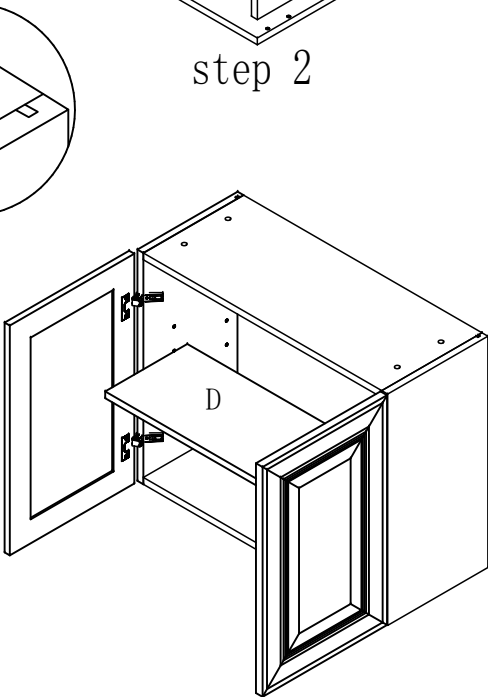


step 5

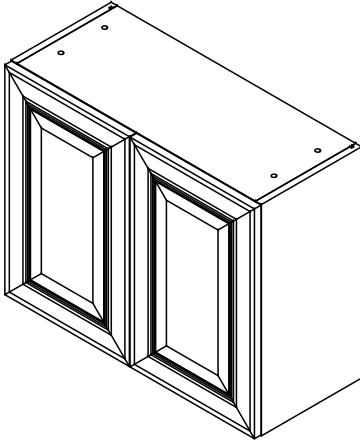


WBC2730-WBC2736


ASSEMBLY INSTRUCTION

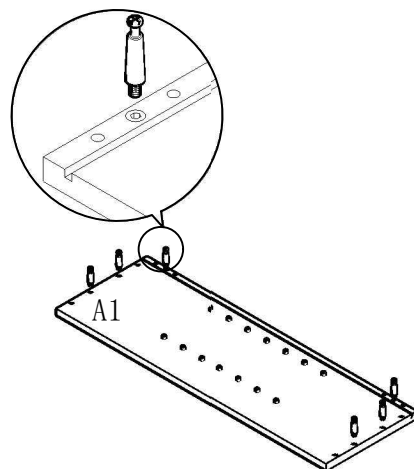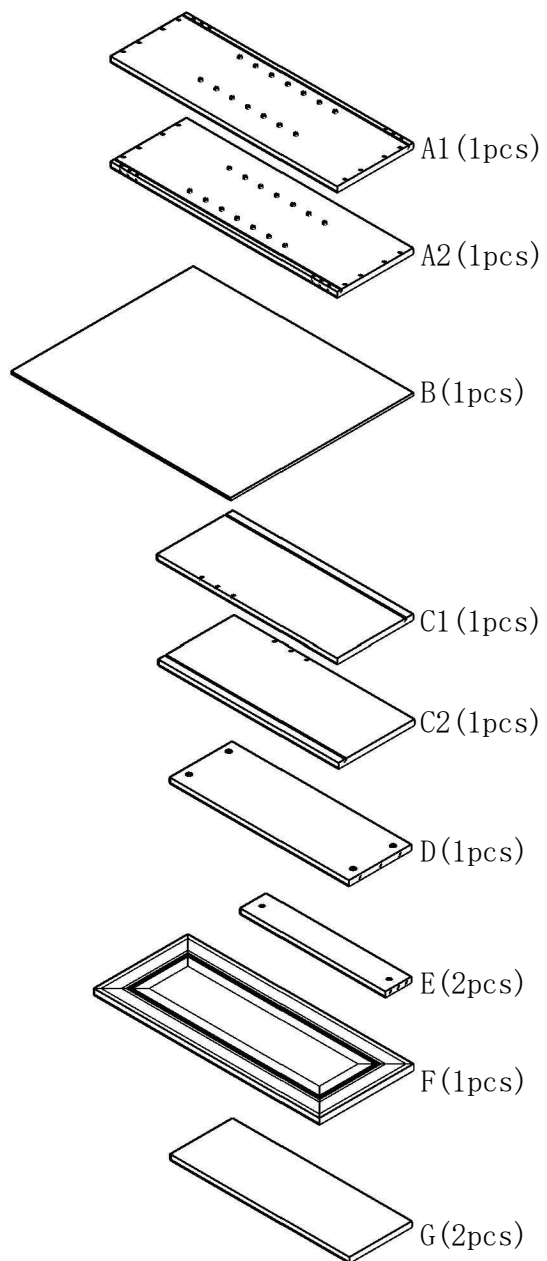


step 1

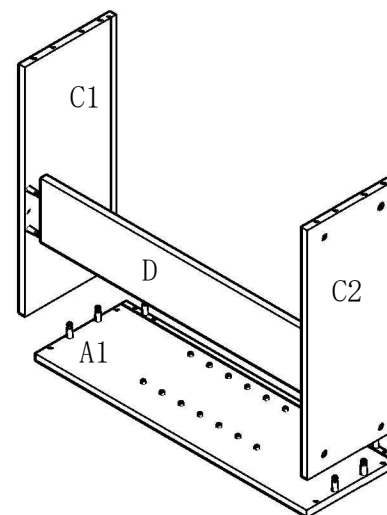


step 2

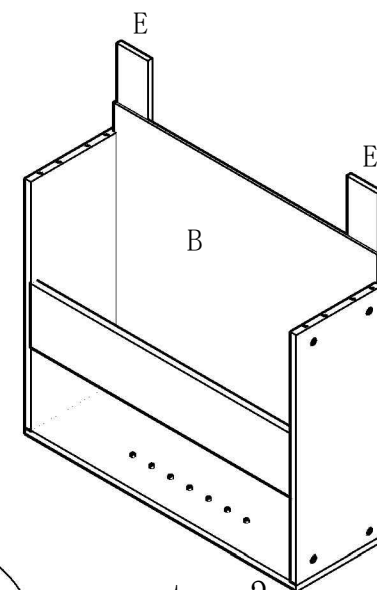

step 3

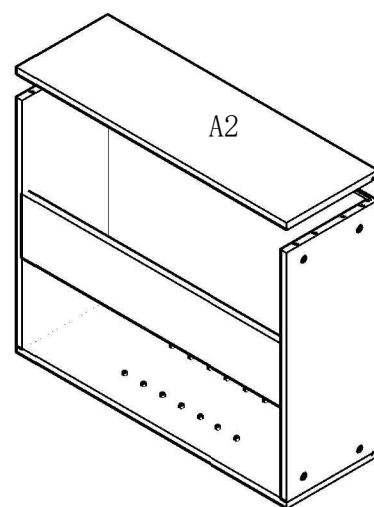



step 4

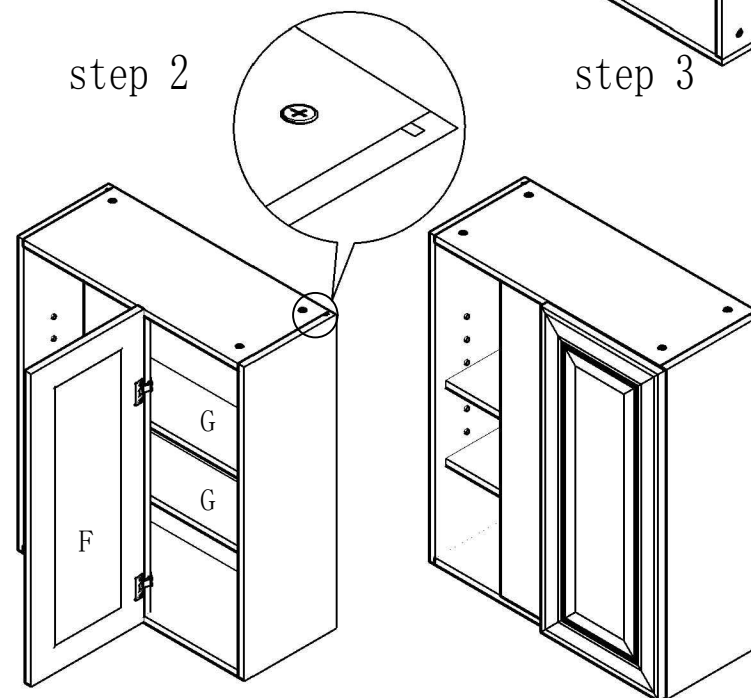


step 5

WBC2742


ASSEMBLY INSTRUCTION

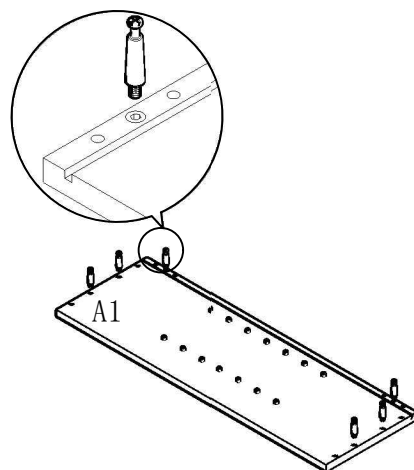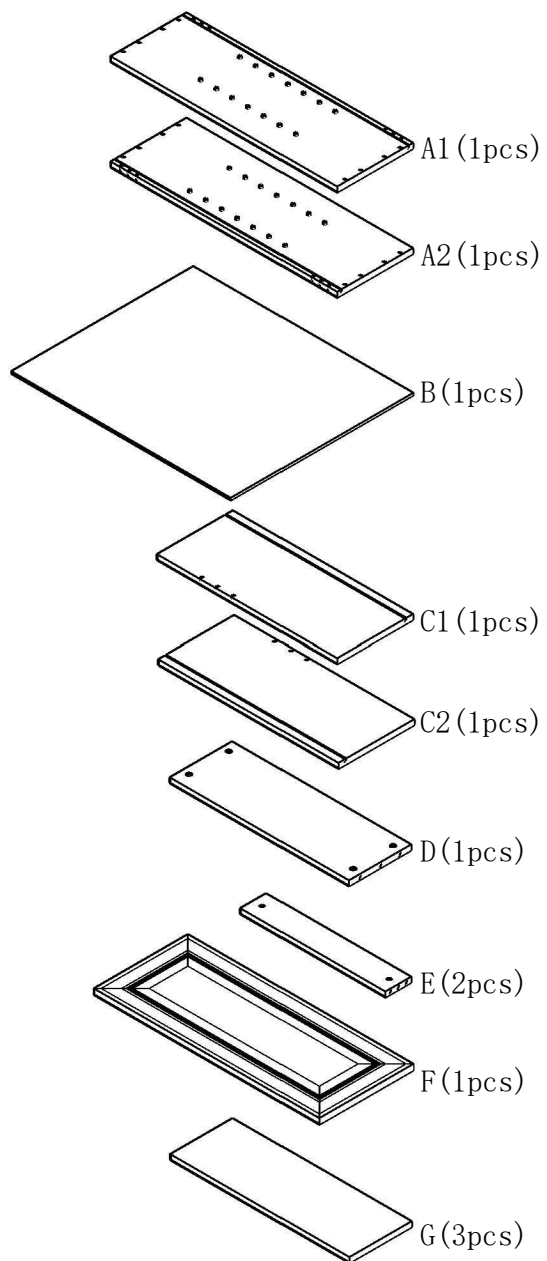


step 1

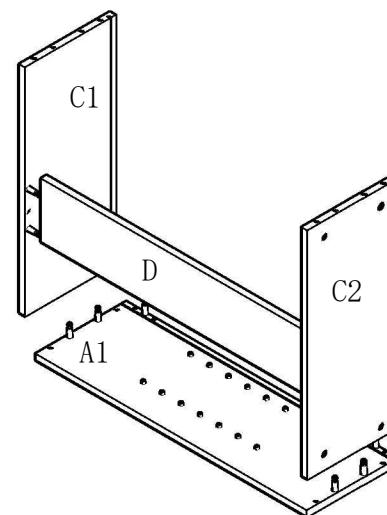


step 2

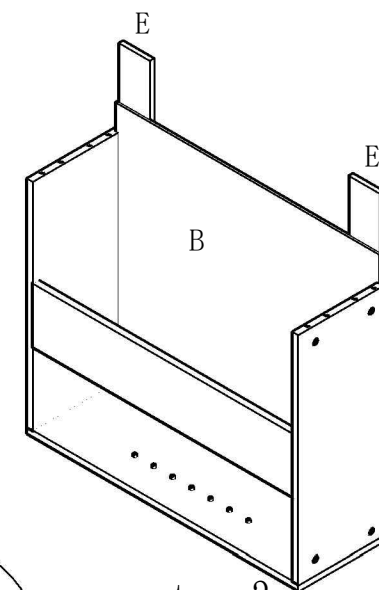










step 3

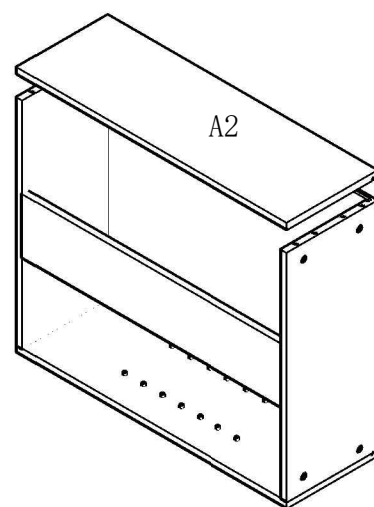

step 4










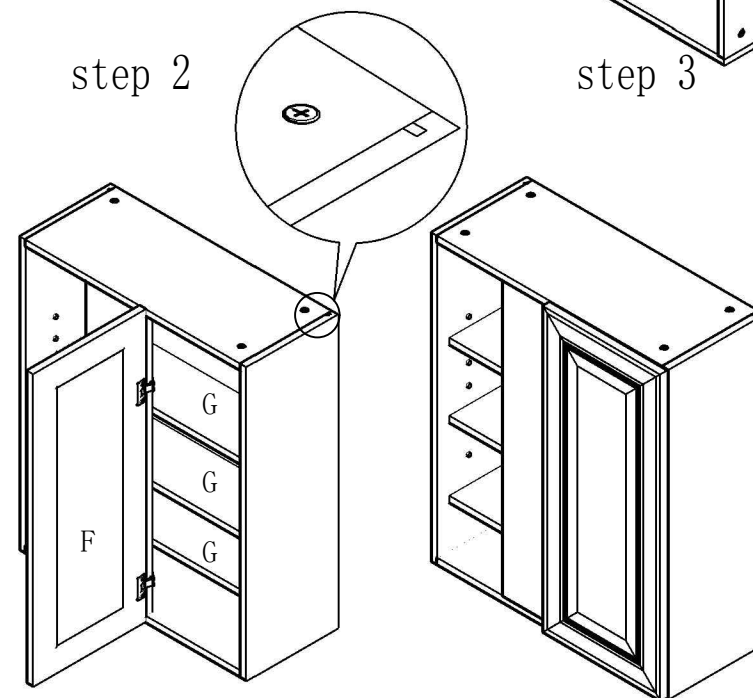


step 5

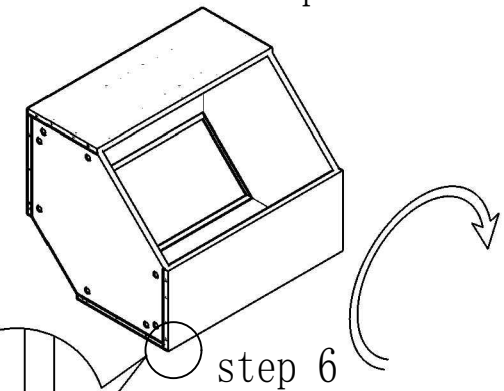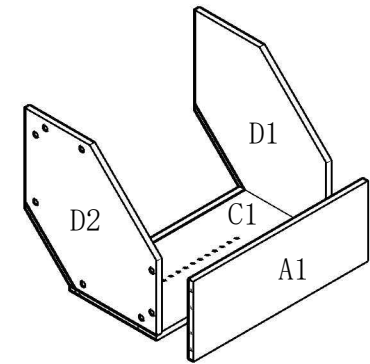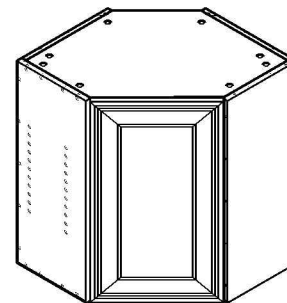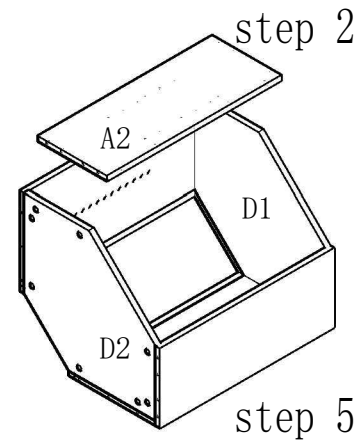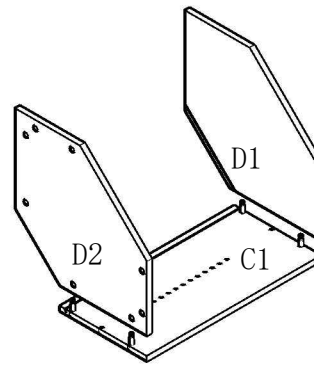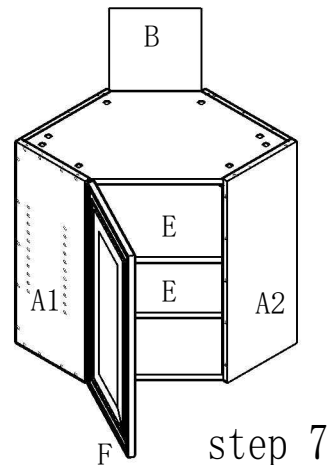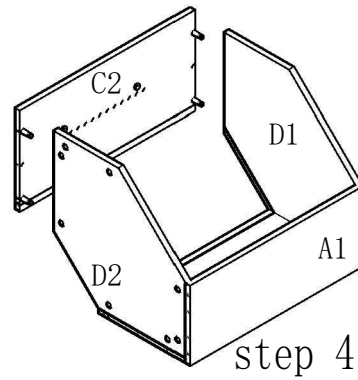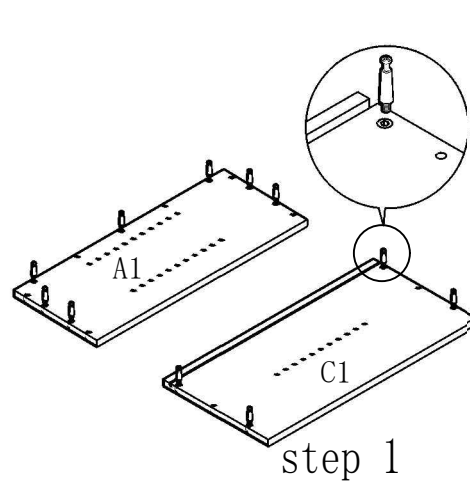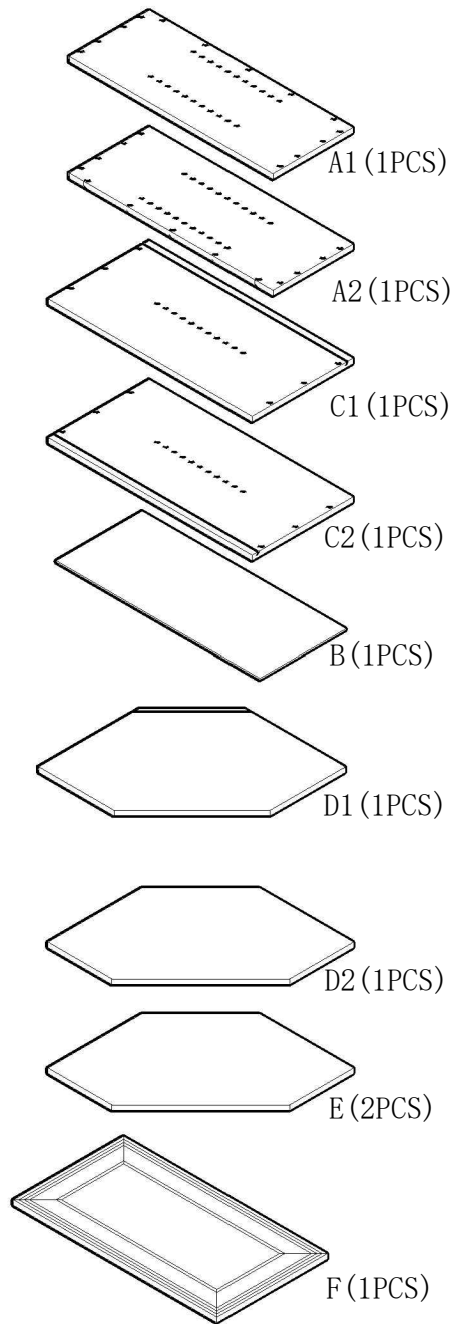



WDC2442

ASSEMBLY INSTRUCTION

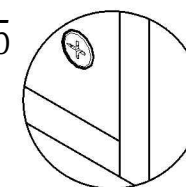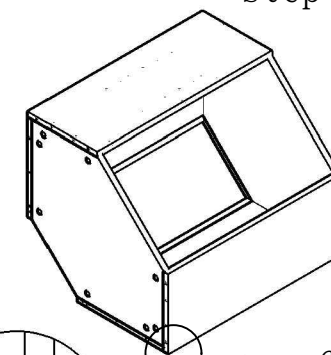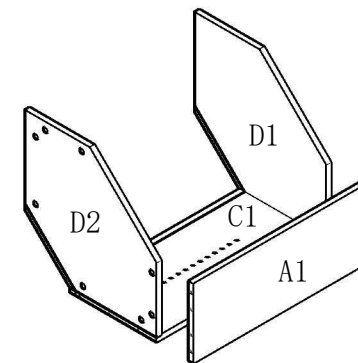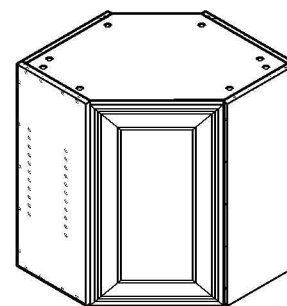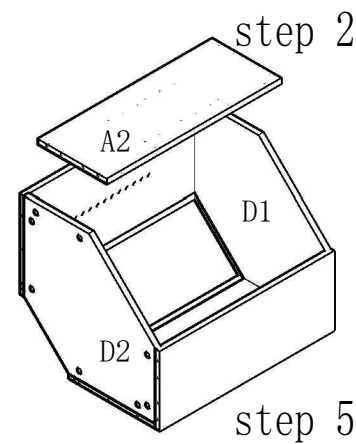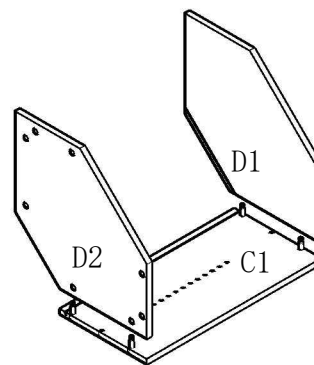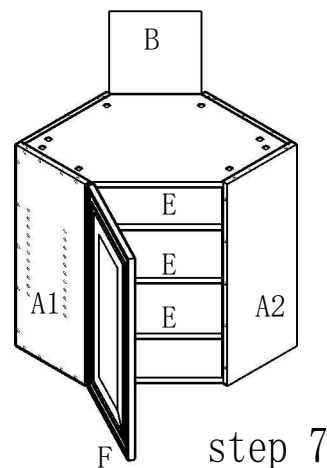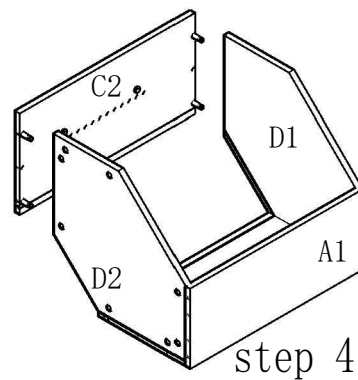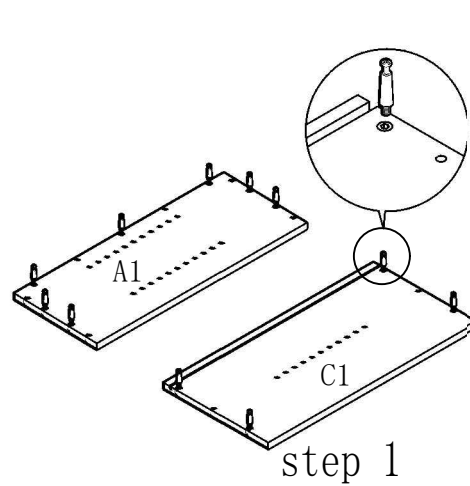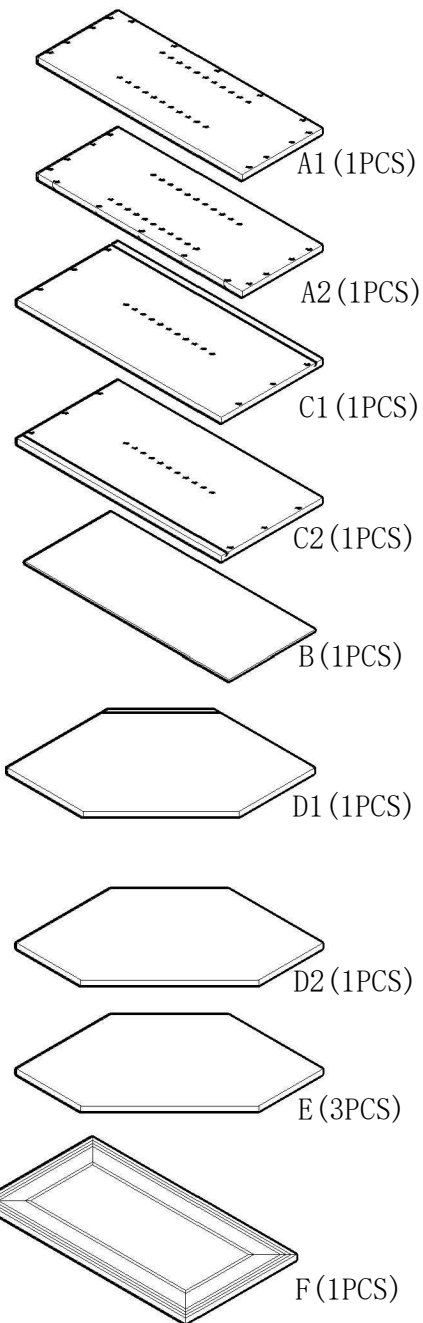


WWR3015

ASSEMBLY INSTRUCTION

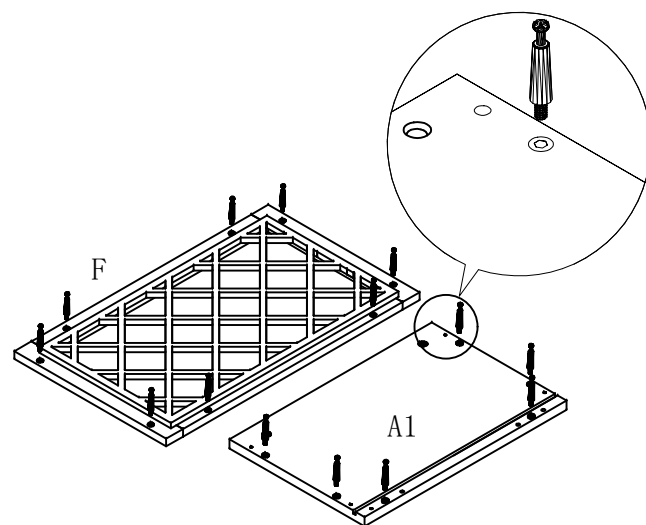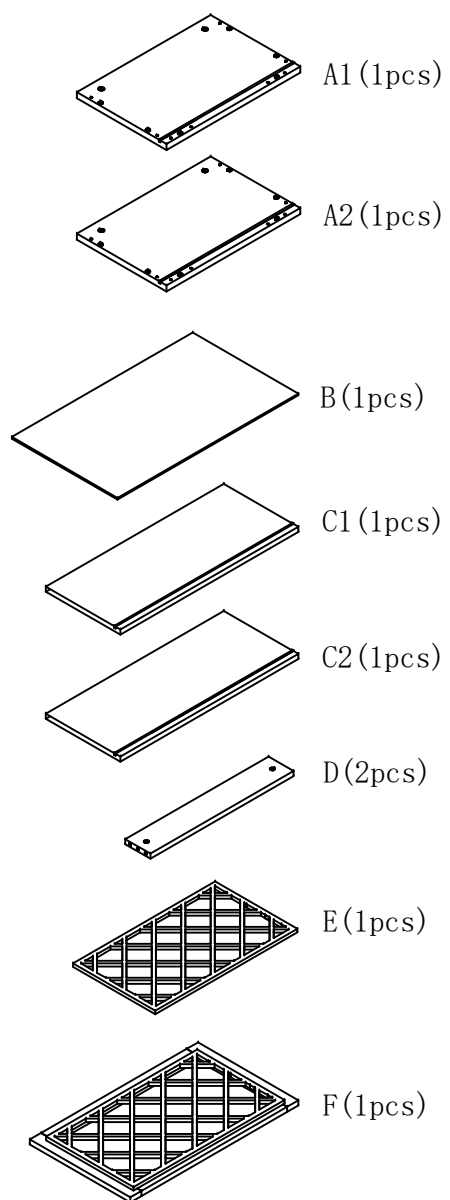


step 1

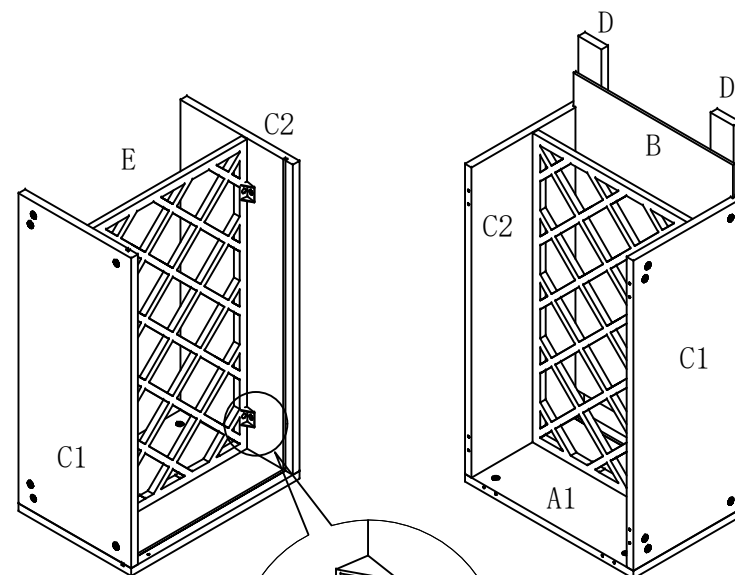


step 2



step 3

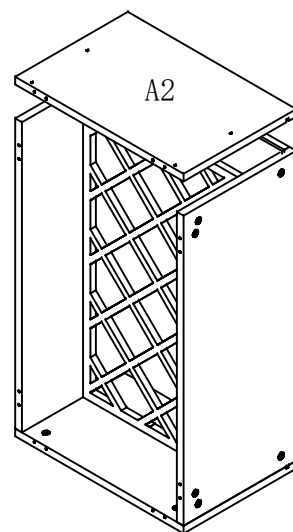

step 4

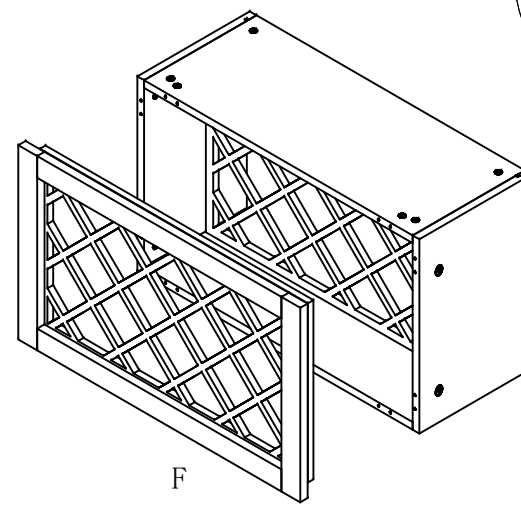






step 5

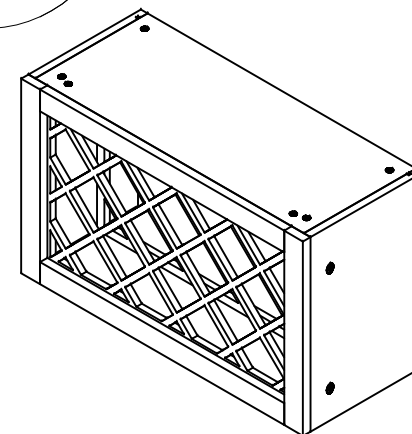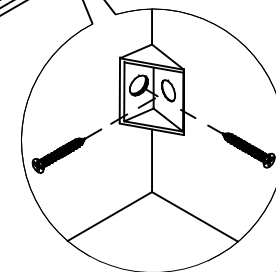

step 6

WMC24


ASSEMBLY INSTRUCTION

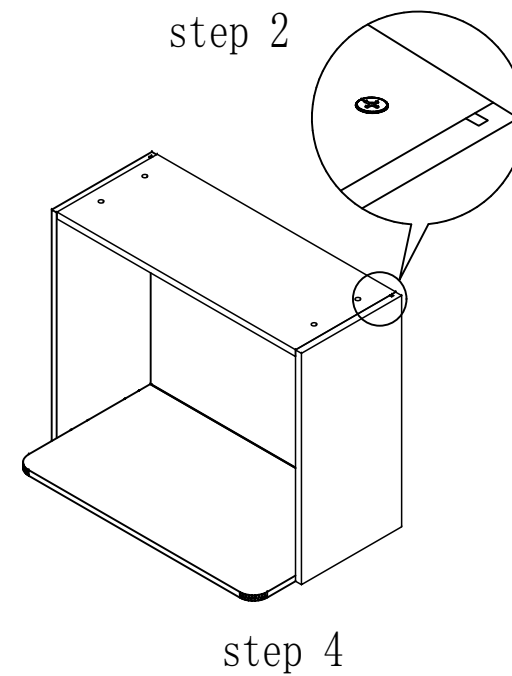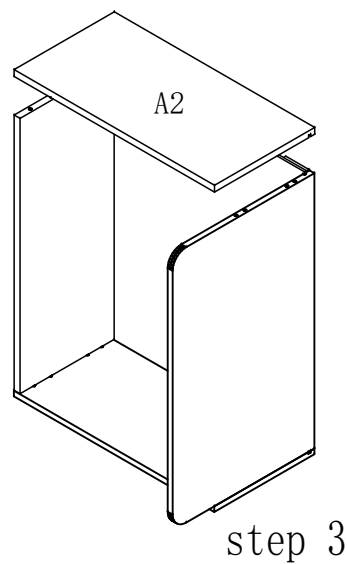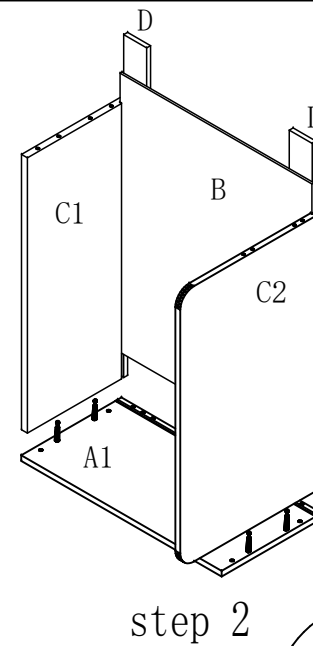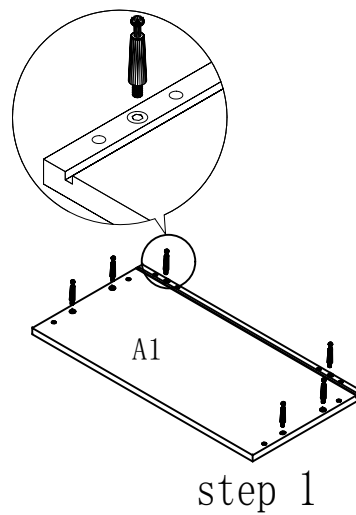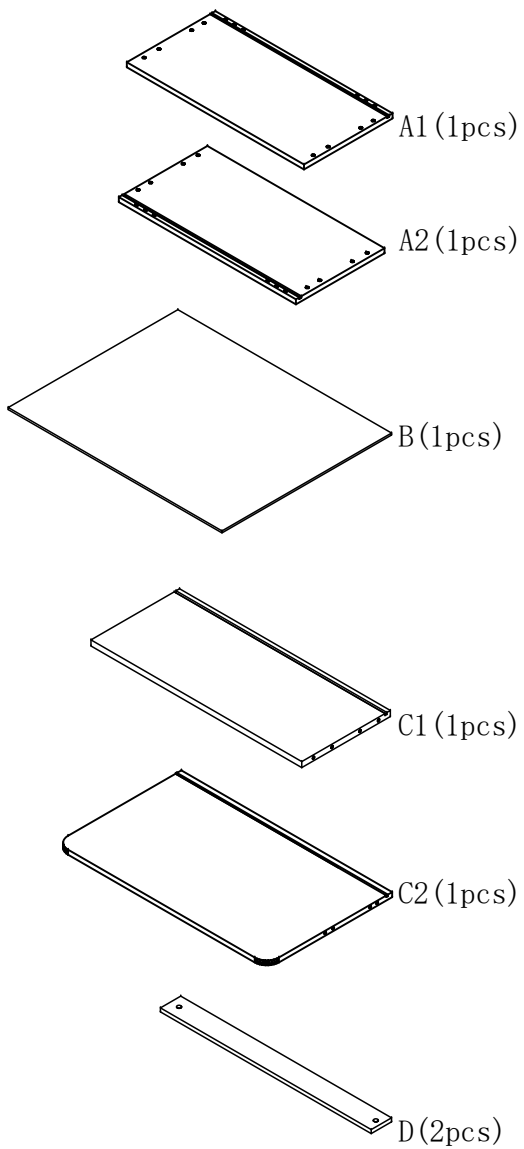

B15FH-B21FH



ASSEMBLY INSTRUCTION

- A1 (1pcs)
- A2 (1pcs)
- B (1pcs)
- C (1pcs)
- D (2pcs)
- E (1pcs)
- F (2pcs)
- G (1pcs)
- H (1pcs)

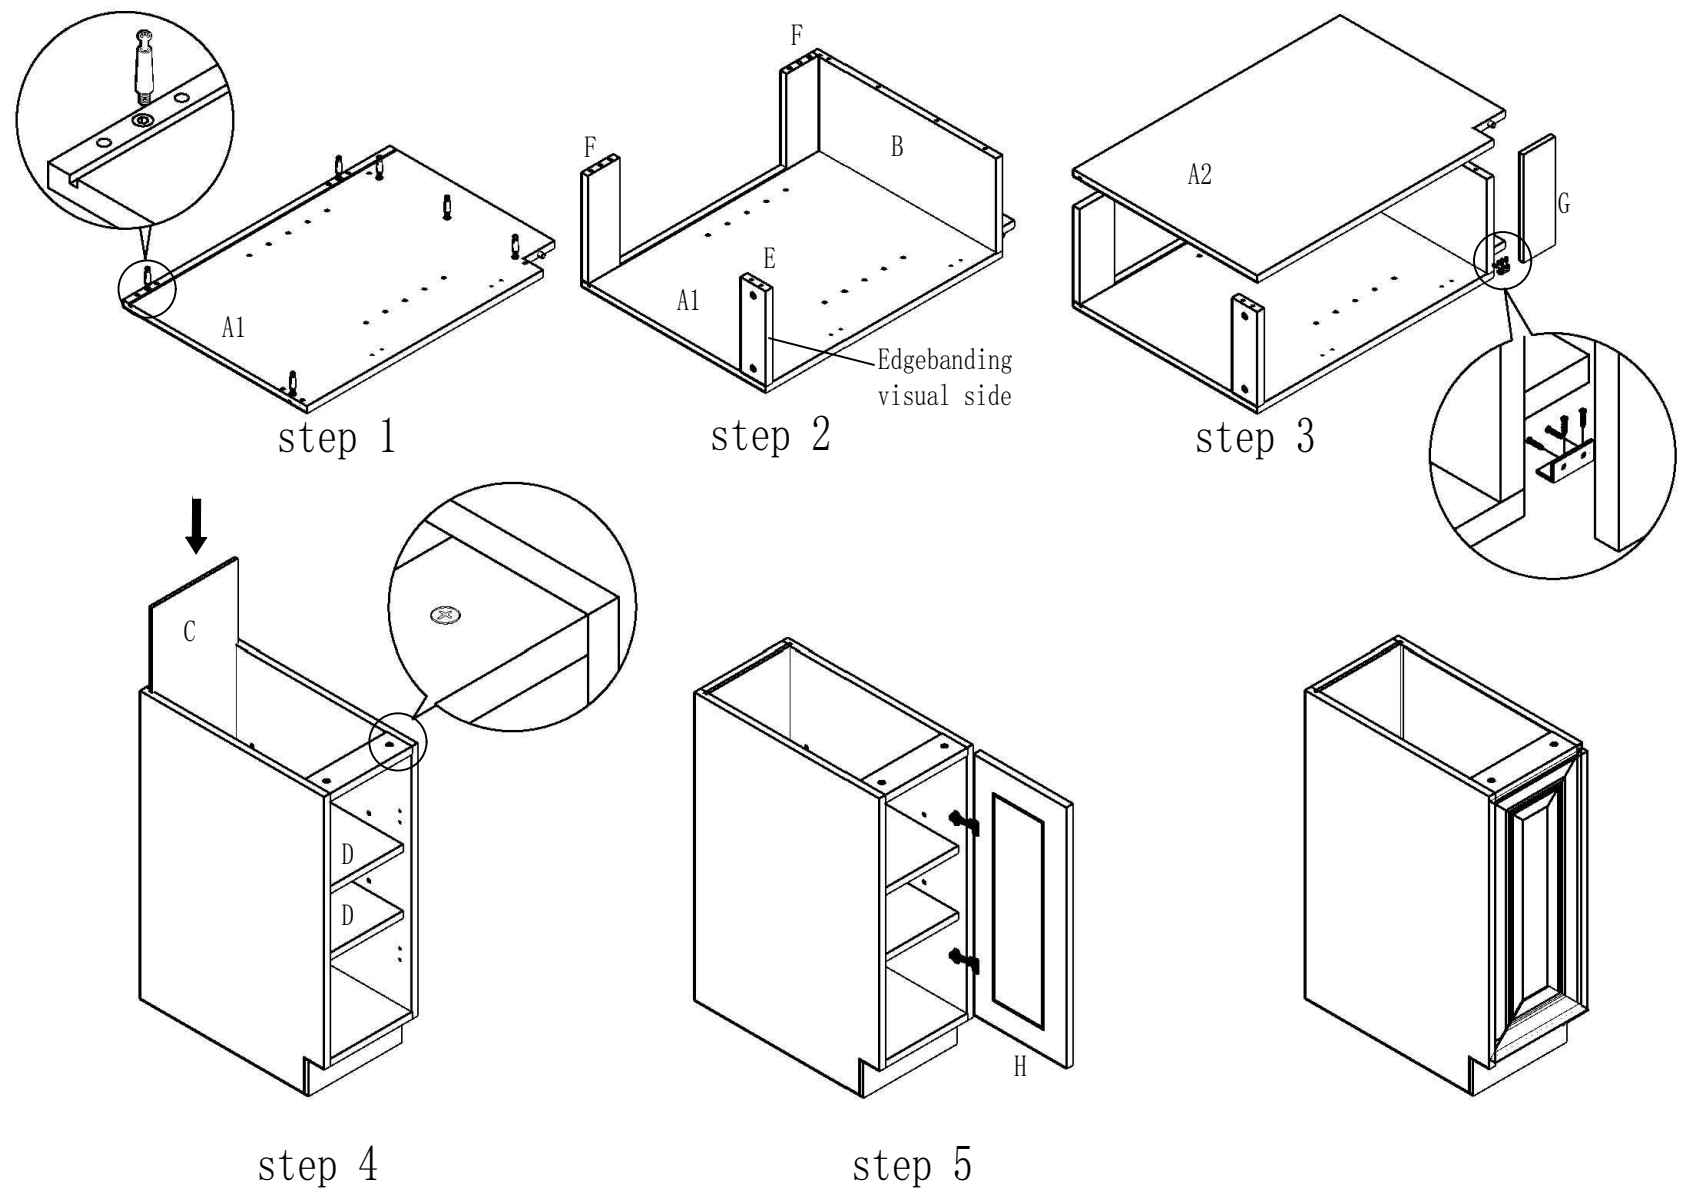



B24FH-B36FH

ASSEMBLY INSTRUCTION

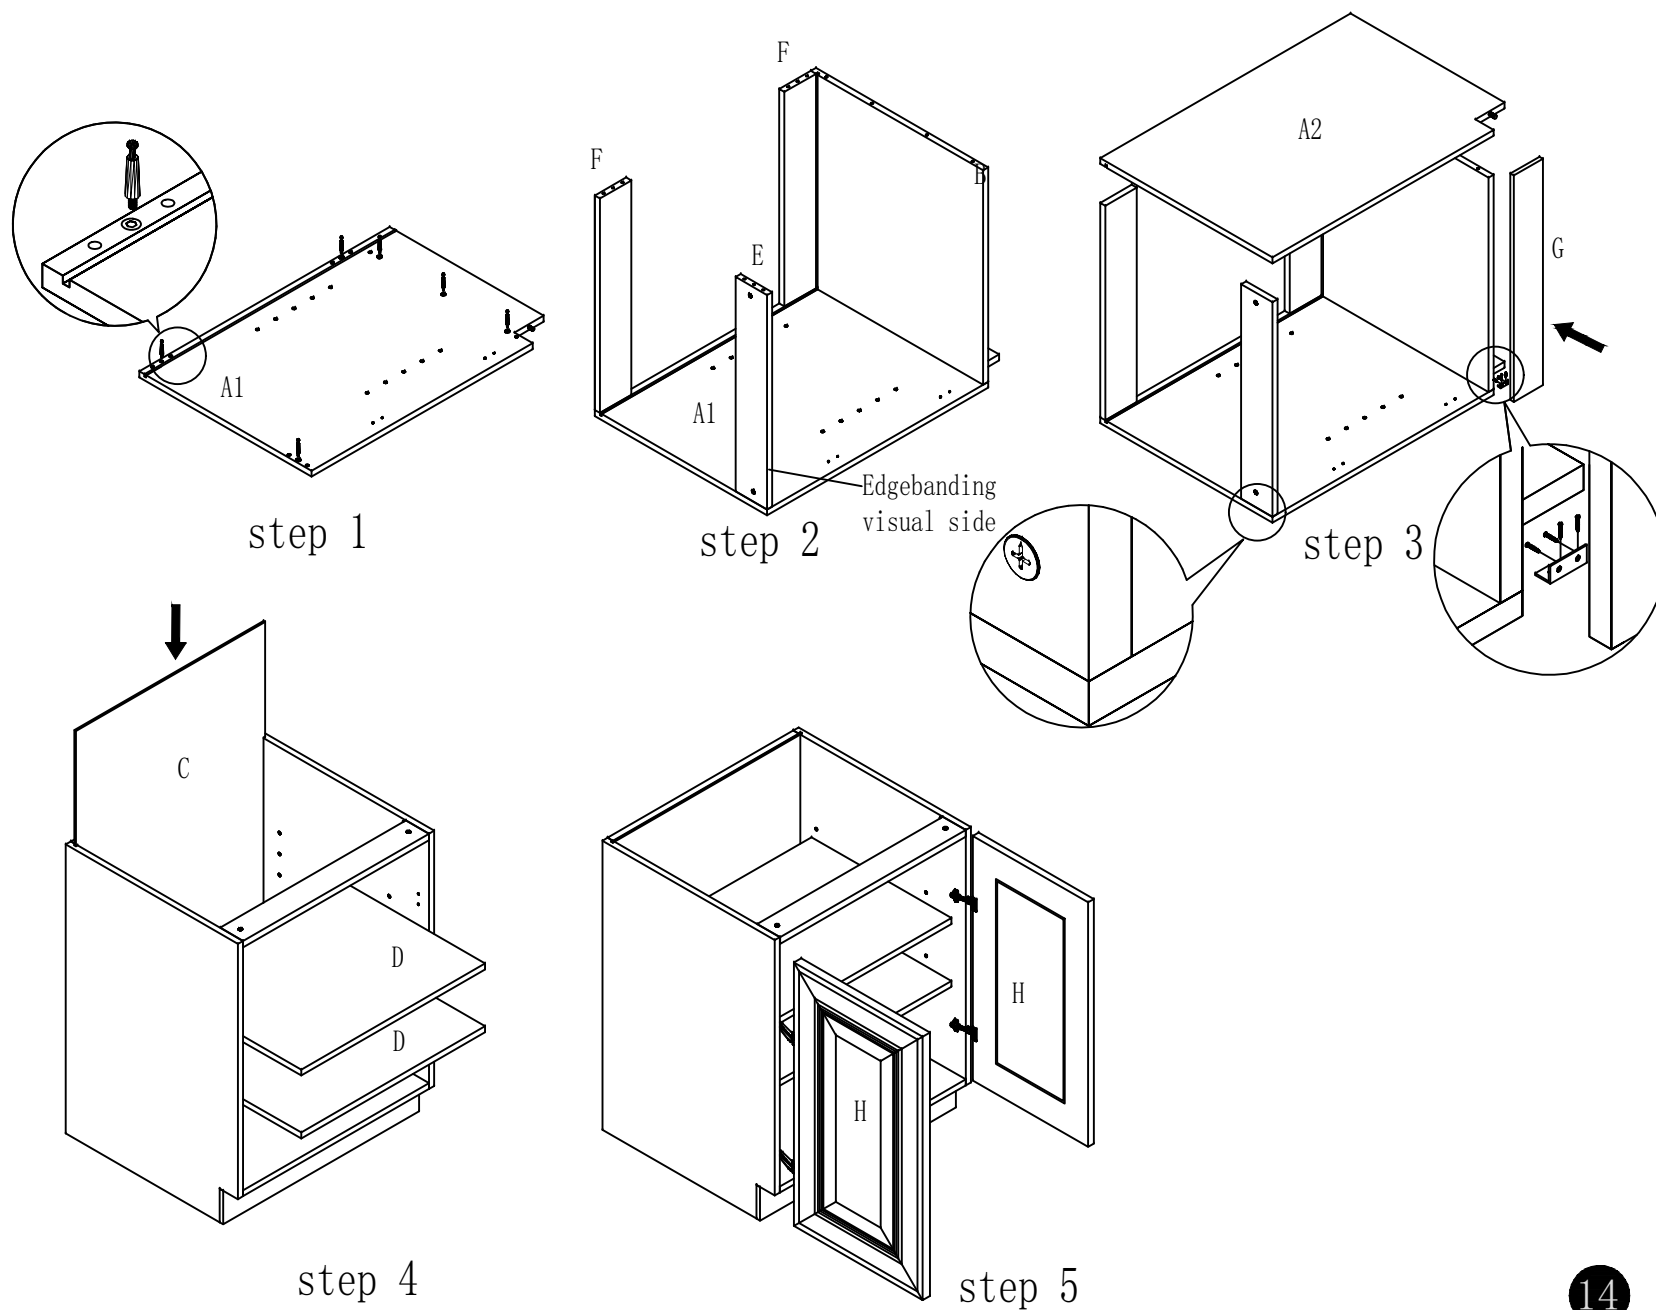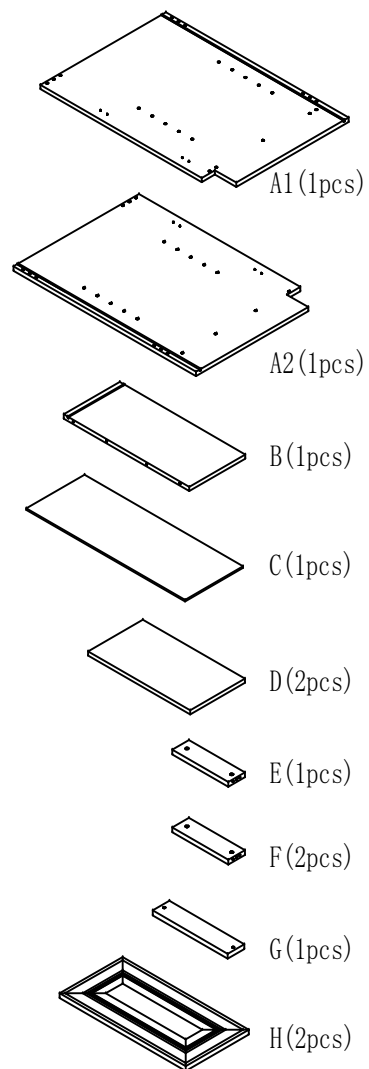



BBC36-42FH
BBC45-48FH

ASSEMBLY INSTRUCTION

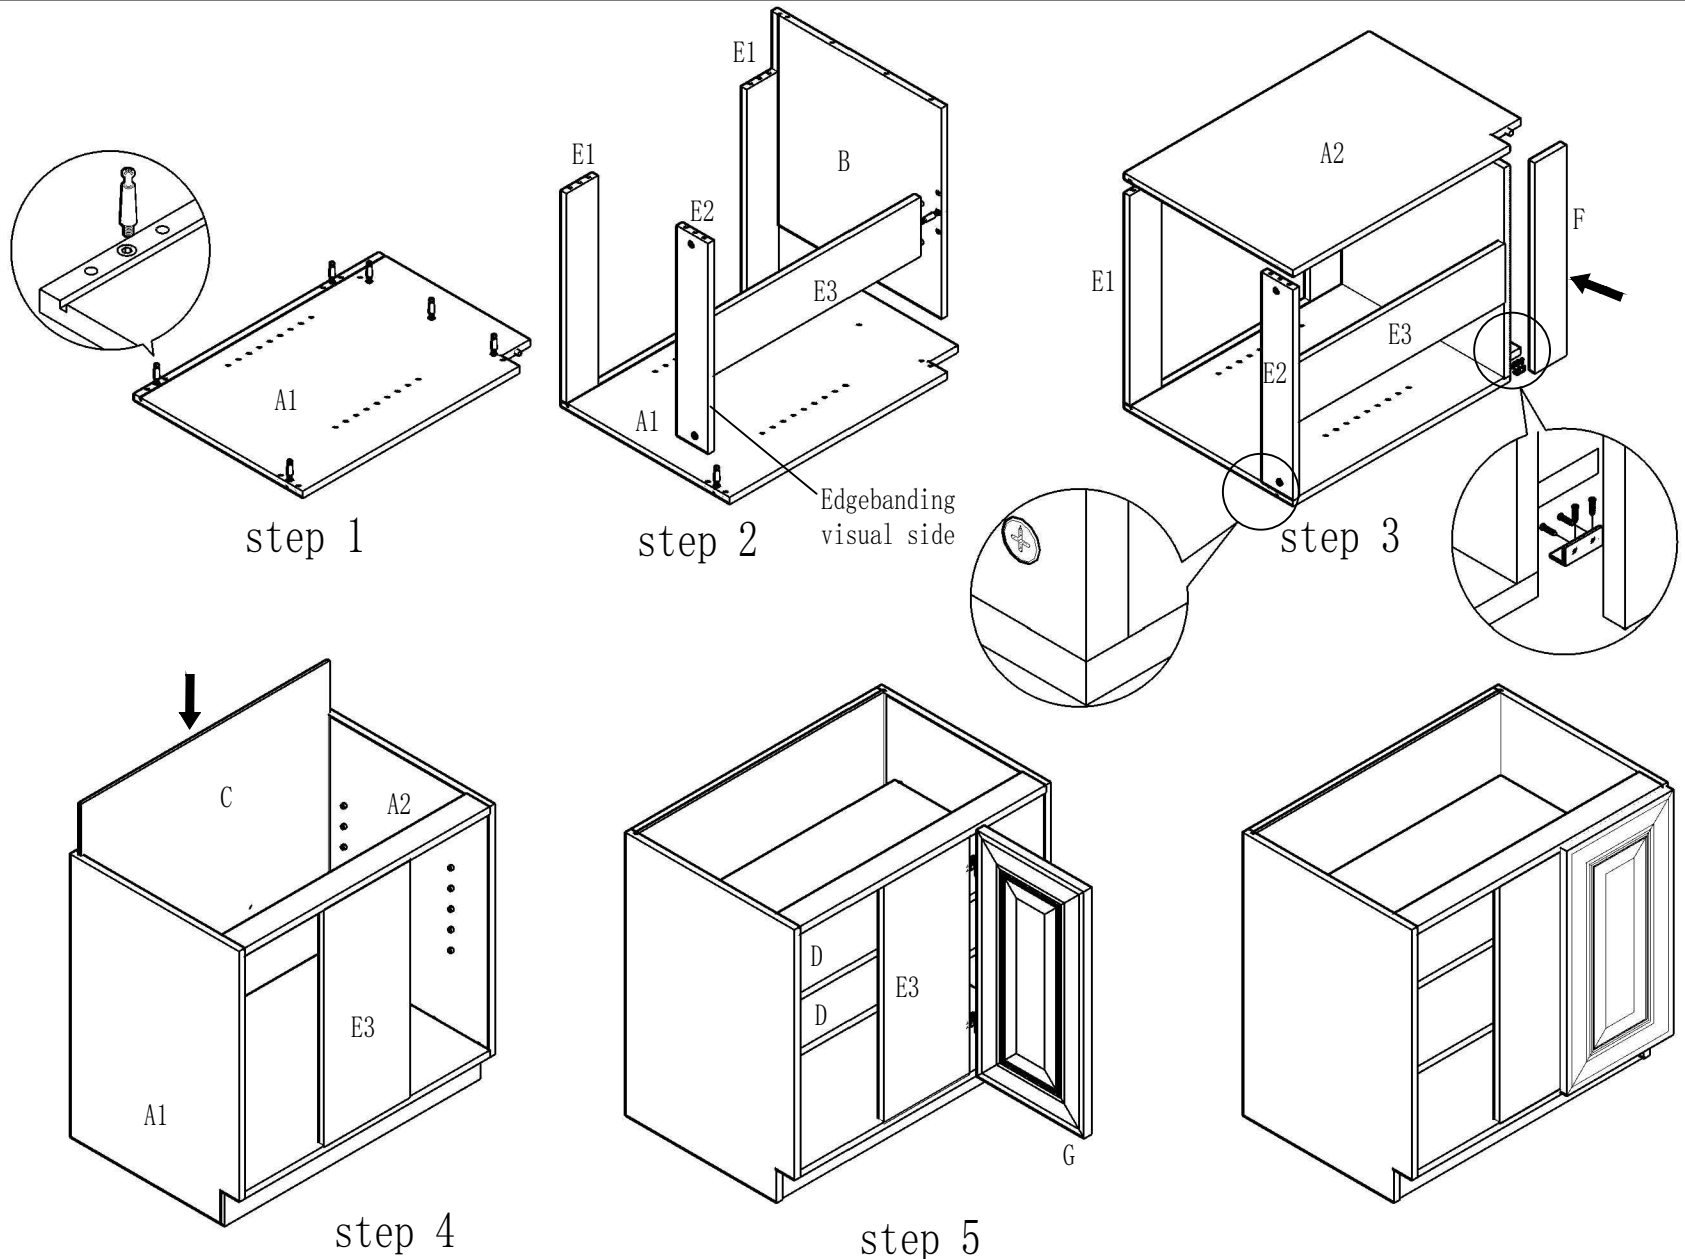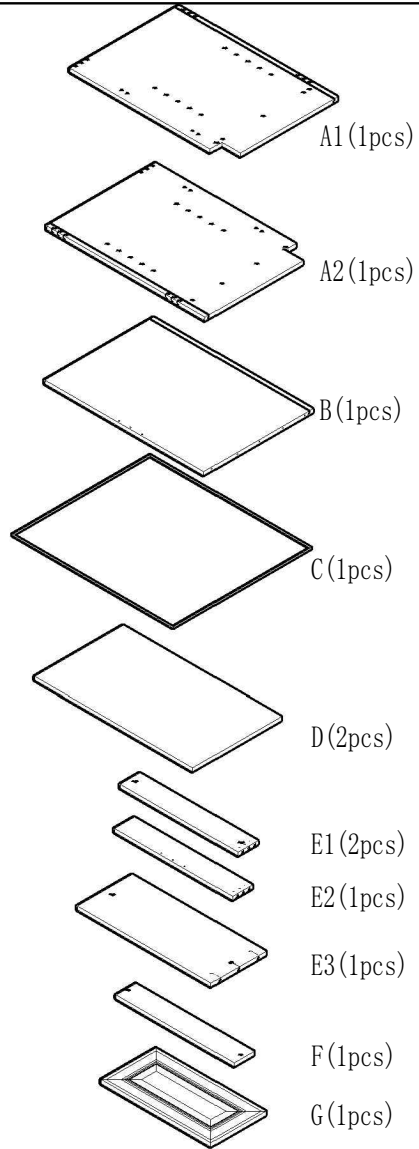


B09-B21


ASSEMBLY INSTRUCTION

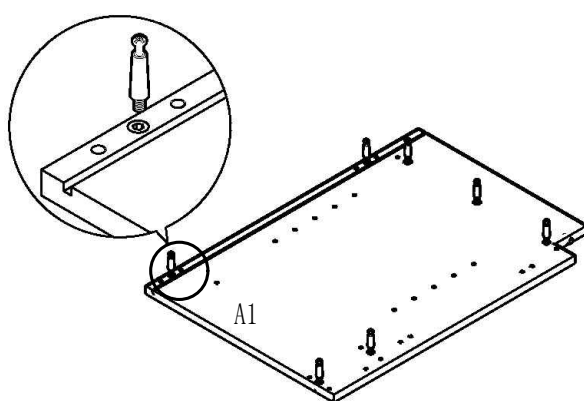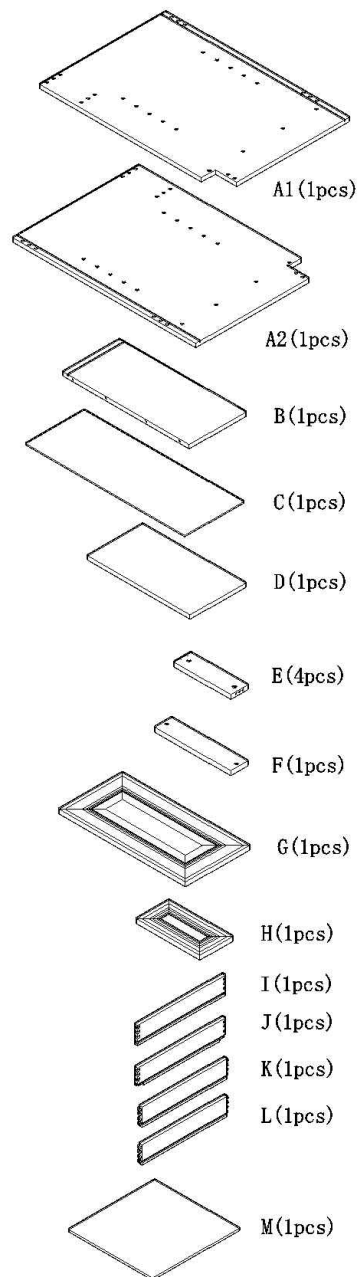


step 1

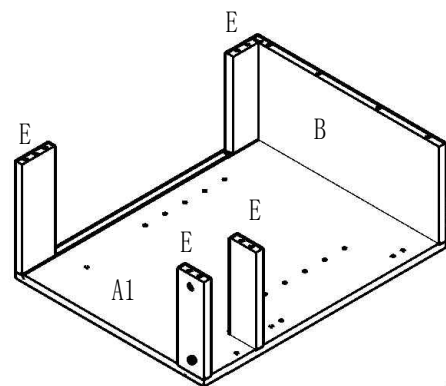


step 2

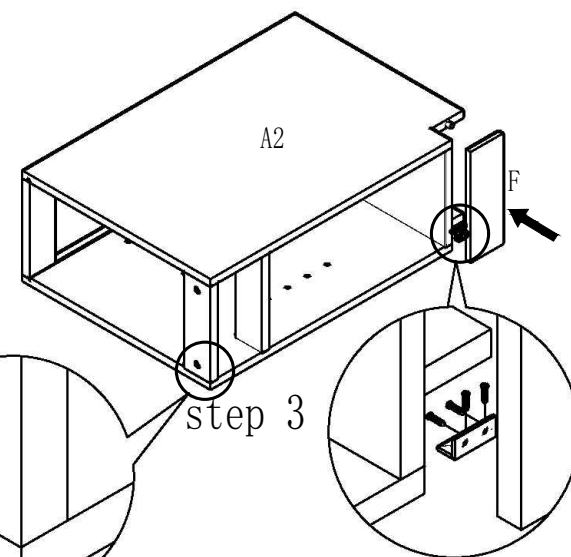


step 3

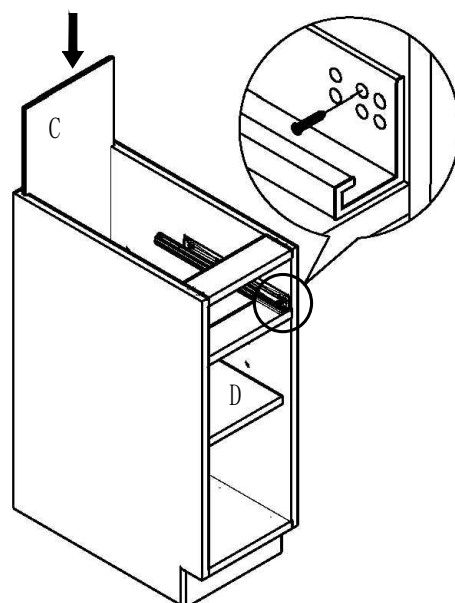


step 4

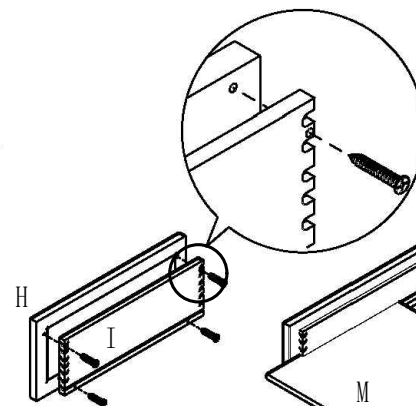

step 5

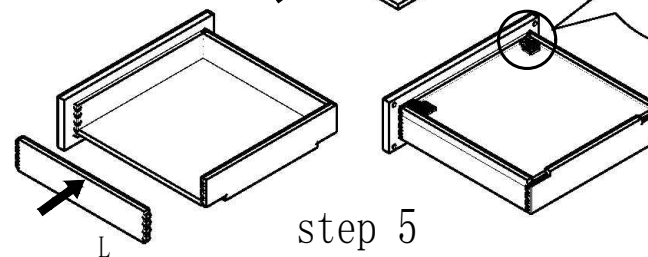




step 6

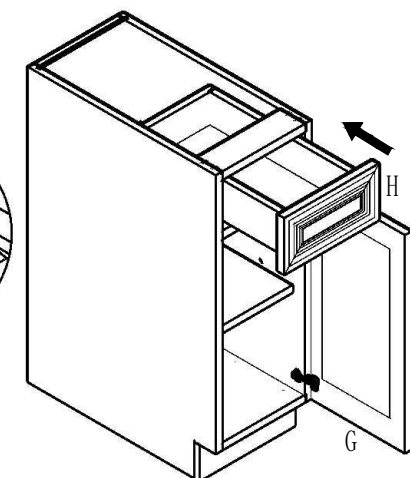

Note: The plastic support of the glide was useless.

B24-B36









ASSEMBLY INSTRUCTION

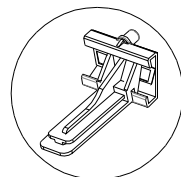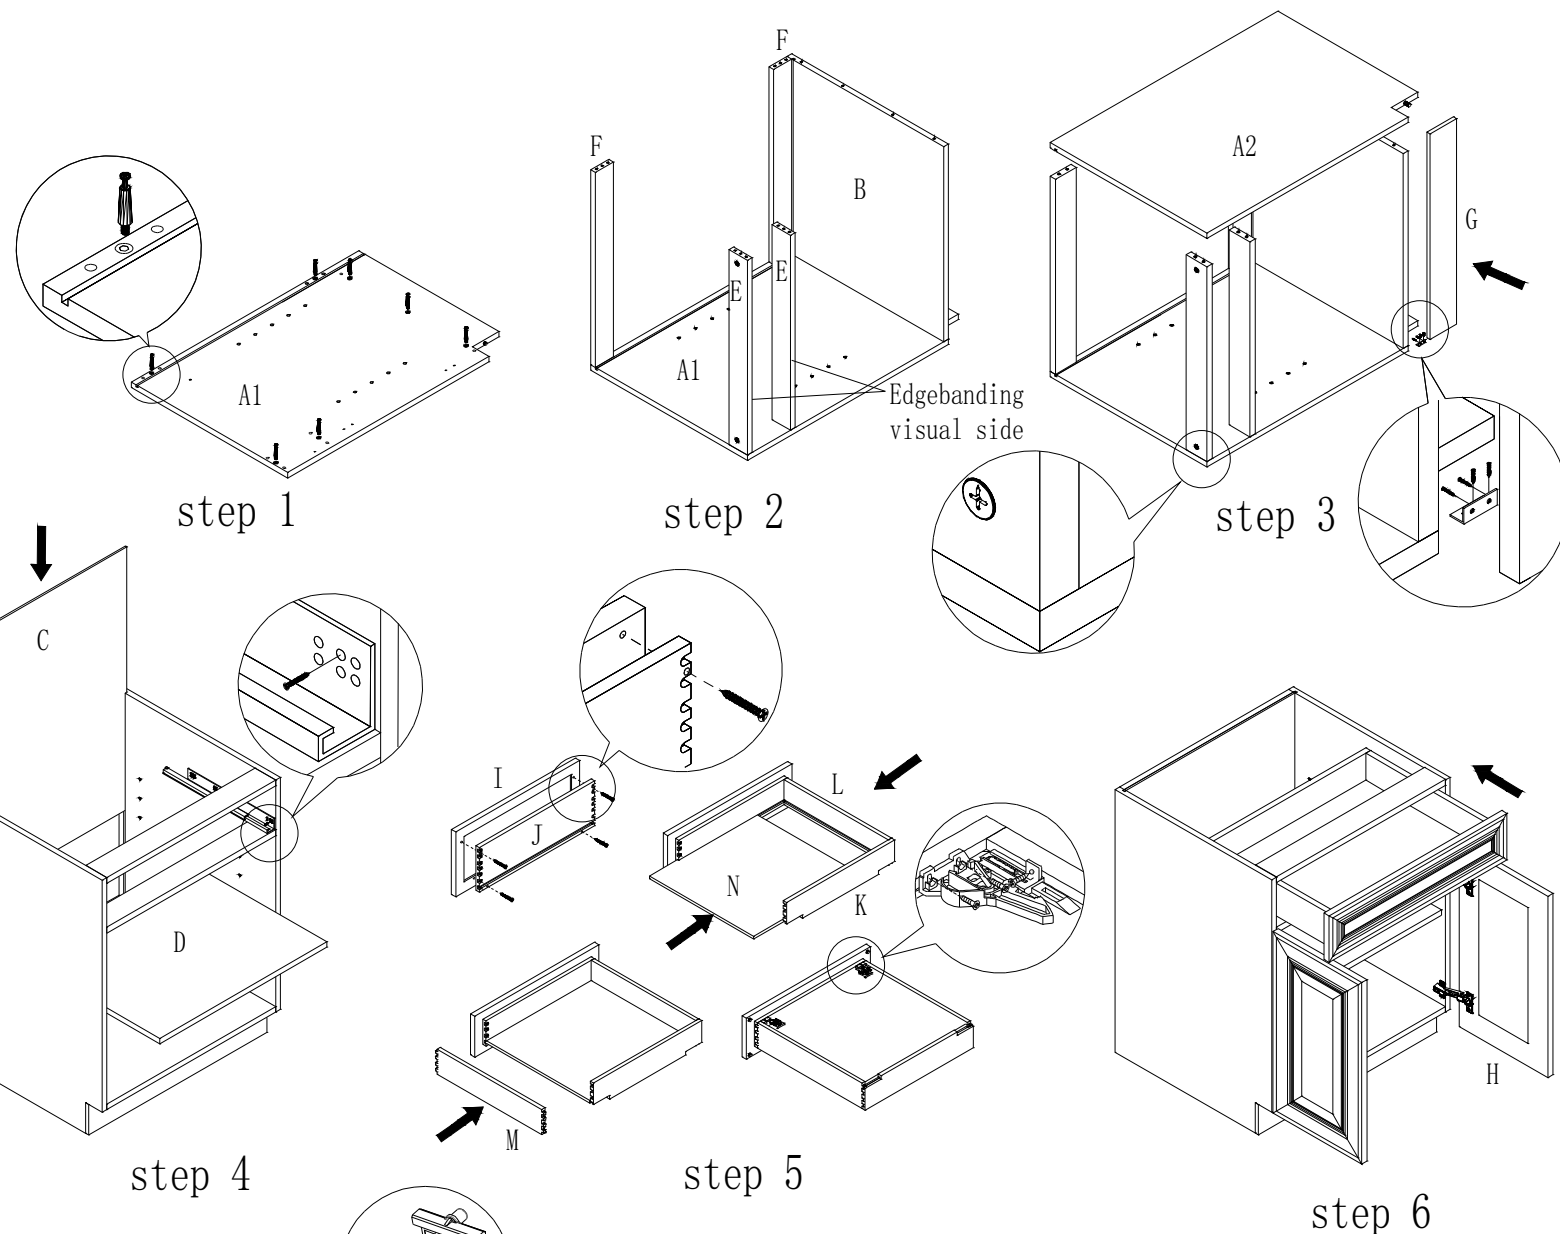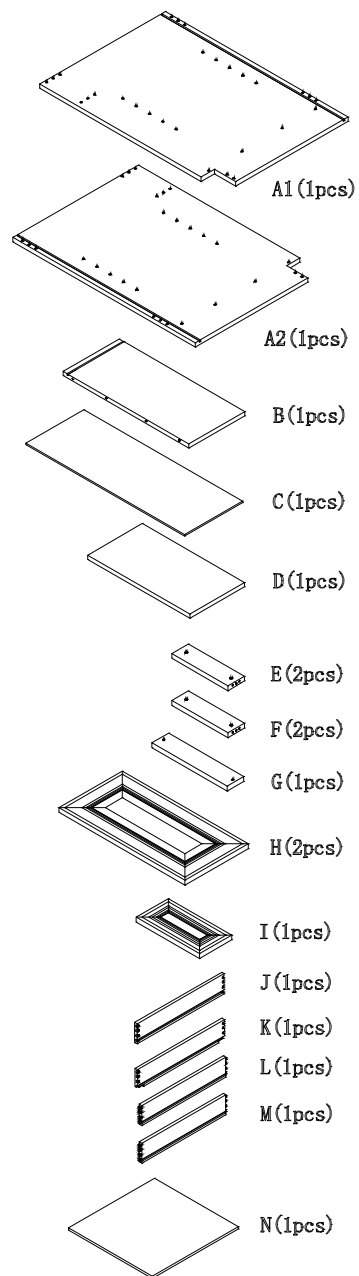

Note: The plastic support of the glide was useless.

DB12-3~DB36-3
VDB12~VDB18



ASSEMBLY INSTRUCTION

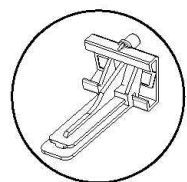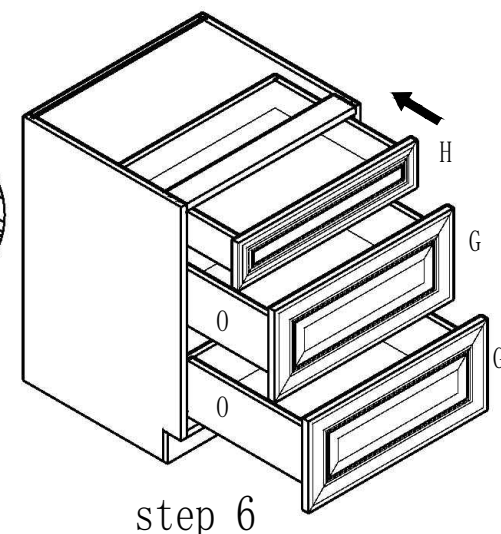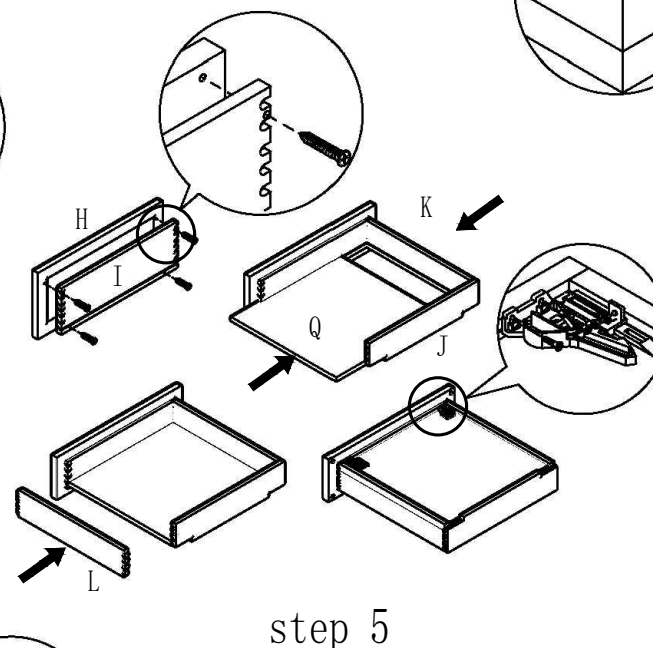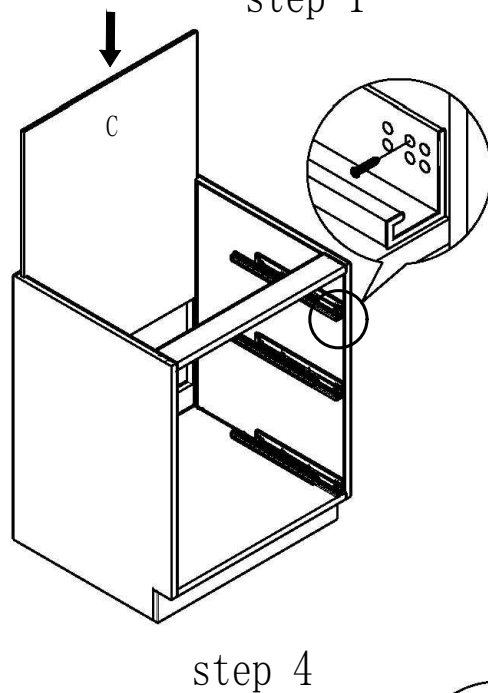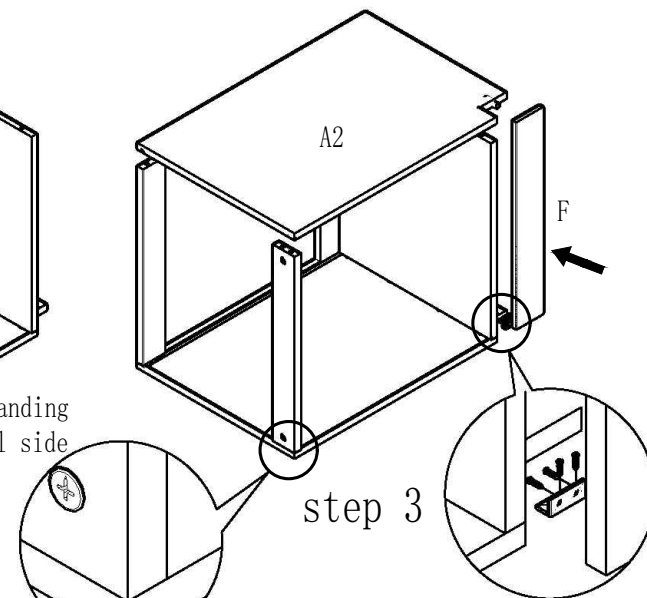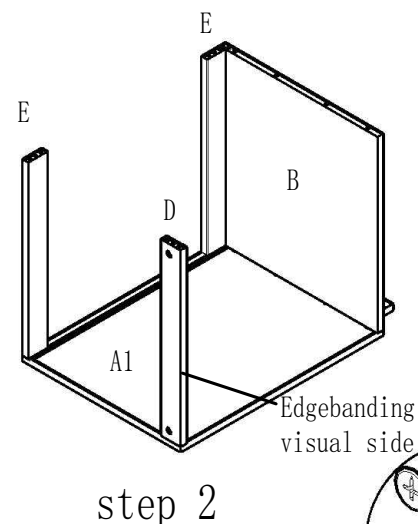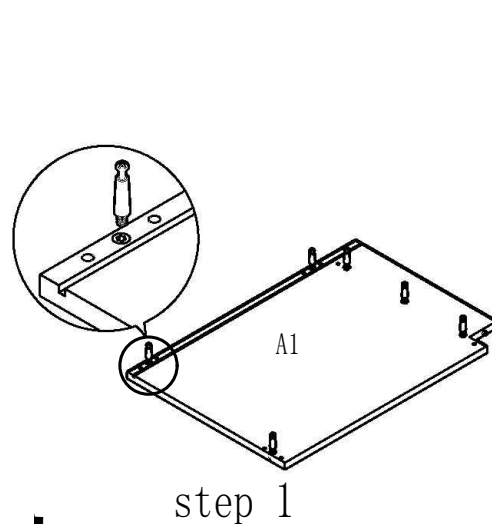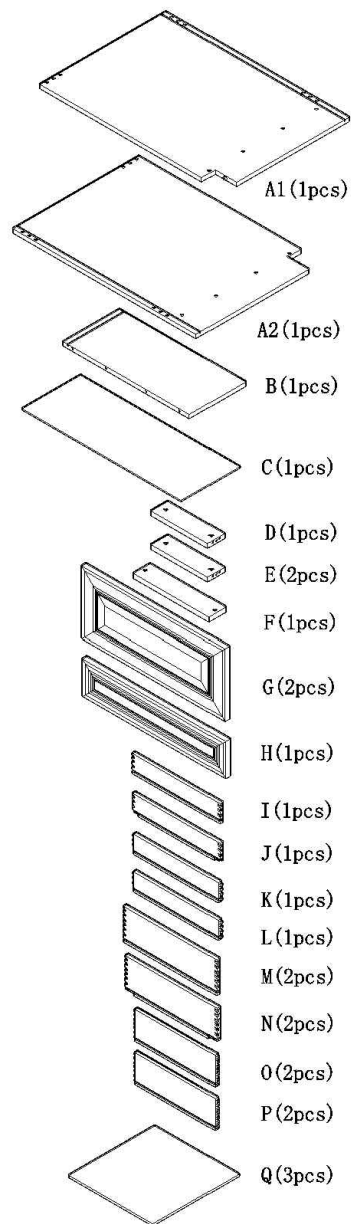


Note: The plastic support of the glide was useless.

SB30-SB42
V2421-V3621


ASSEMBLY INSTRUCTION

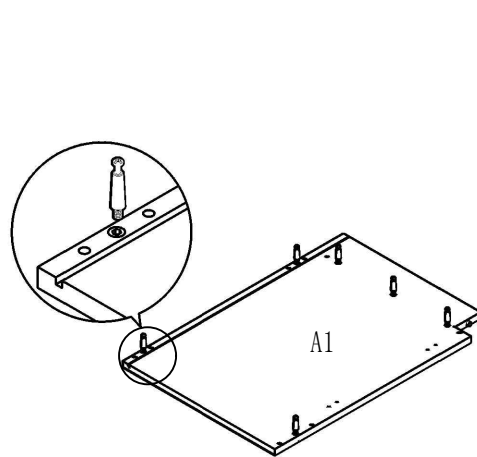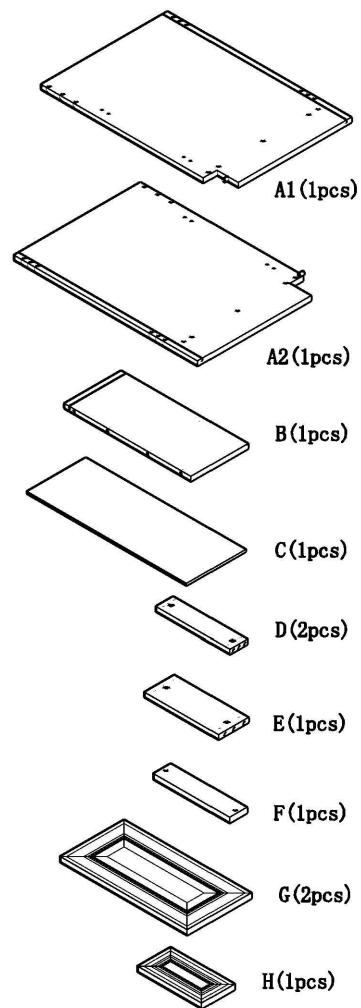


step 1

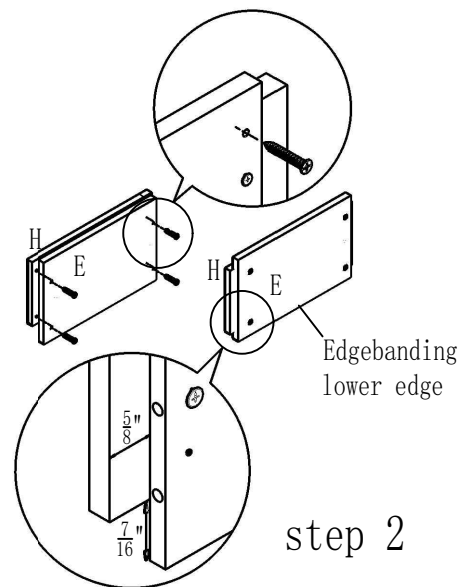


step 2

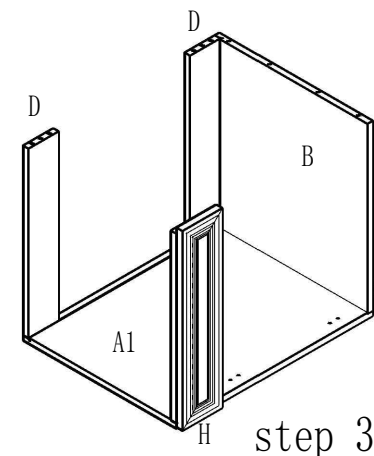


step 3

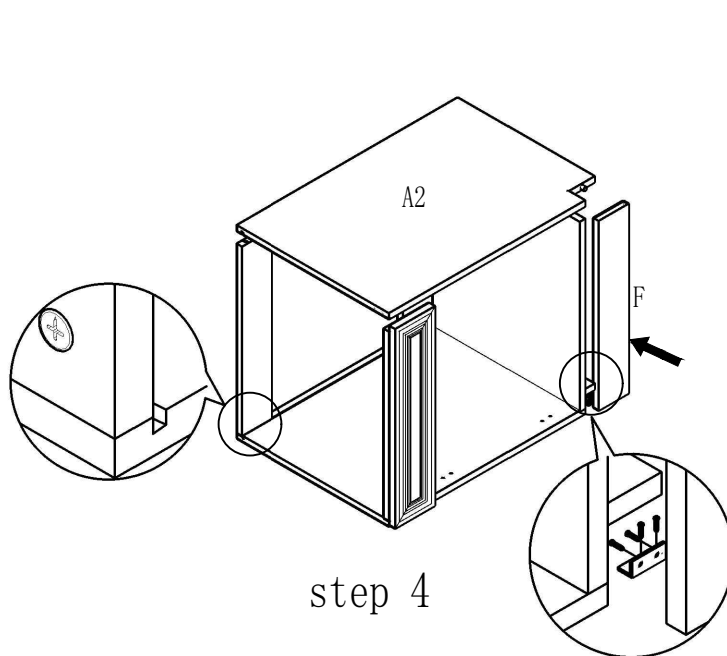

step 4

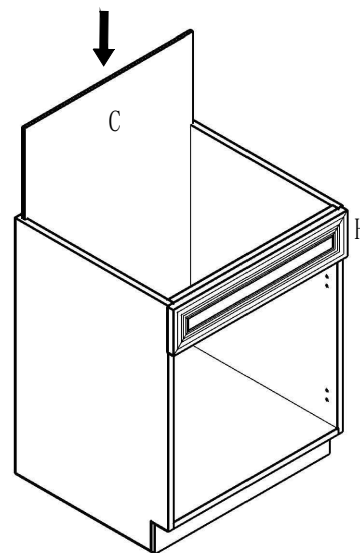



step 5

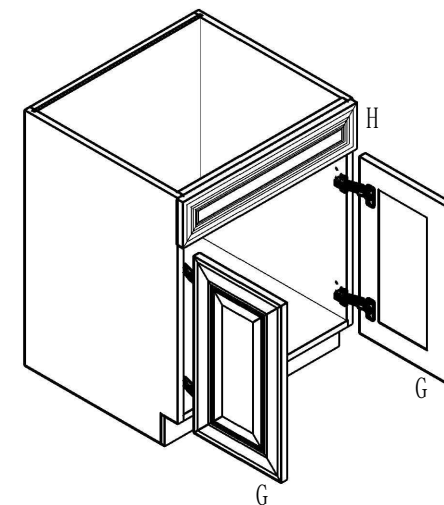

step 6



BMC24

ASSEMBLY INSTRUCTION

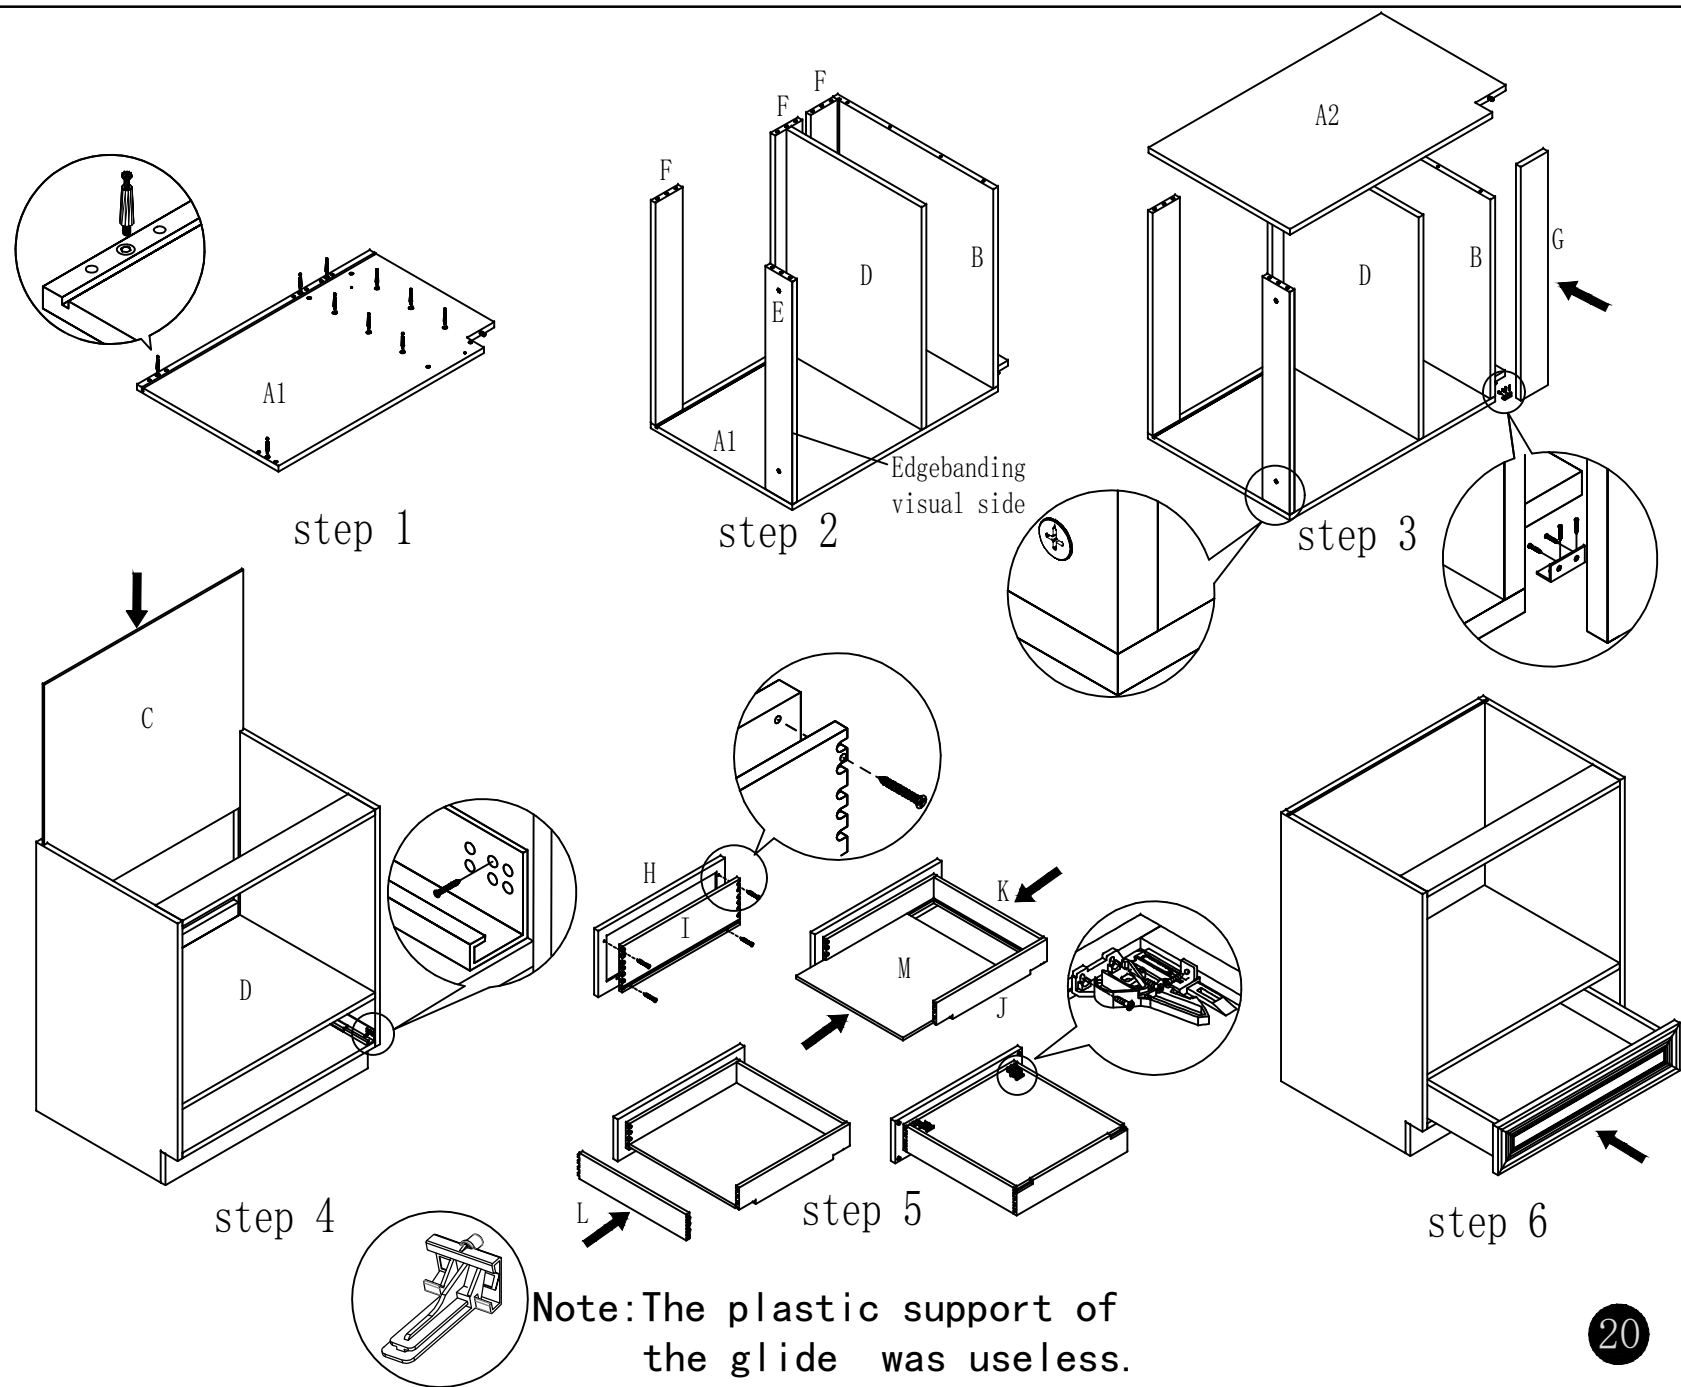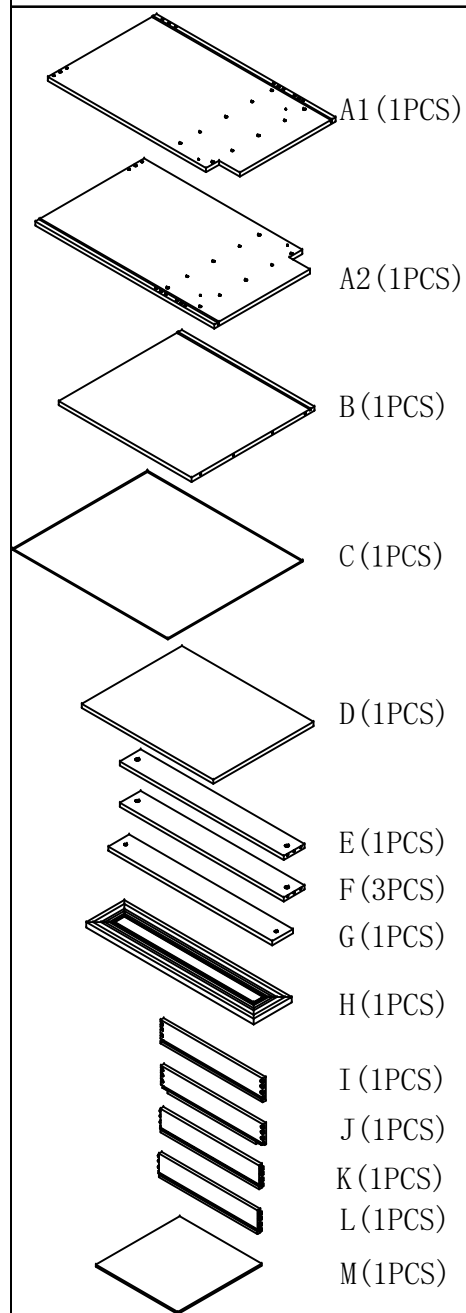


BLS33/BLS36


ASSEMBLY INSTRUCTION

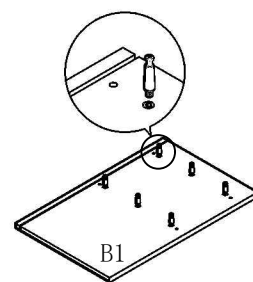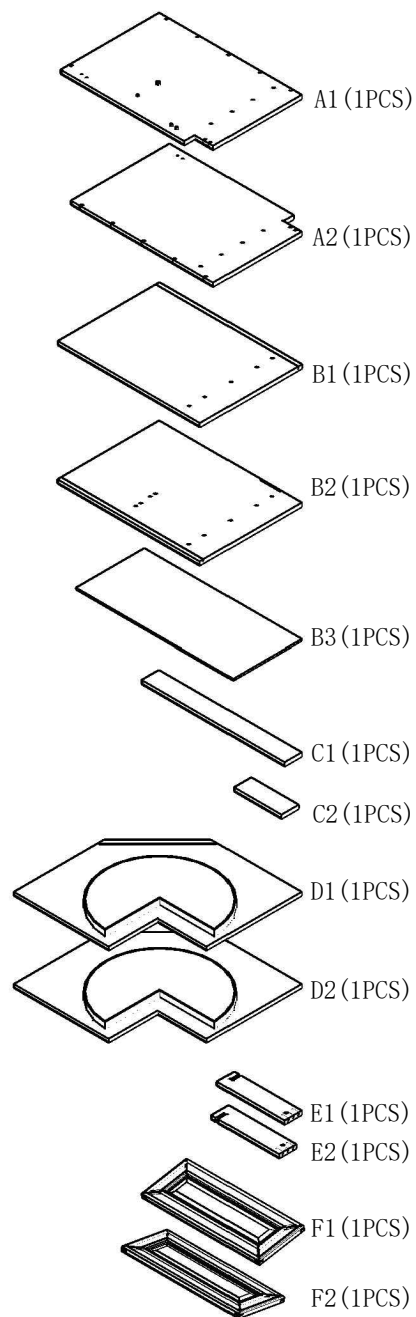


step 1

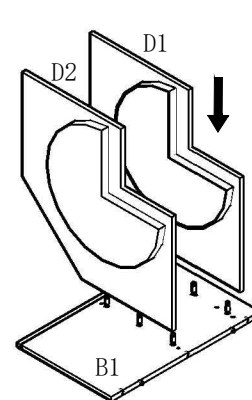


step 2

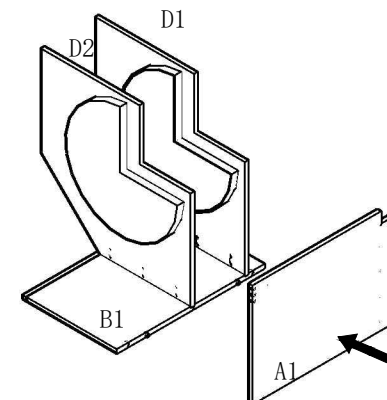


step 3

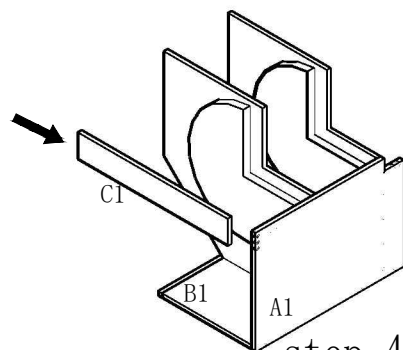


step 4

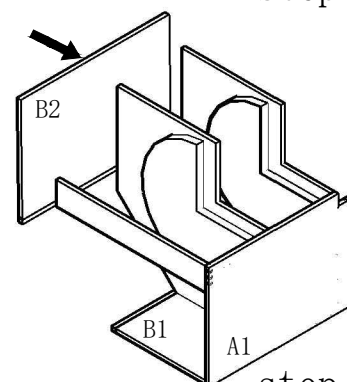


step 5

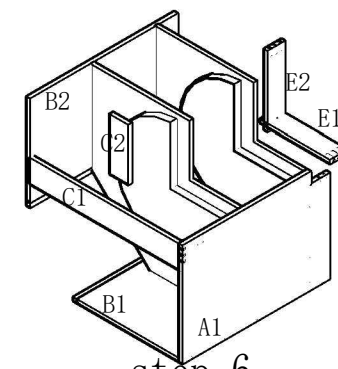



step 6

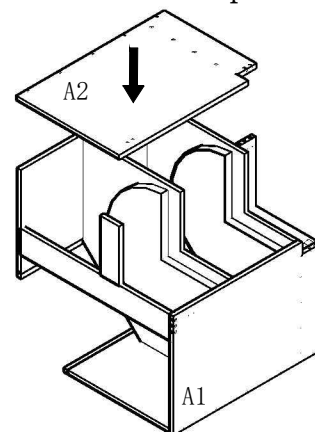

step 7


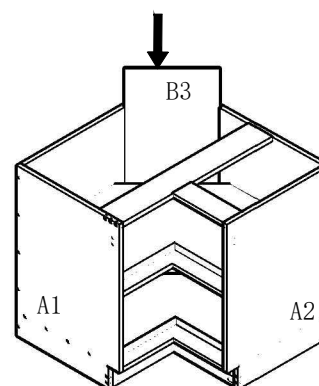


step 8

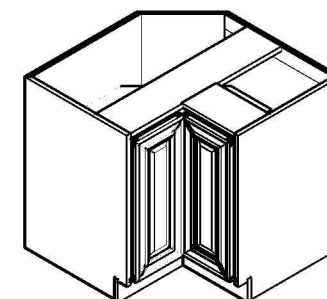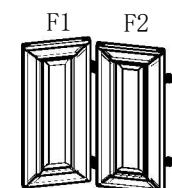


EZR33/EZR36


ASSEMBLY INSTRUCTION

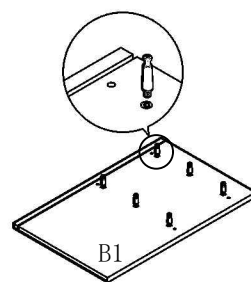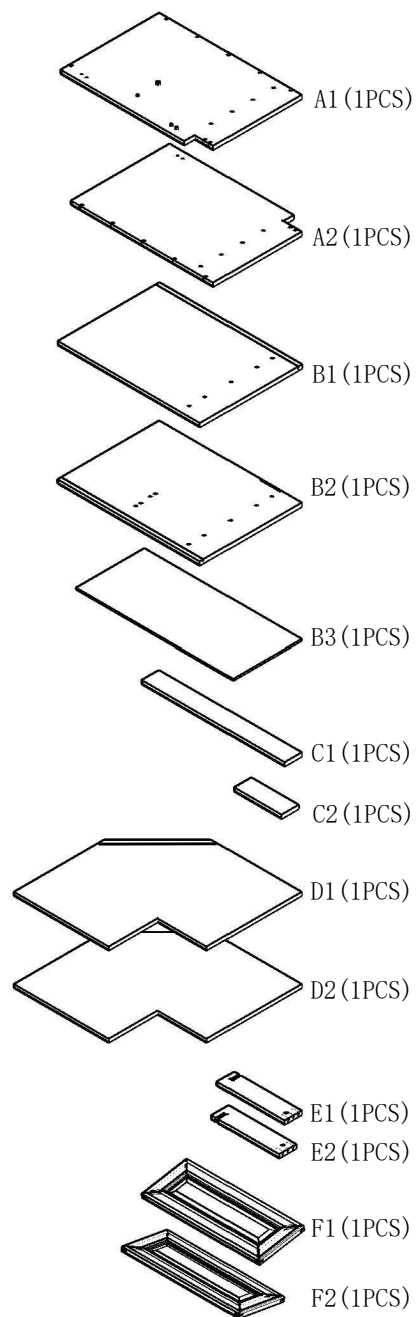


step 1

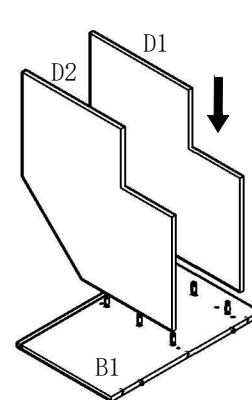


step 2

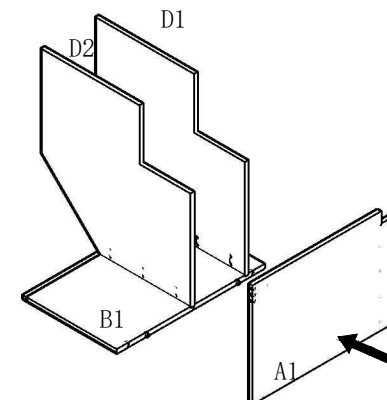


step 3

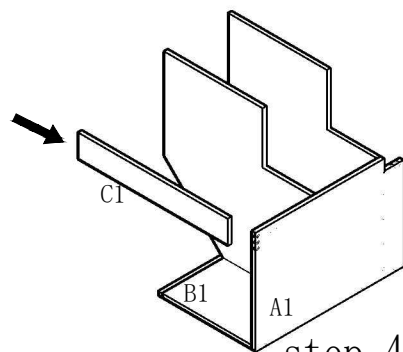


step 4

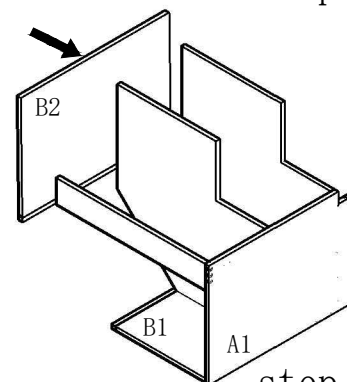


step 5

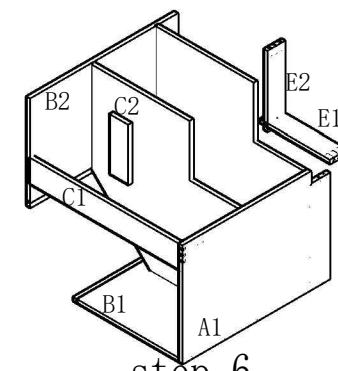



step 6

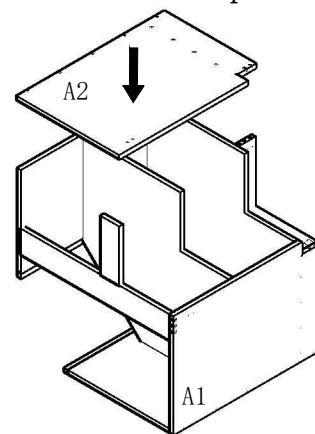

step 7


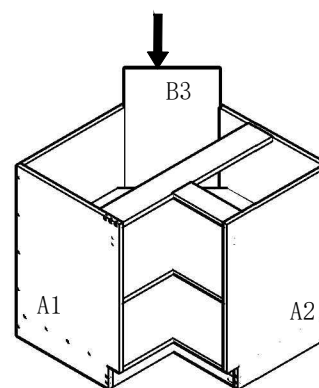


step 8

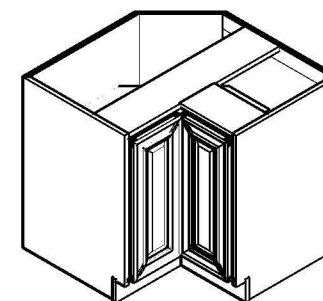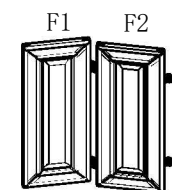



DCB36

ASSEMBLY INSTRUCTION

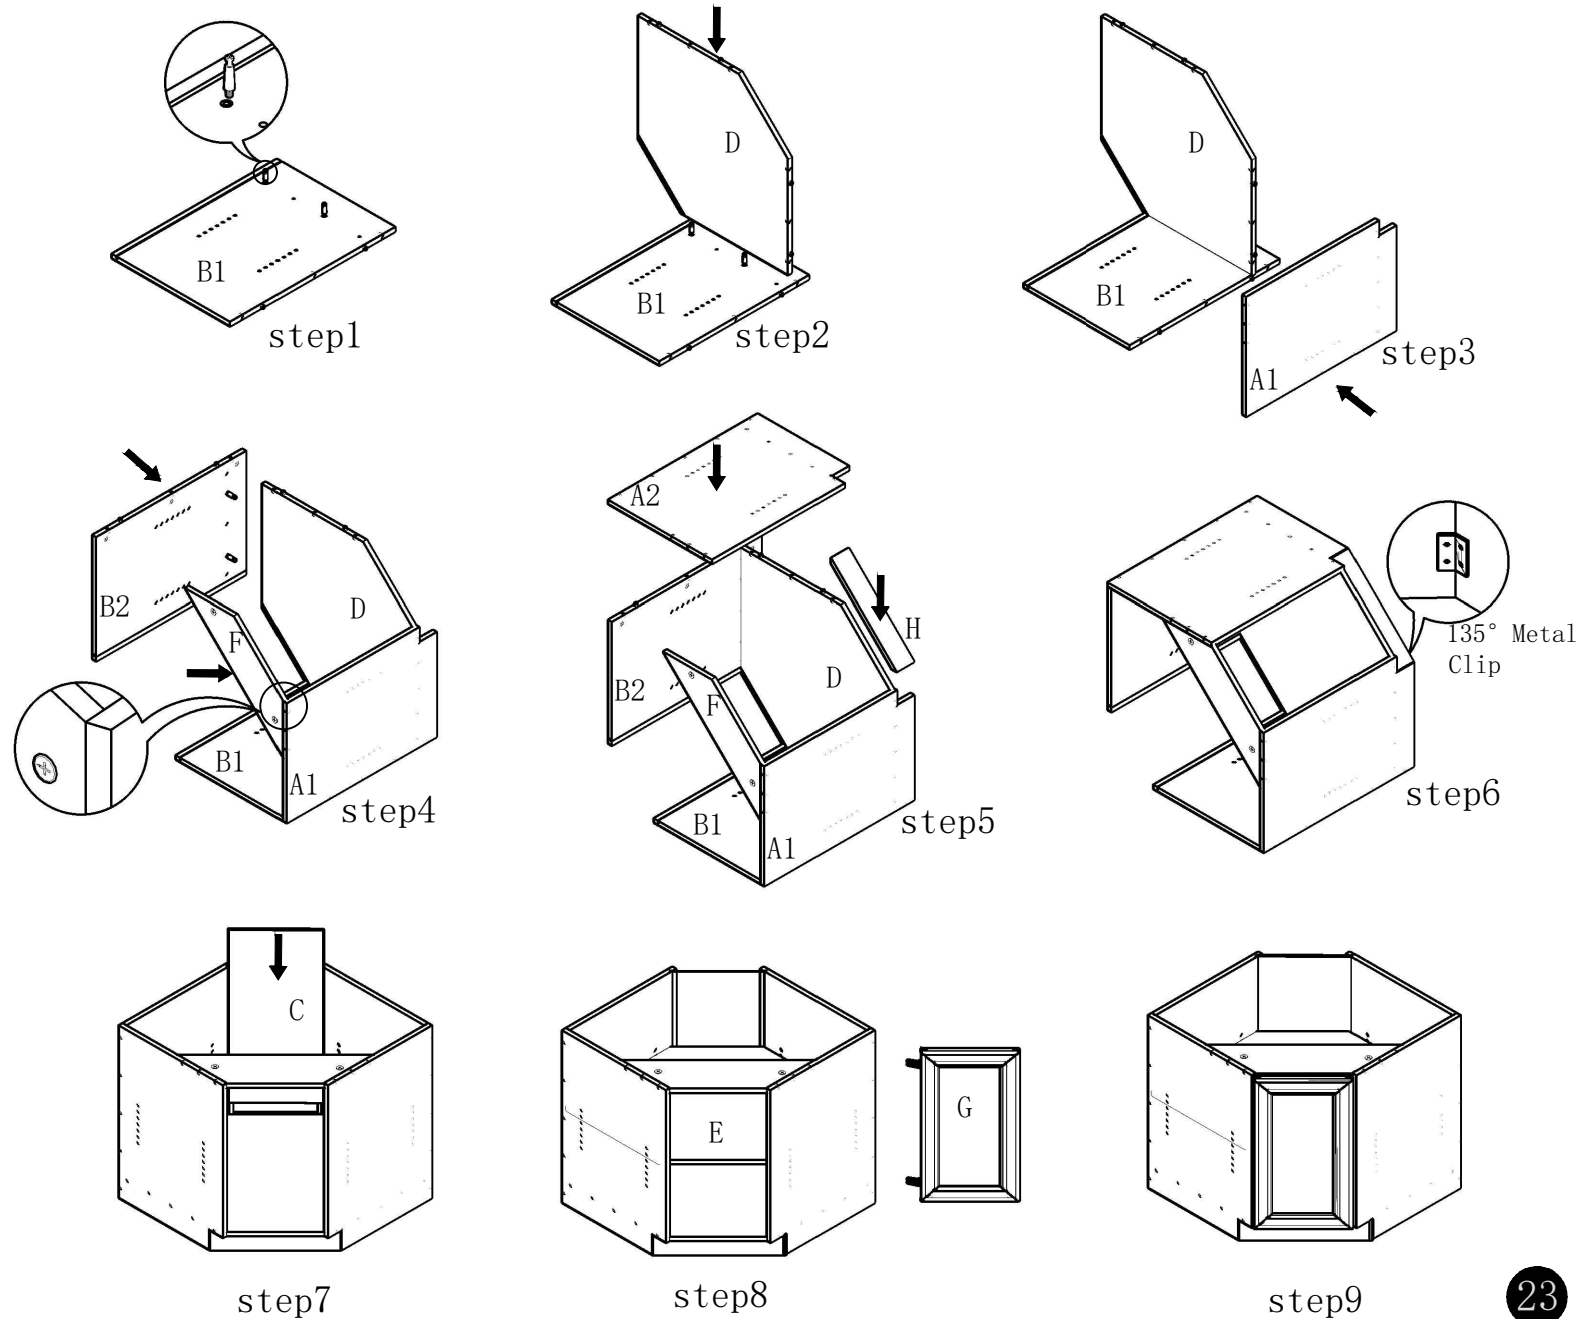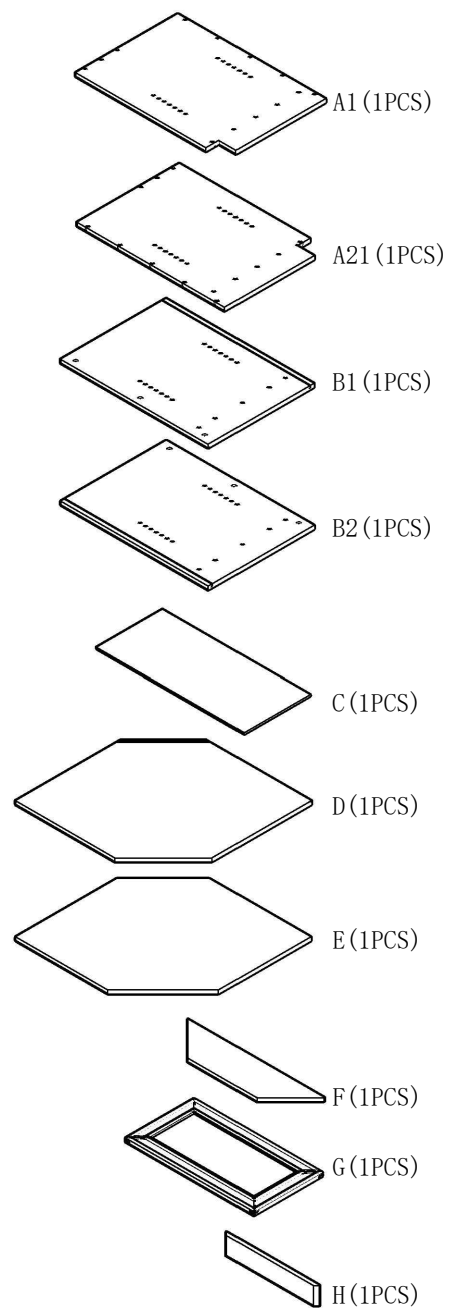



DCB42

ASSEMBLY INSTRUCTION

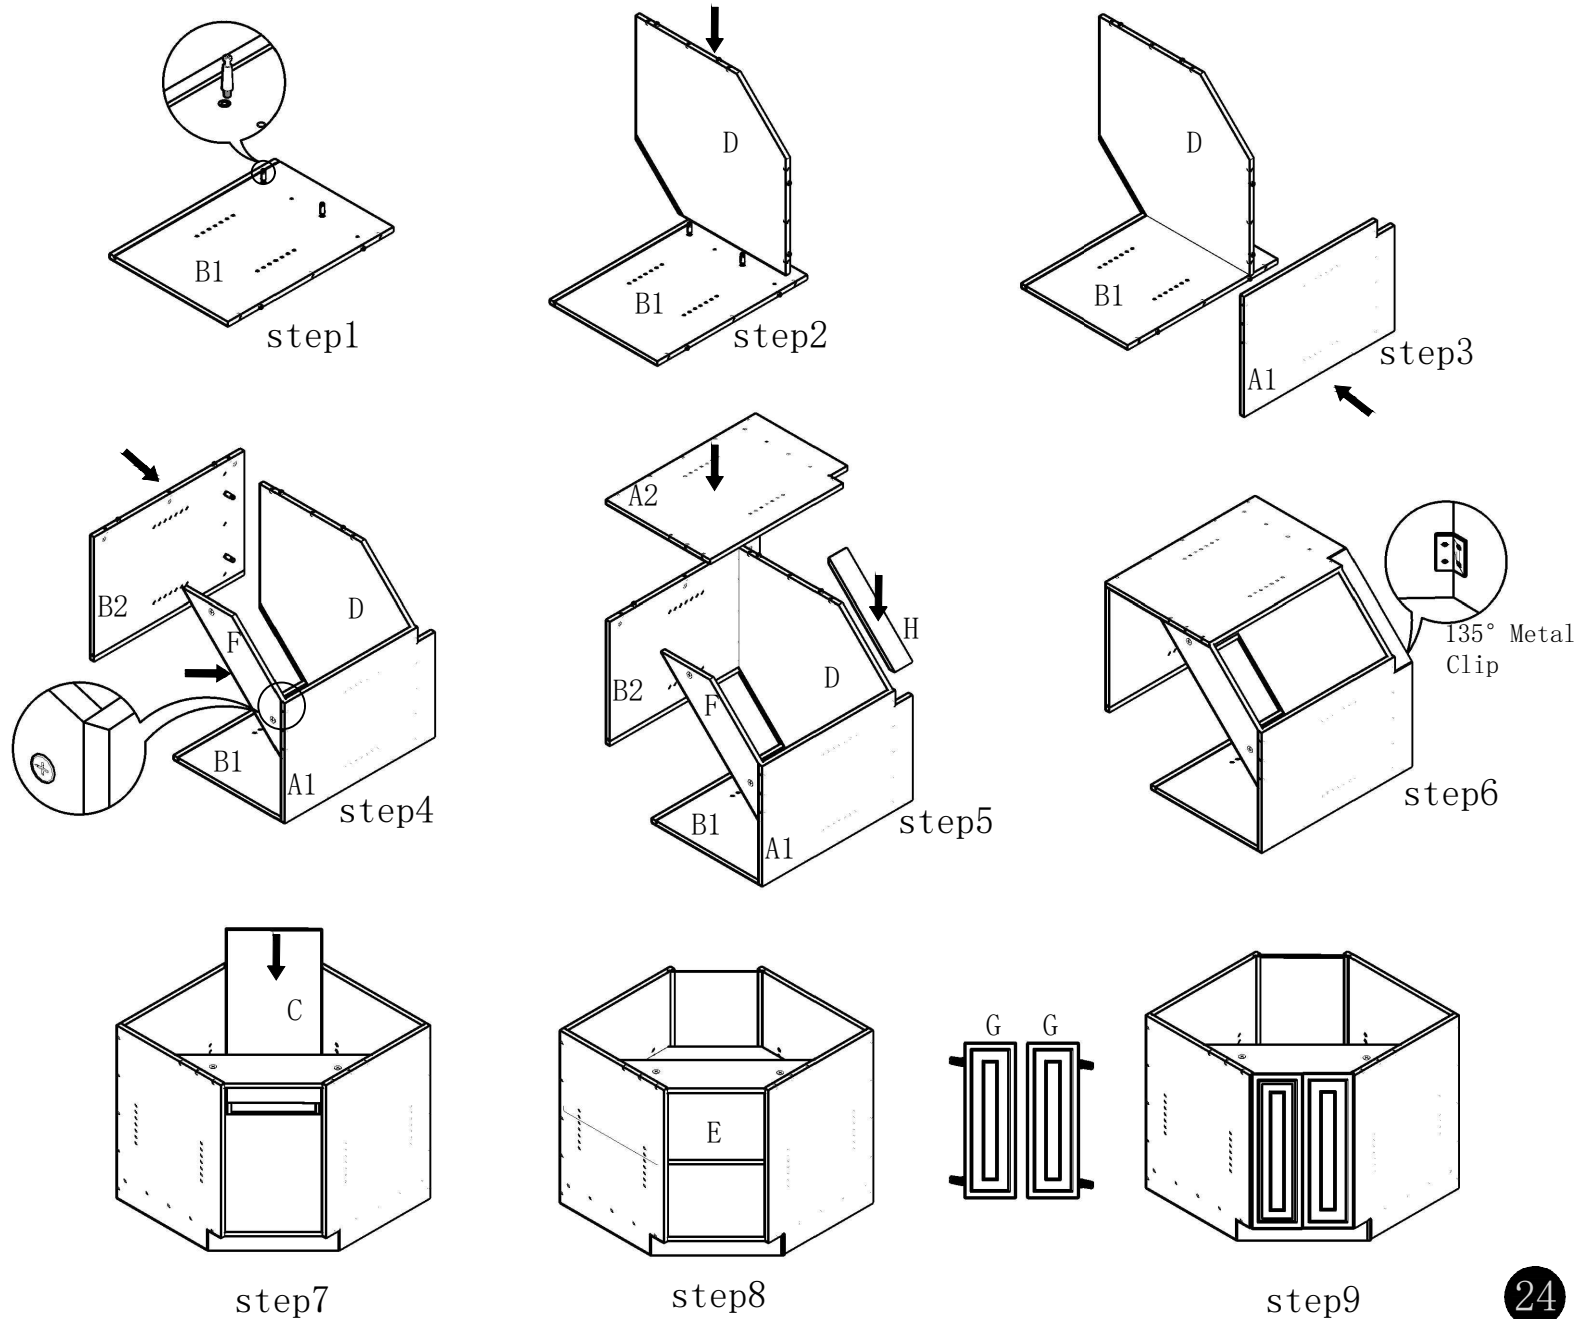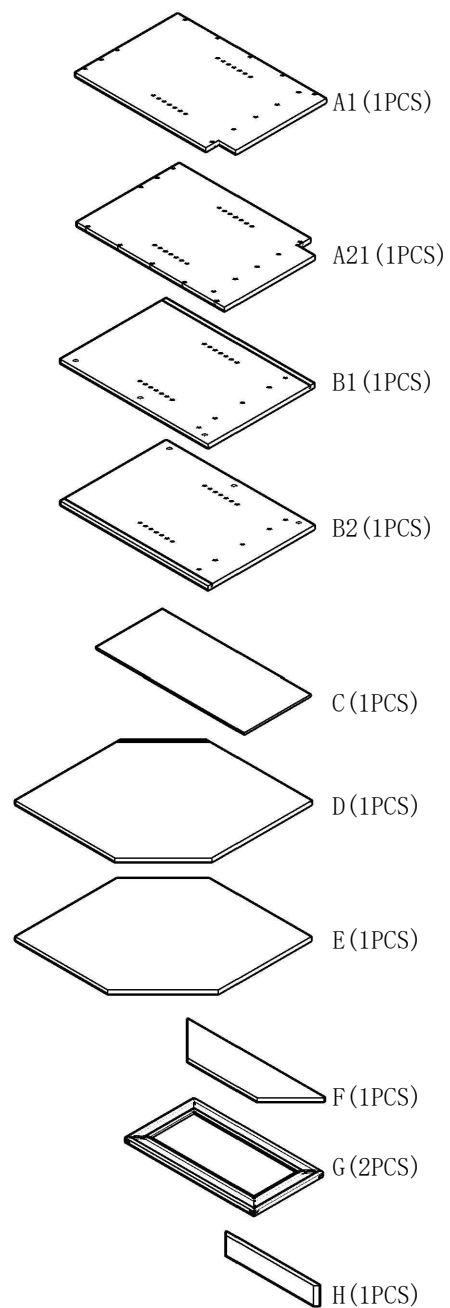


BPP09


ASSEMBLY INSTRUCTION

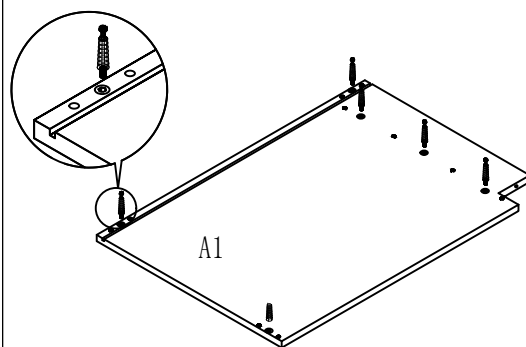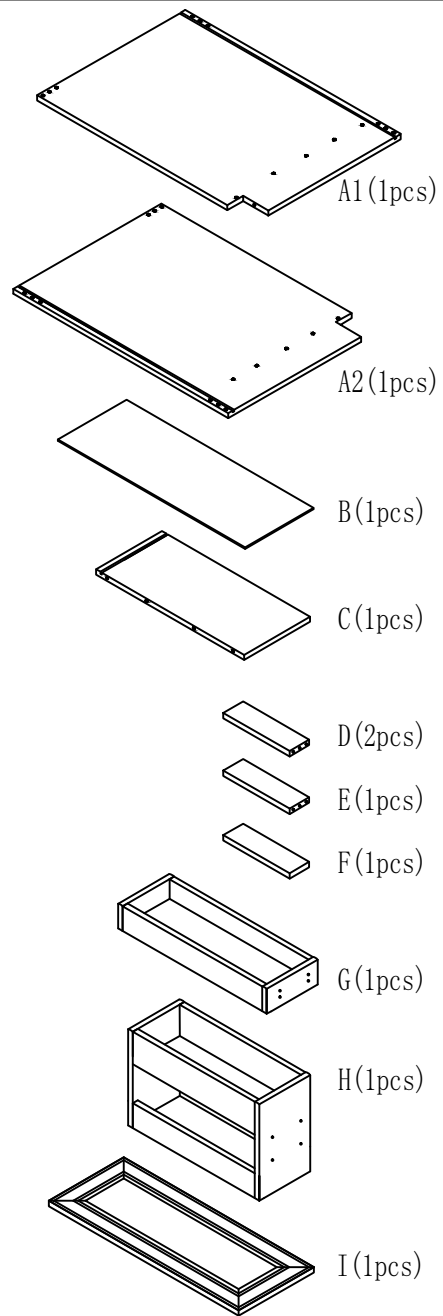


step 1

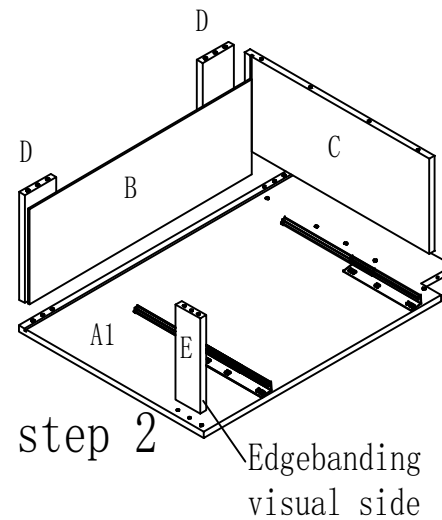


step 2

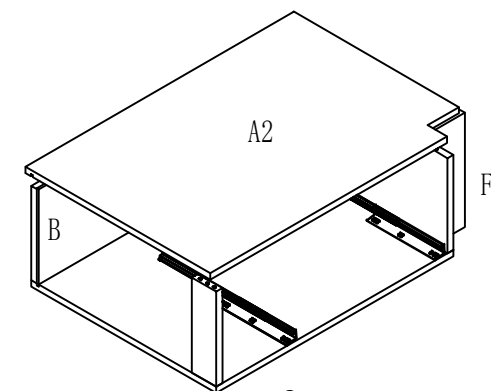


step 3

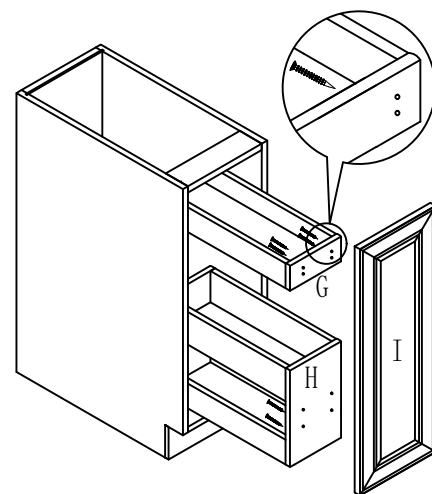

step 4


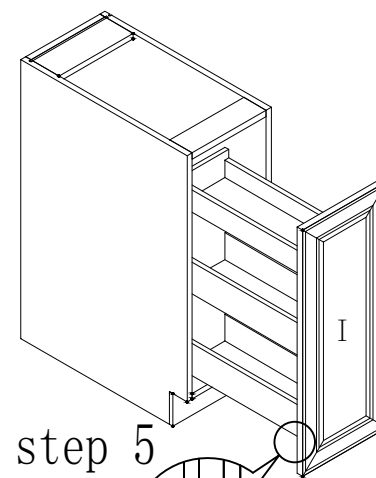


step 5

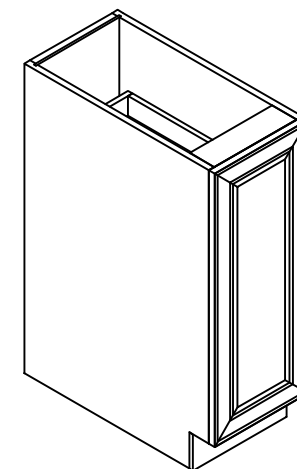


VSD3021 (L/R)


ASSEMBLY INSTRUCTION

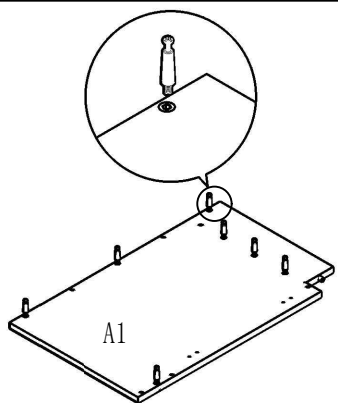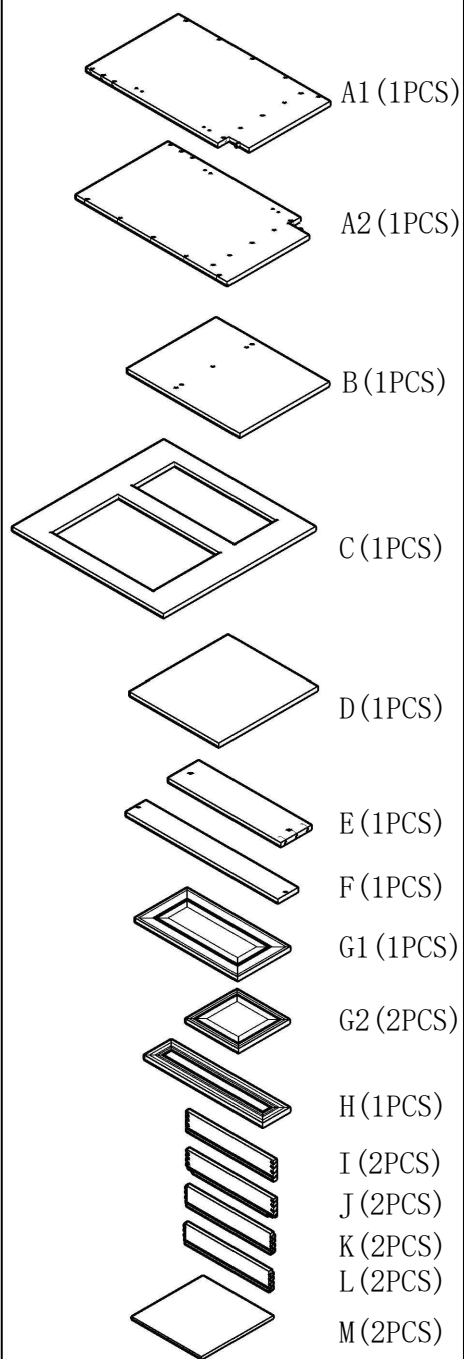


step 1

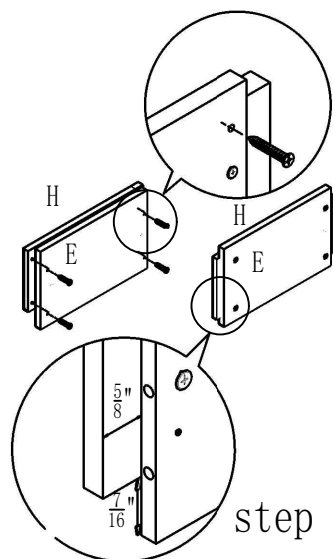


step 2

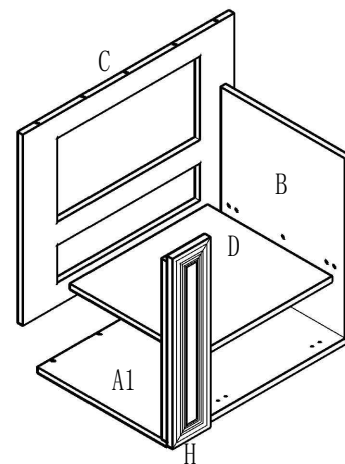


step 3

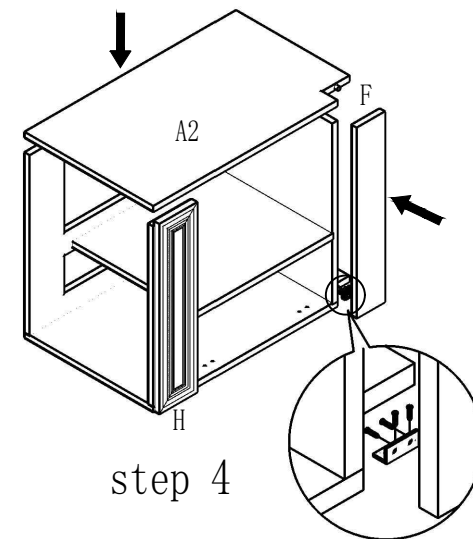


step 4

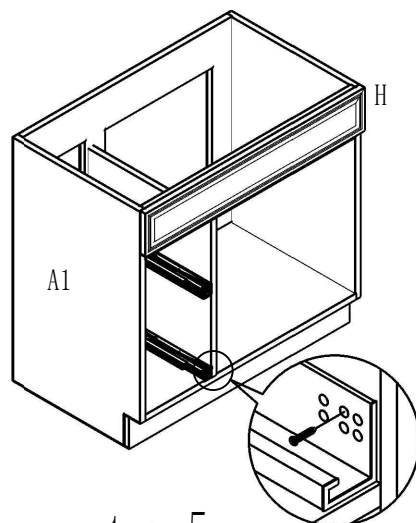


step 5

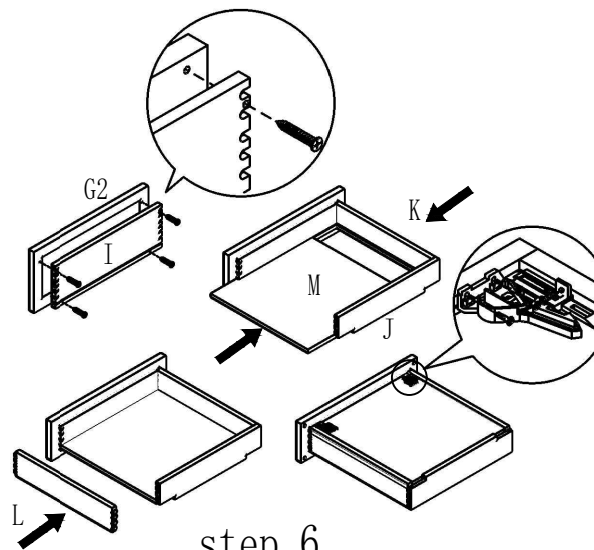

step 6

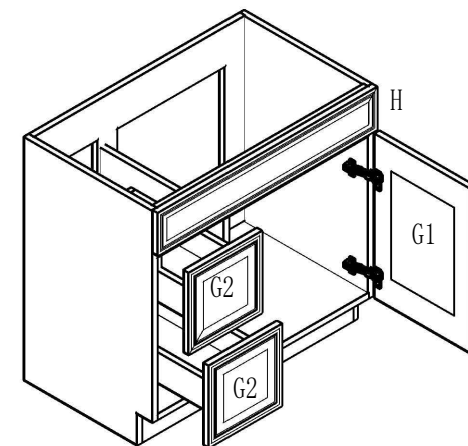



step 7

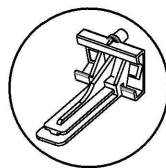


Note: The plastic support of the glide was useless.

VSD3621 (L/R) –
VSD4221 (L/R)


ASSEMBLY INSTRUCTION

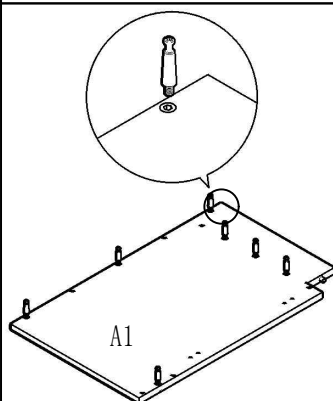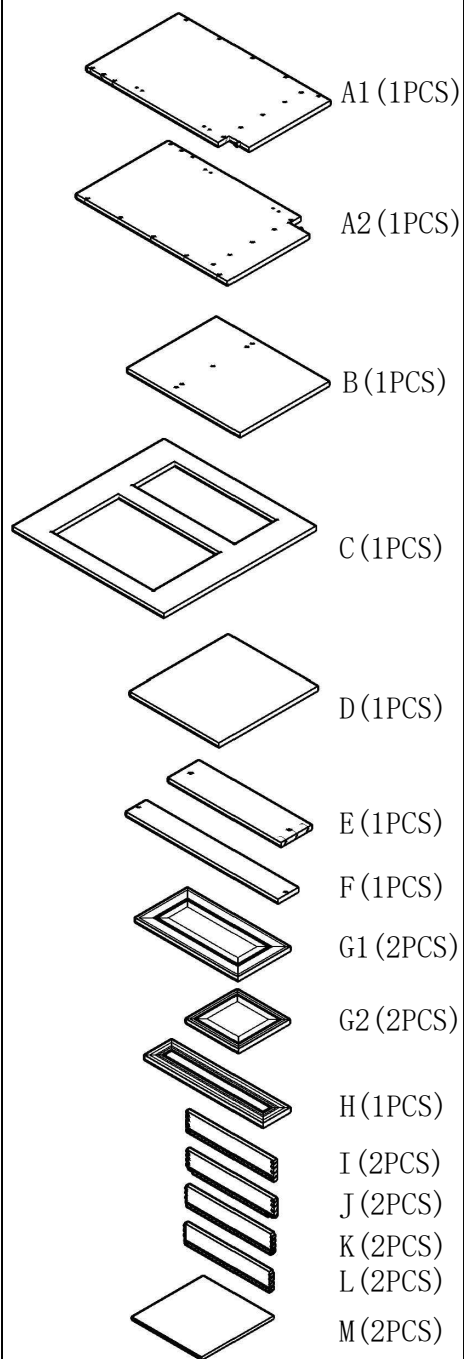


step 1

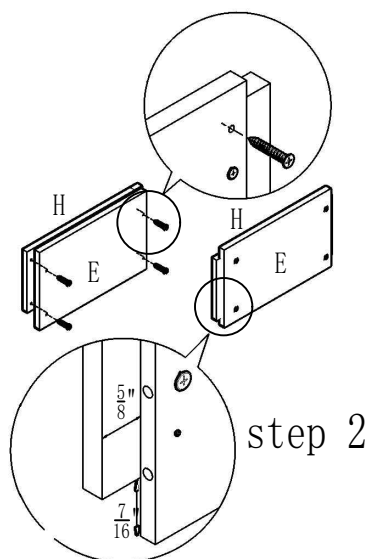


step 2

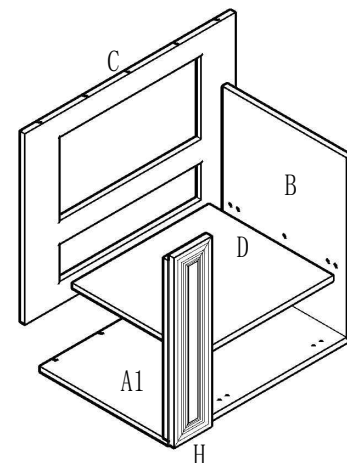


step 3

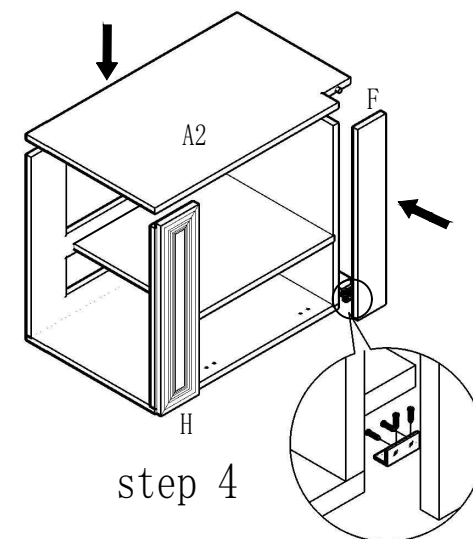


step 4

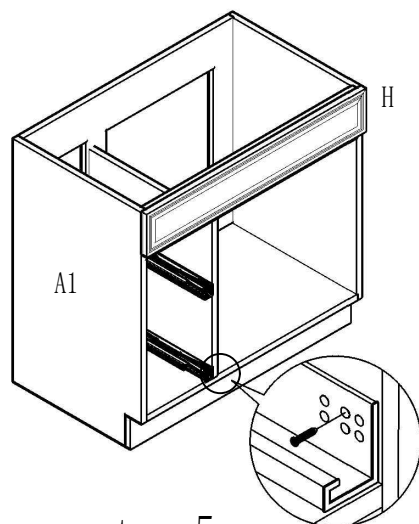


step 5

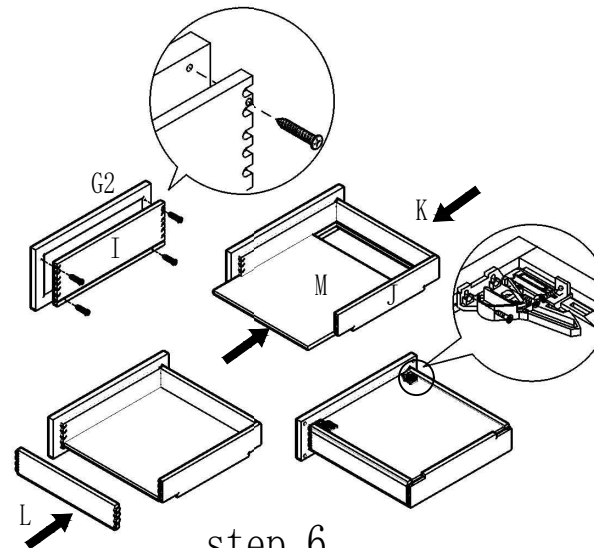










step 6

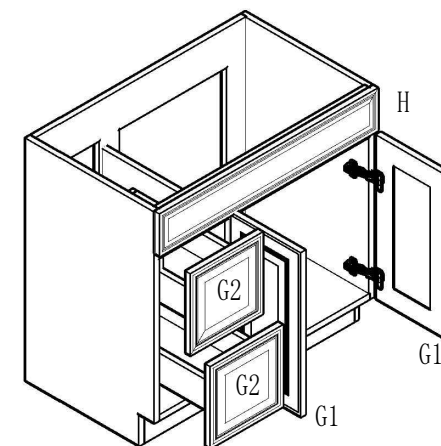

step 7

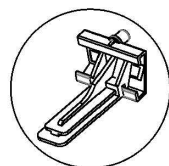



Note: The plastic support of the glide was useless.

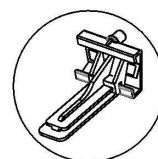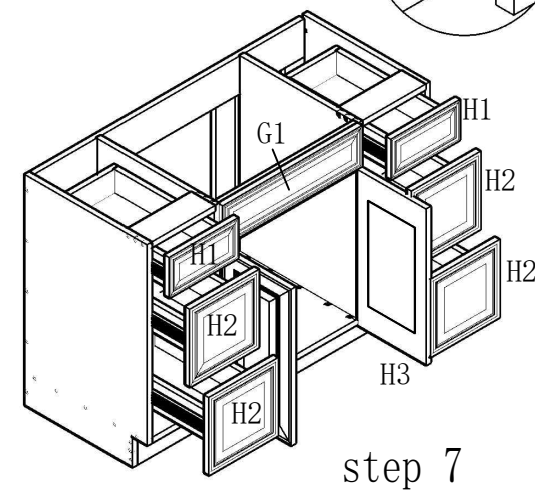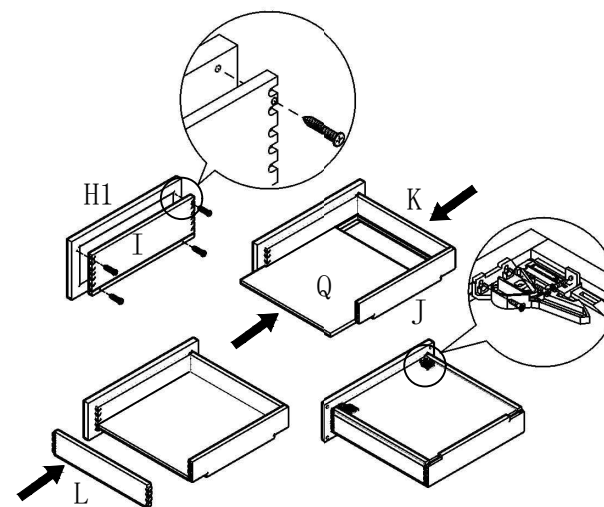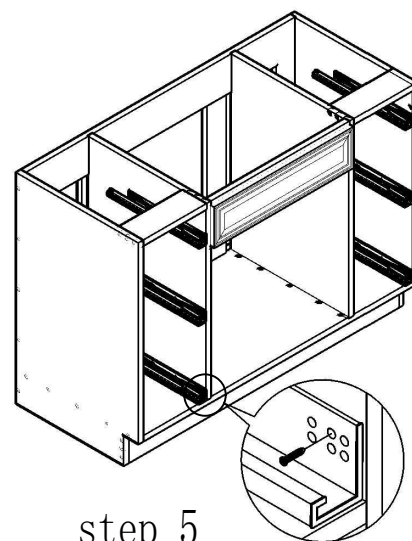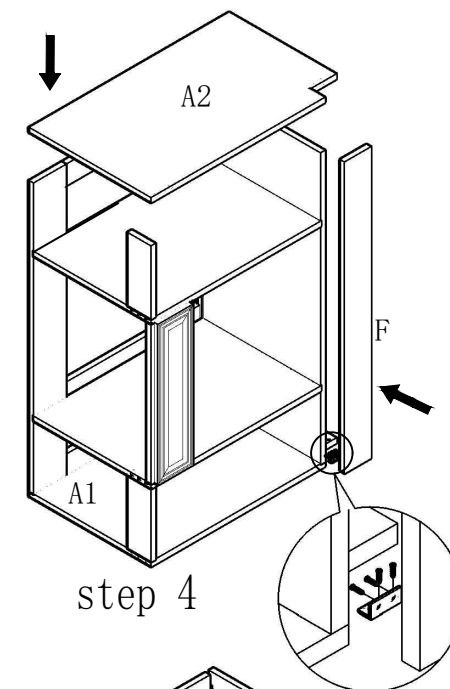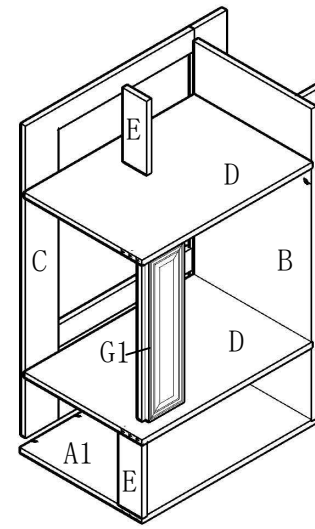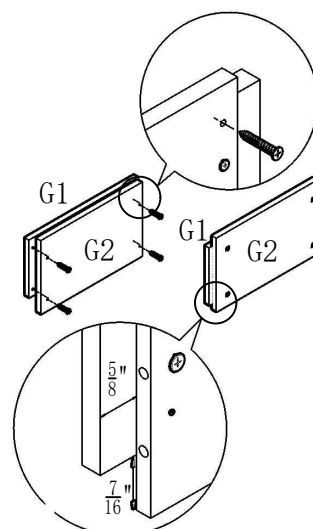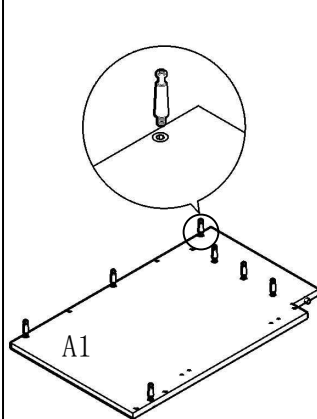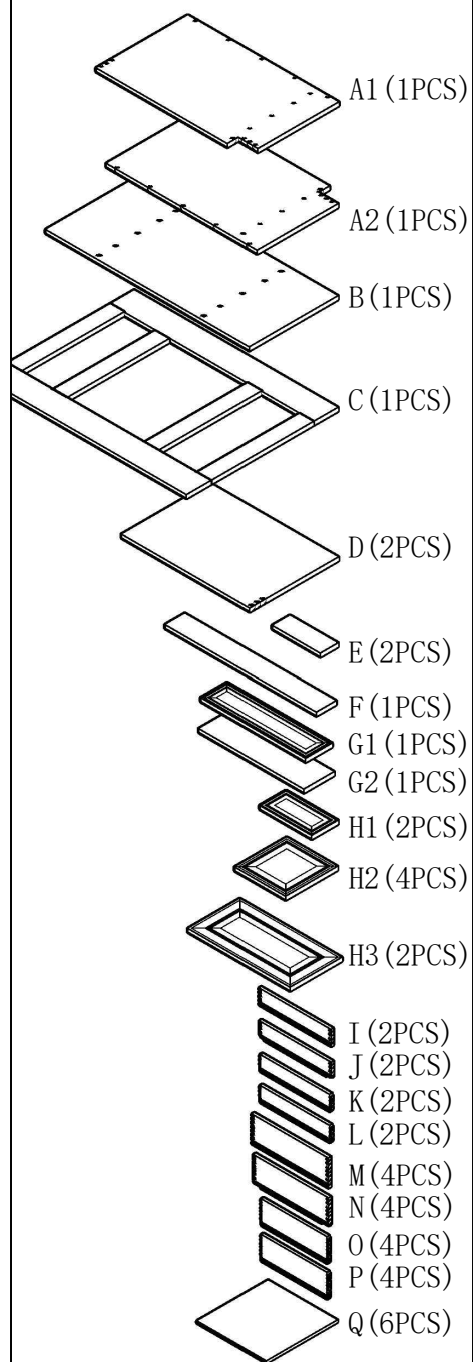


Note: The plastic support of the glide was useless.

VCD6021


ASSEMBLY INSTRUCTION

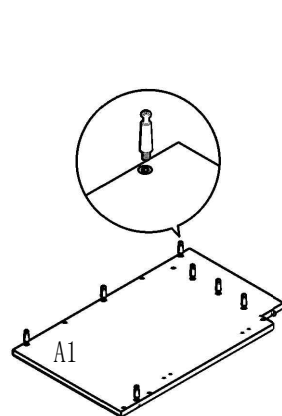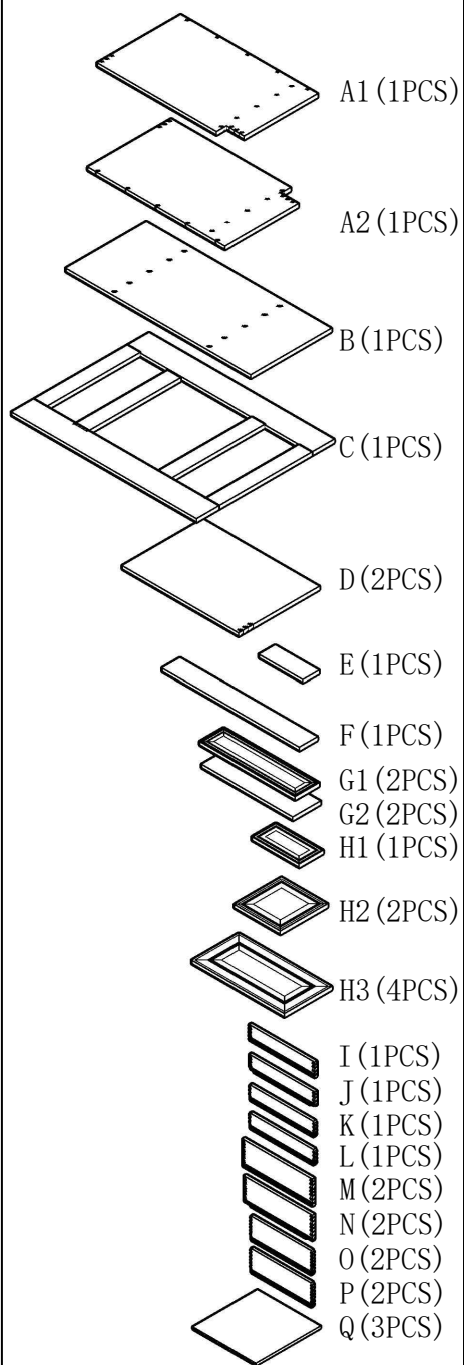


step 1

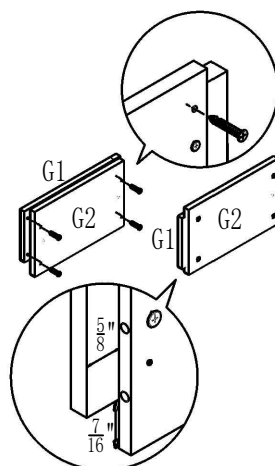


step 2

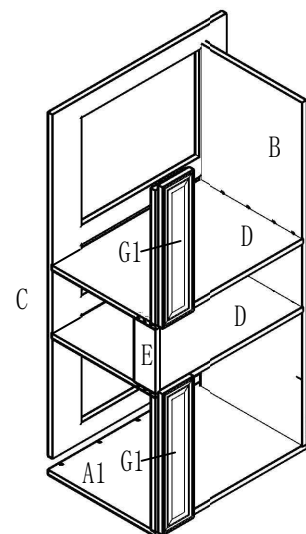


step 3

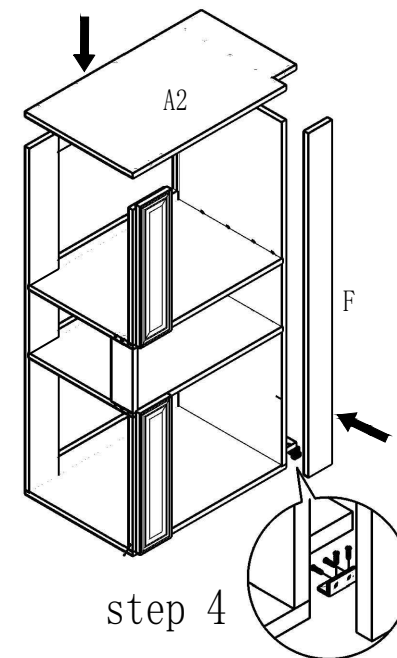


step 4

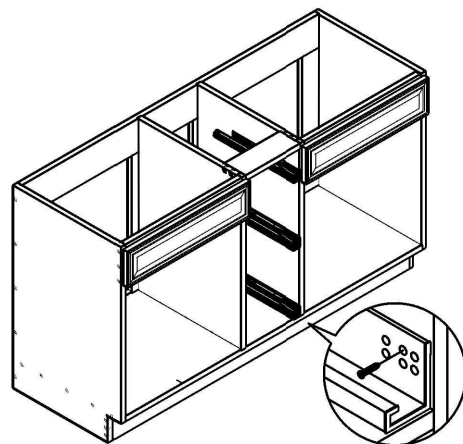

step 5

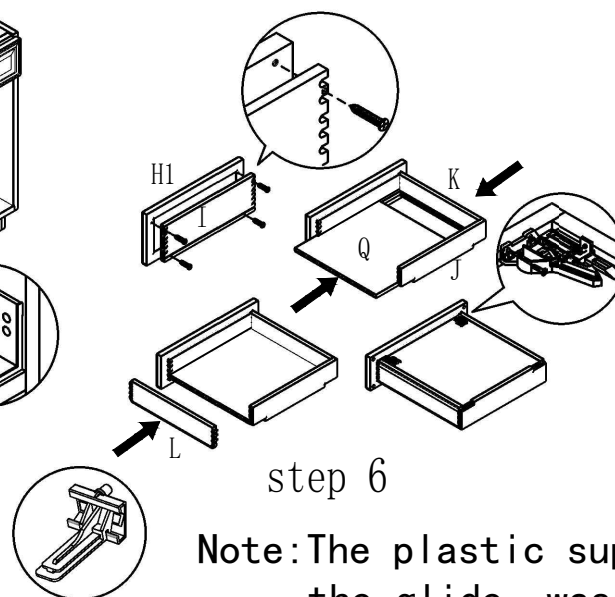

step 6

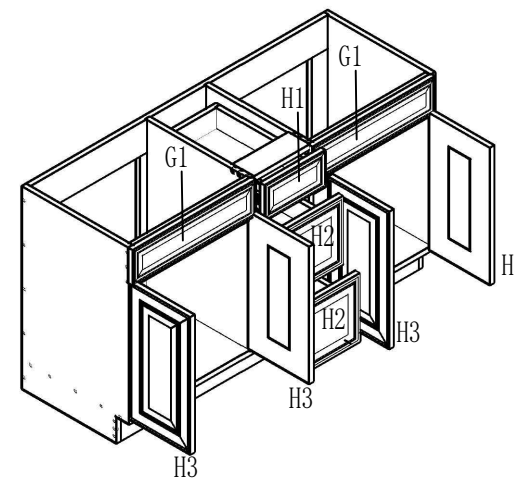



step 7

Note: The plastic support of the glide was useless.


VDB1524-2

VDB1824-2


ASSEMBLY INSTRUCTION

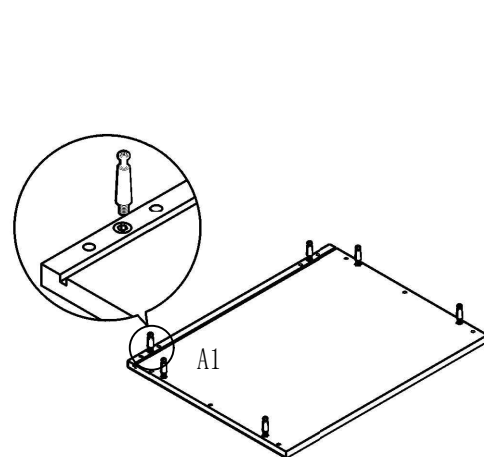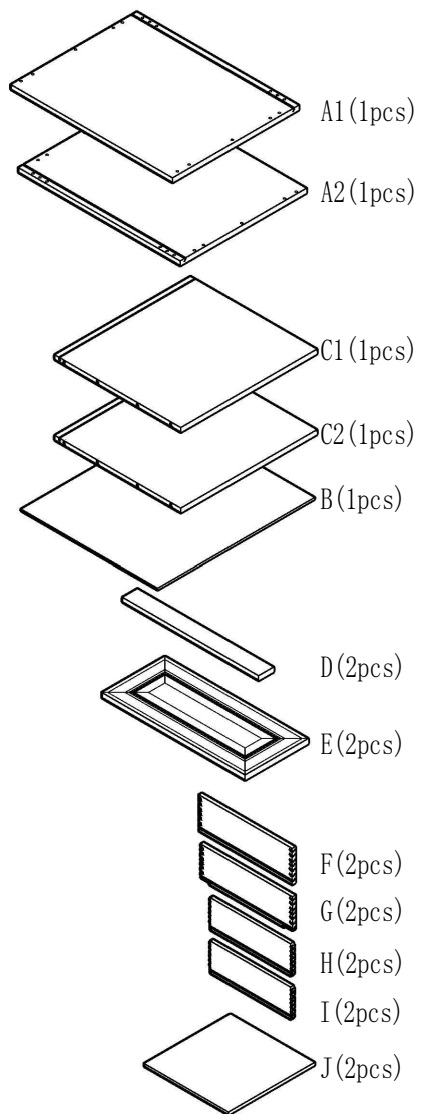


step 1

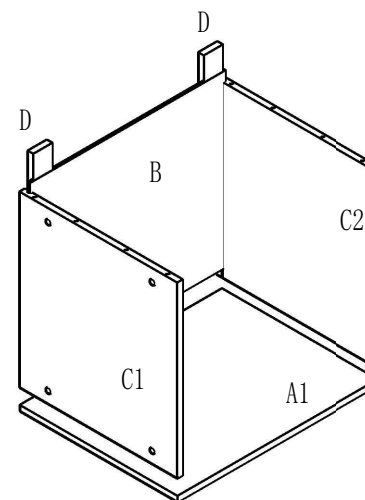


step 2

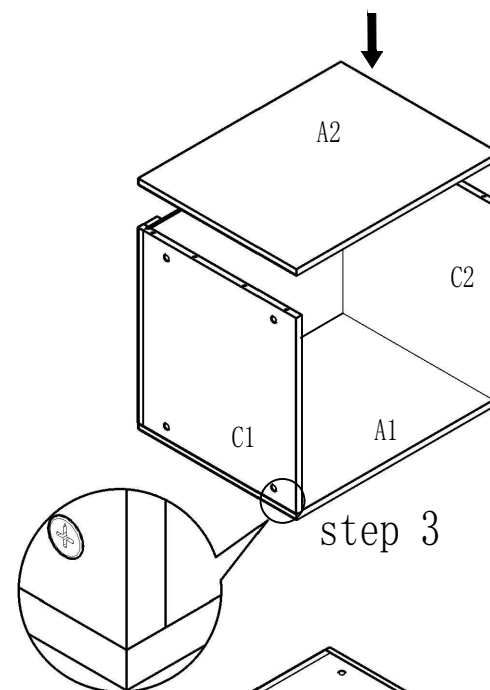


step 3

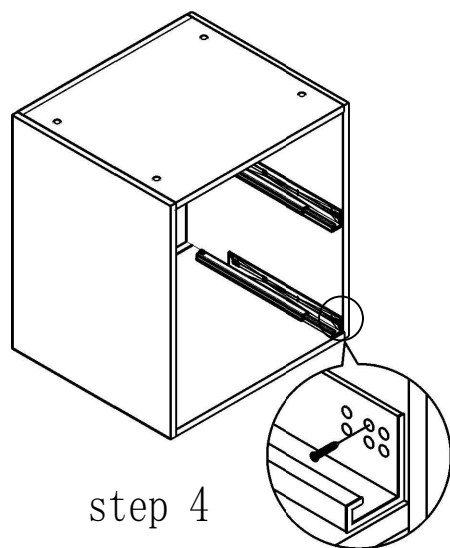


step 4

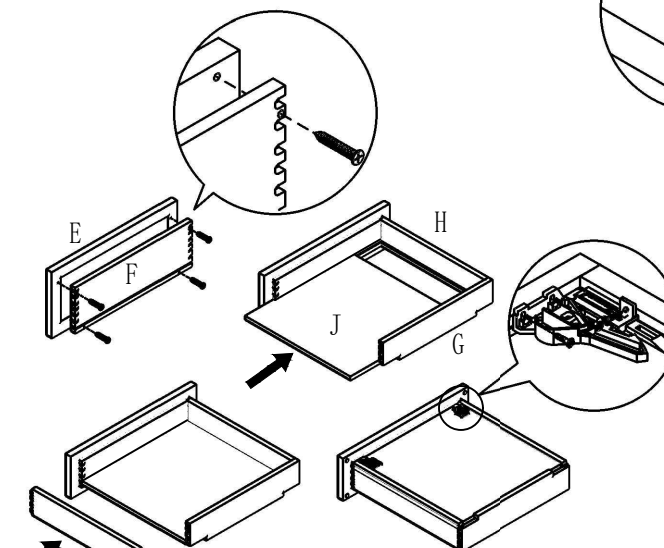

step 5

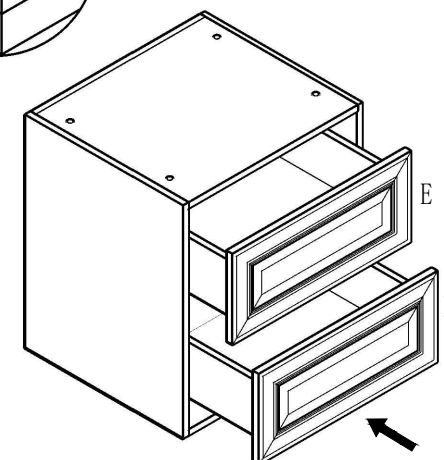



step 6

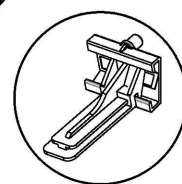


Note: The plastic support of the glide was useless.

V3024H-V3624H


ASSEMBLY INSTRUCTION

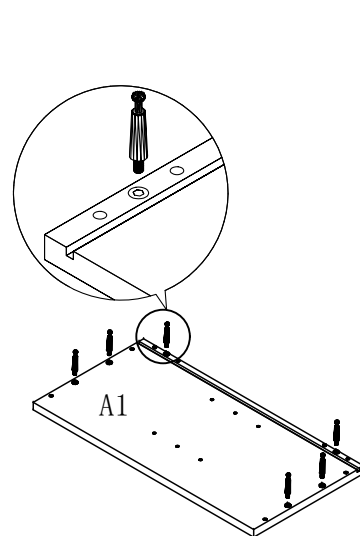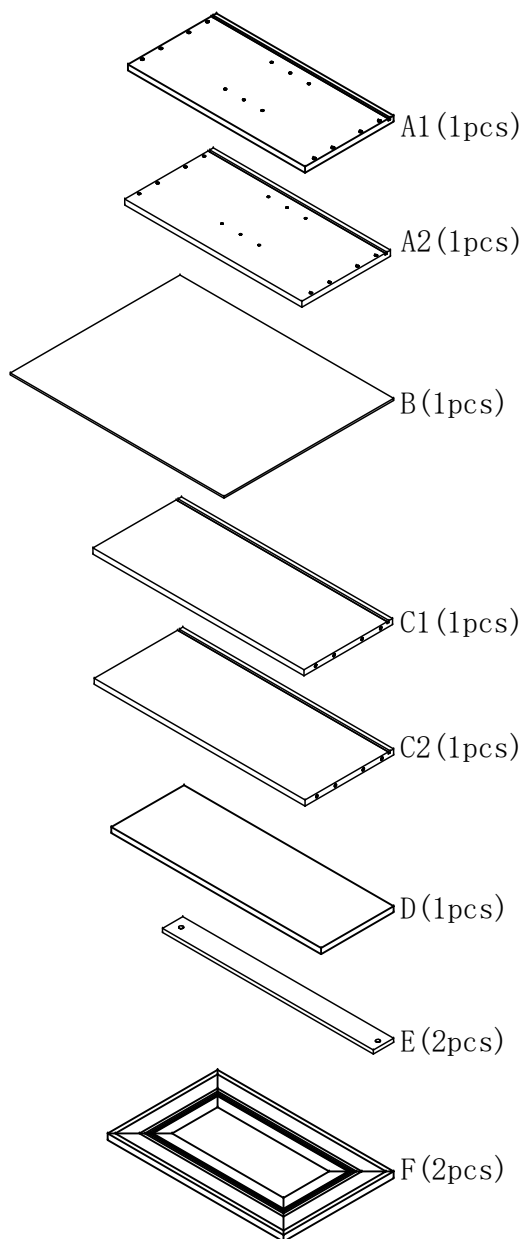


step 1

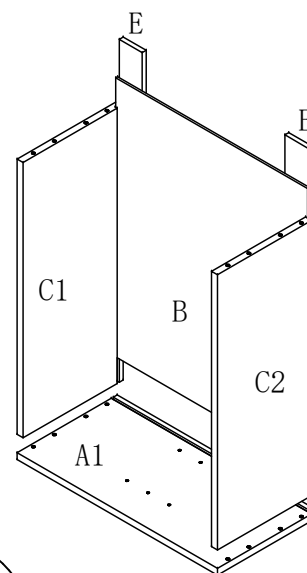


step 2

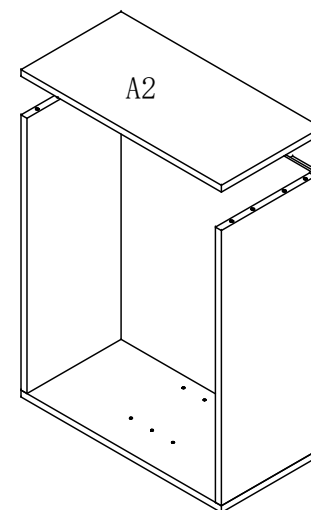


step 3


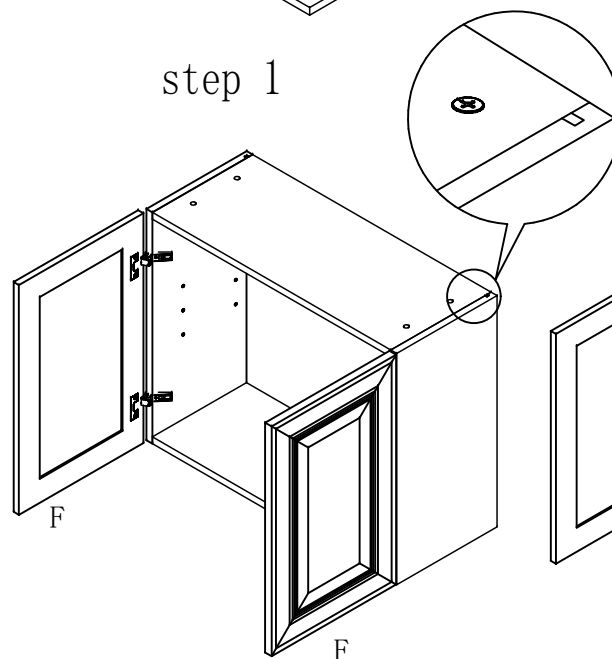


step 4

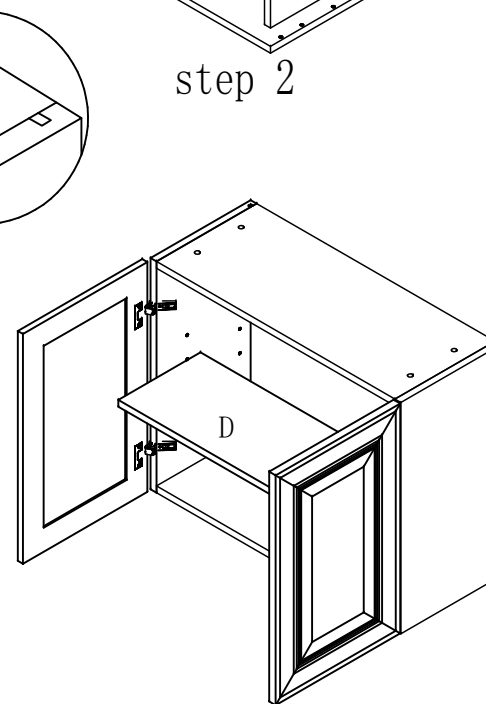


step 5

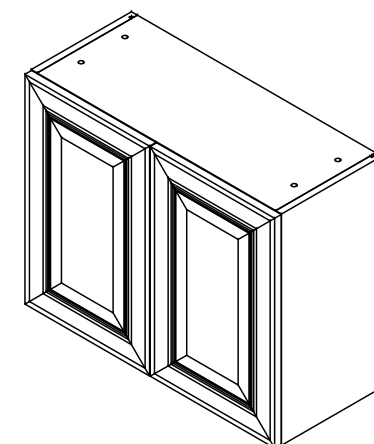


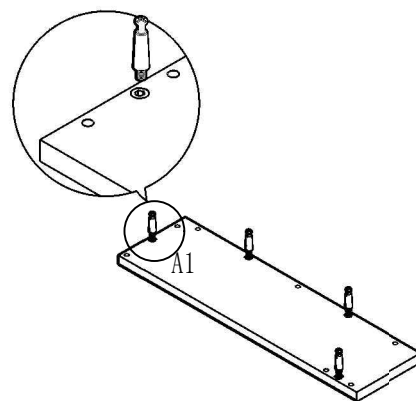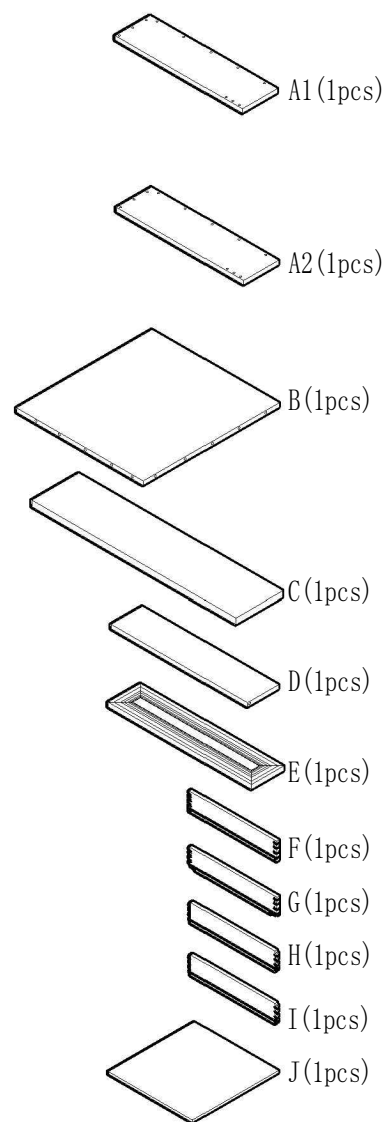


step 1

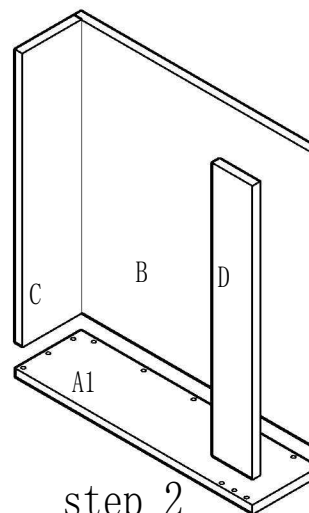


step 2

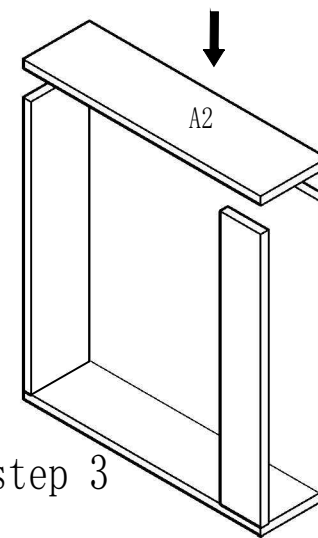


step 3

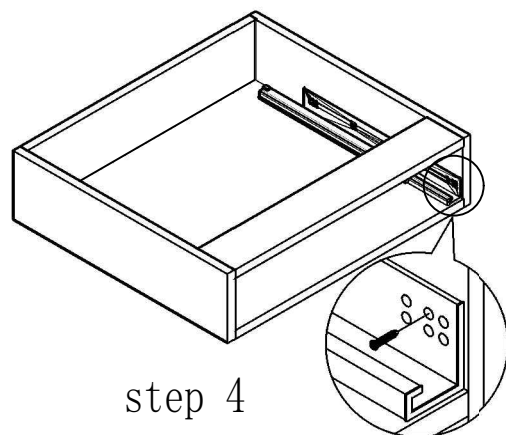


step 4

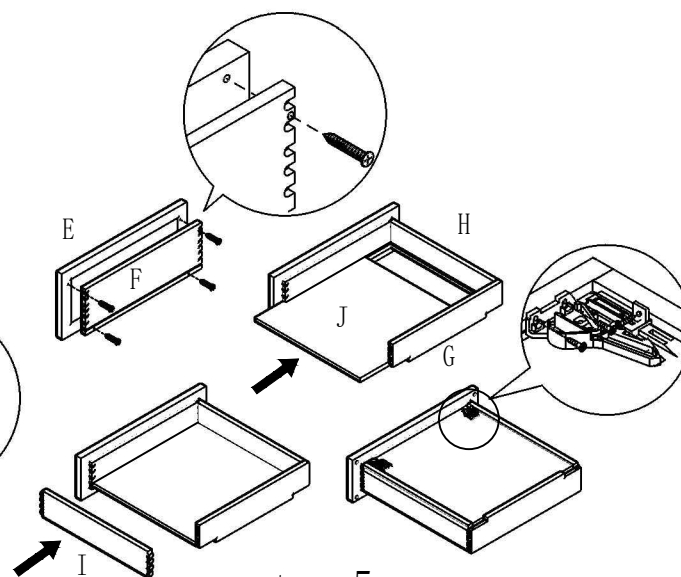

step 5

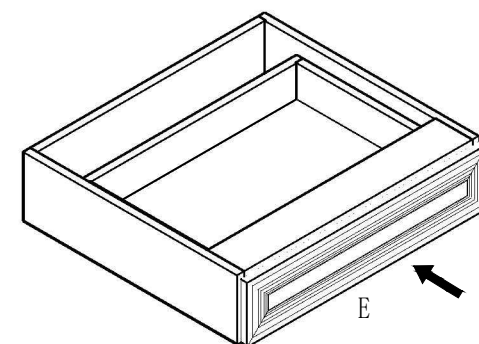



step 6

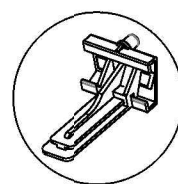


Note: The plastic support of the glide was useless.

PC1884-PC1896


ASSEMBLY INSTRUCTION

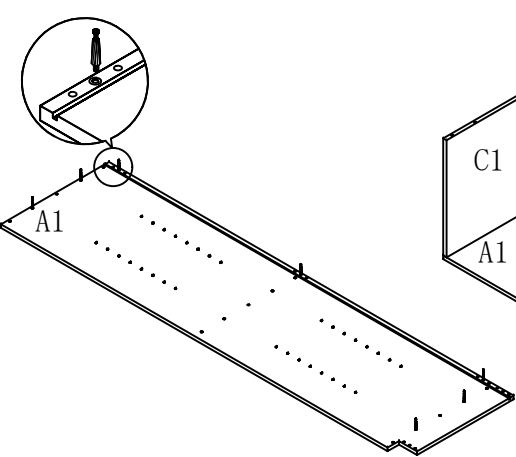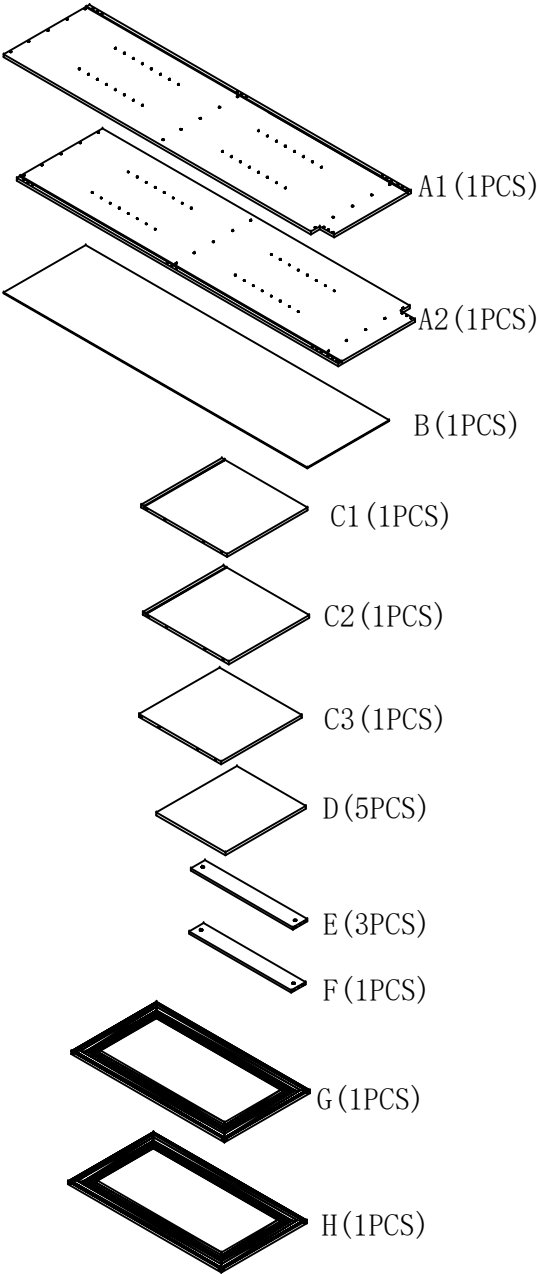


step 1

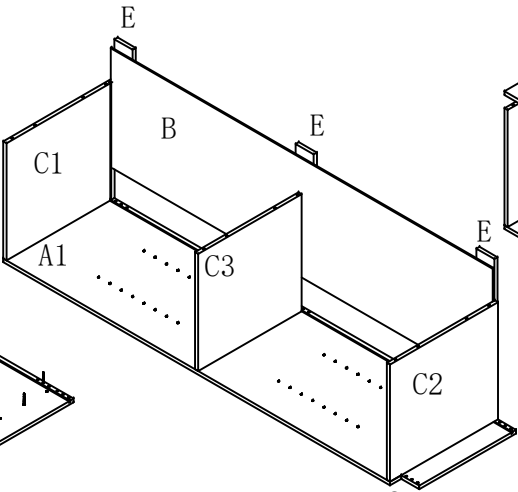


step 2

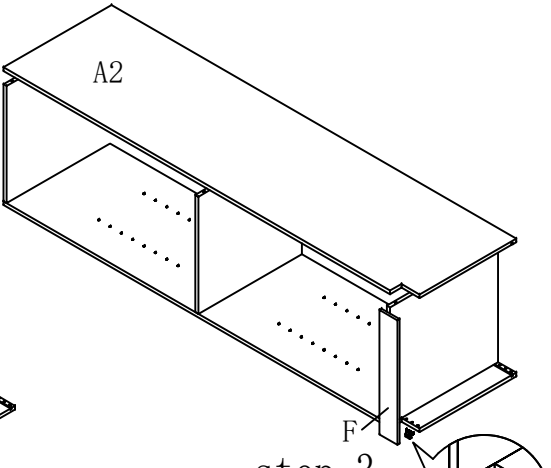


step 3

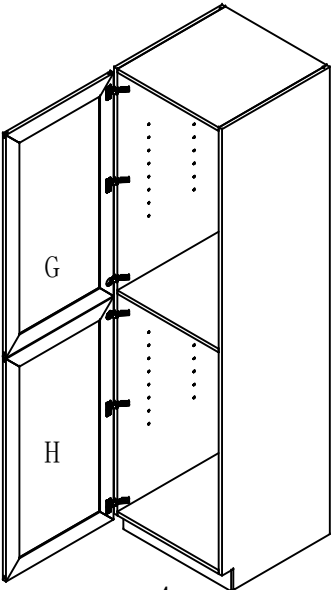

step 4

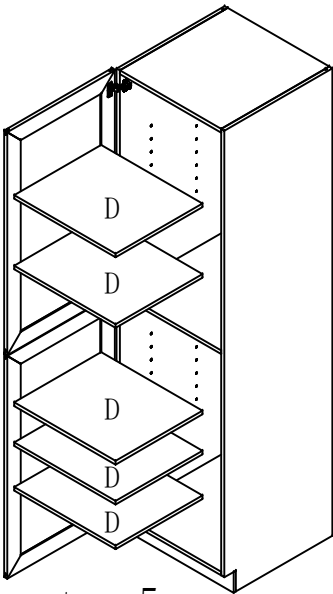



step 5

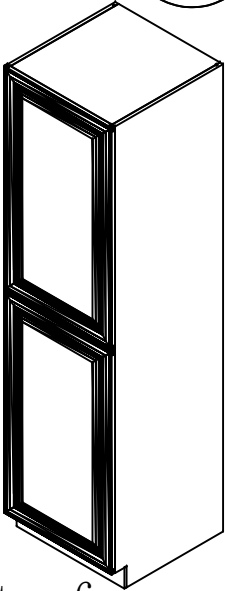


step 6

PC2484-PC3696


ASSEMBLY INSTRUCTION

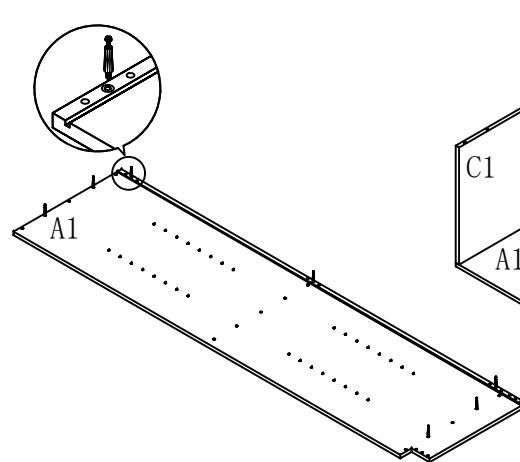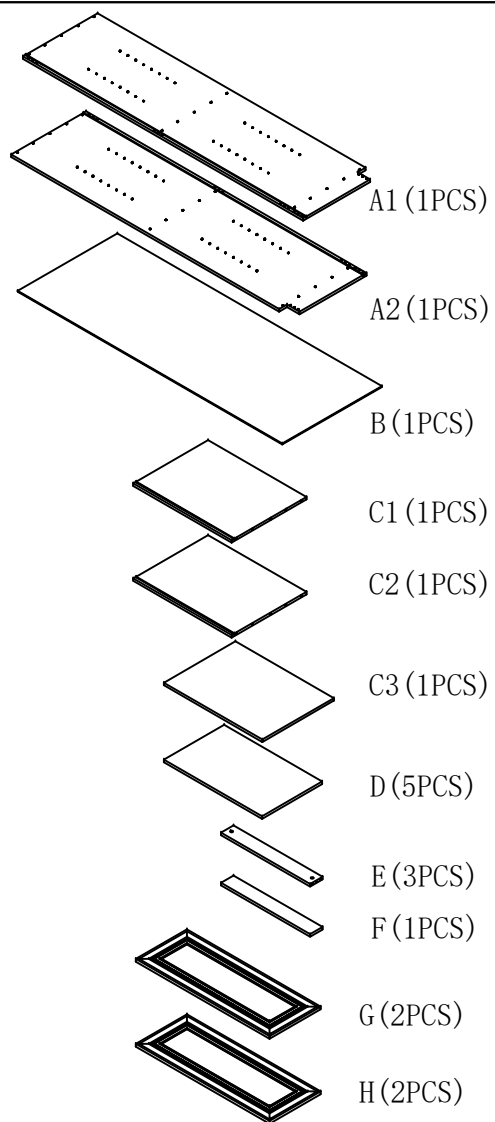


step 1

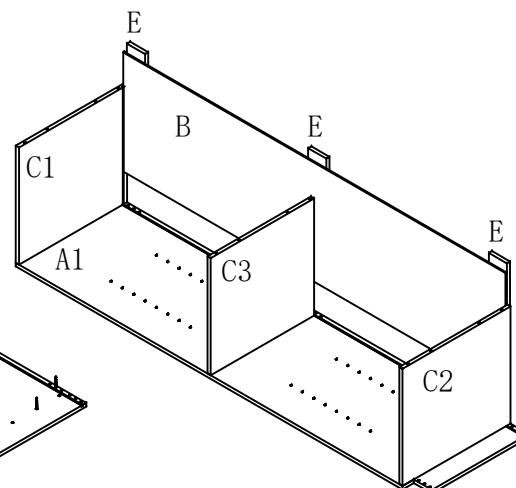


step 2

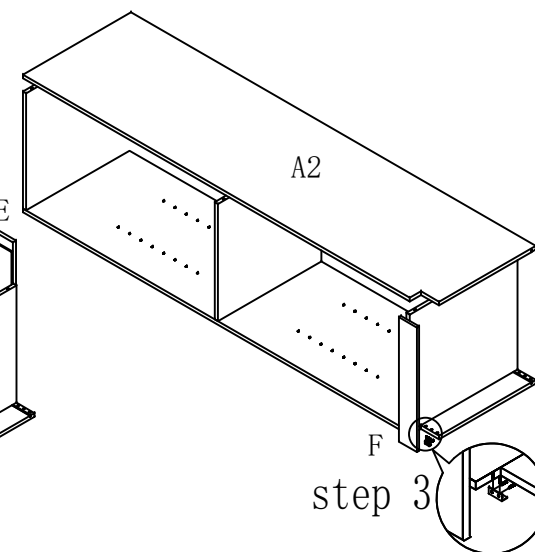


step 3

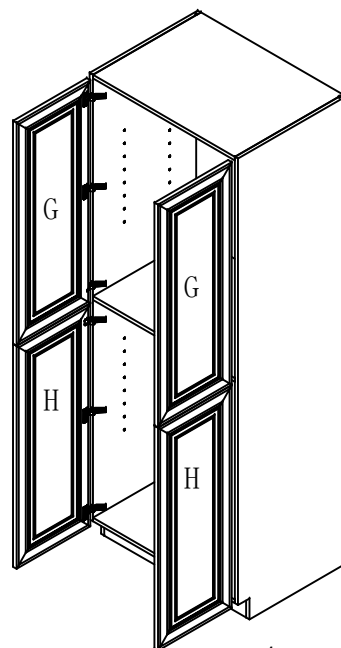

step 4

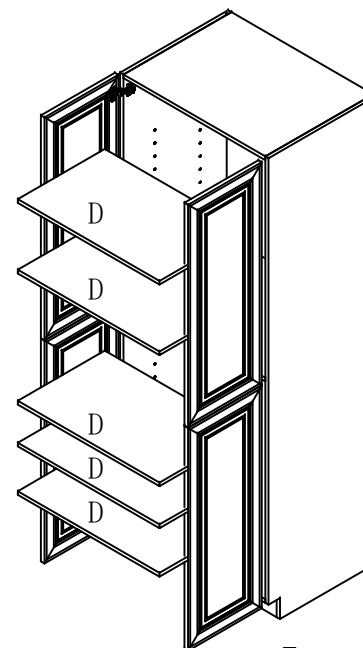







step 5

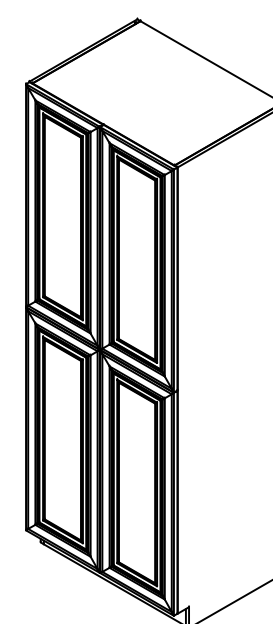

step 6

OC2484-OC3084



ASSEMBLY INSTRUCTION

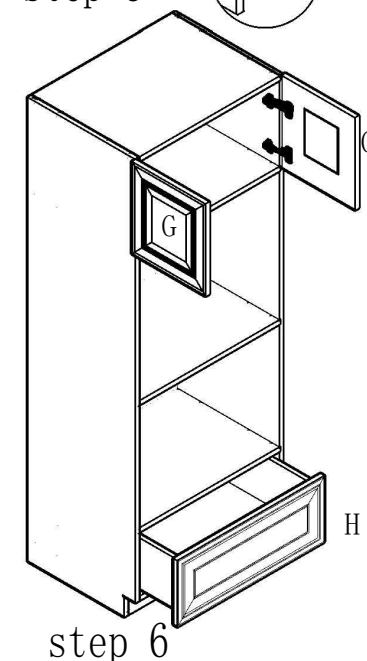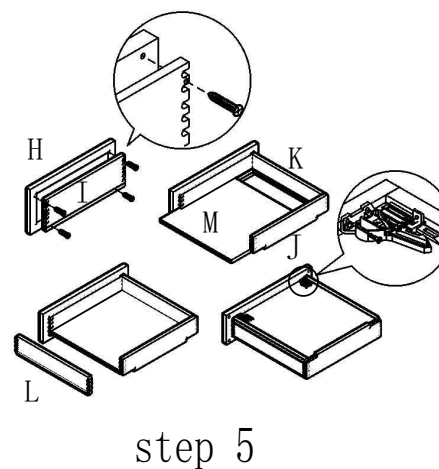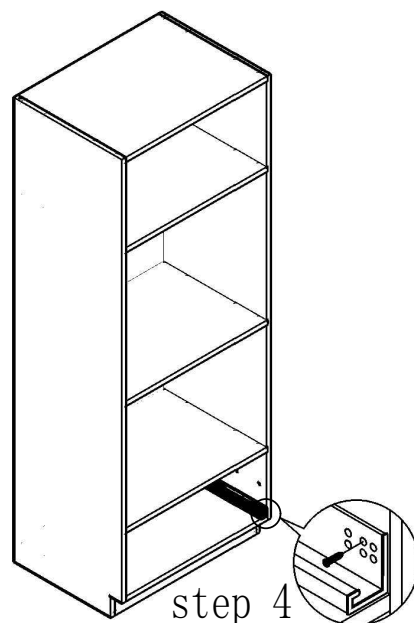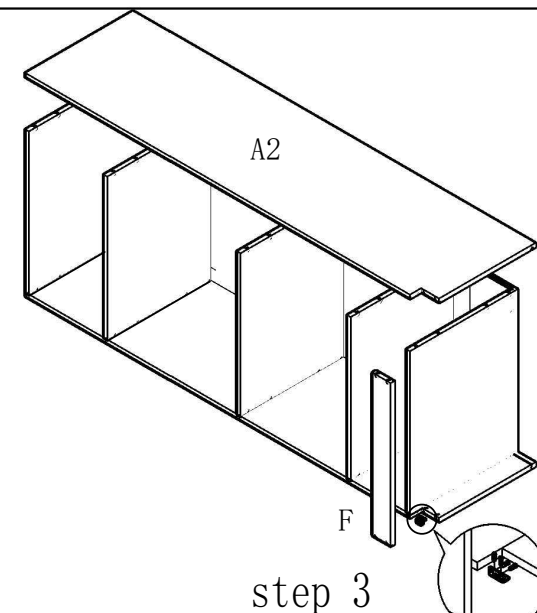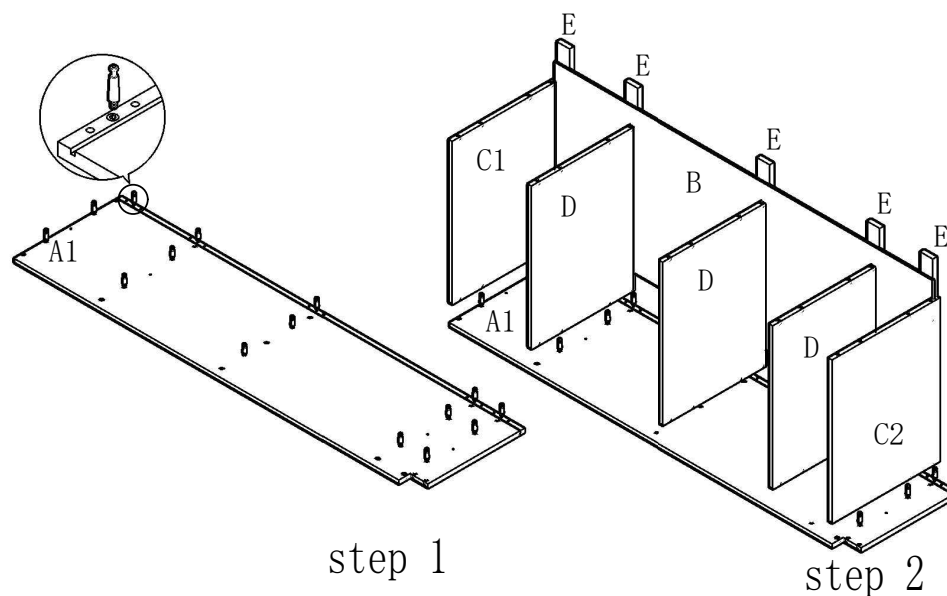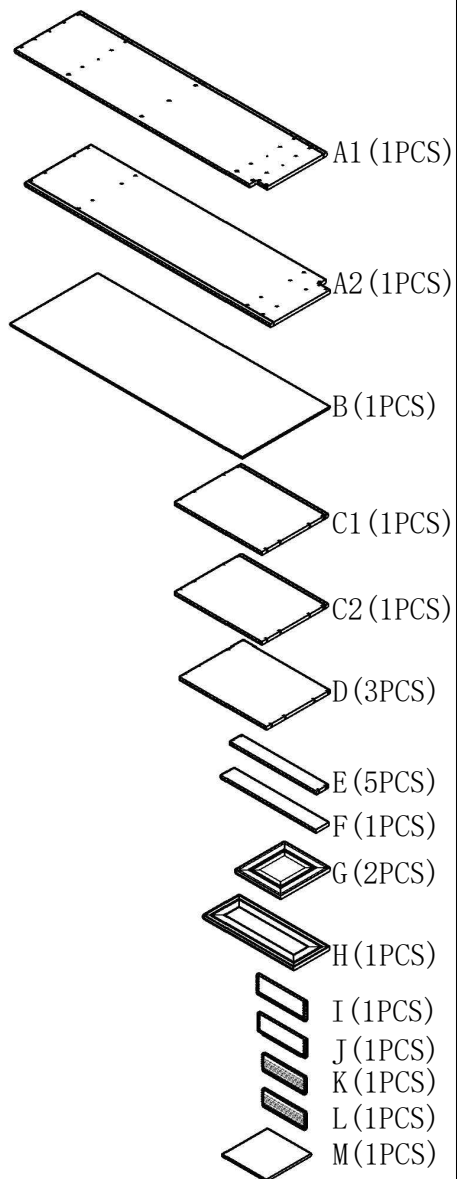


Note: The plastic support of the glide was useless.

OC2490-OC3090


ASSEMBLY INSTRUCTION

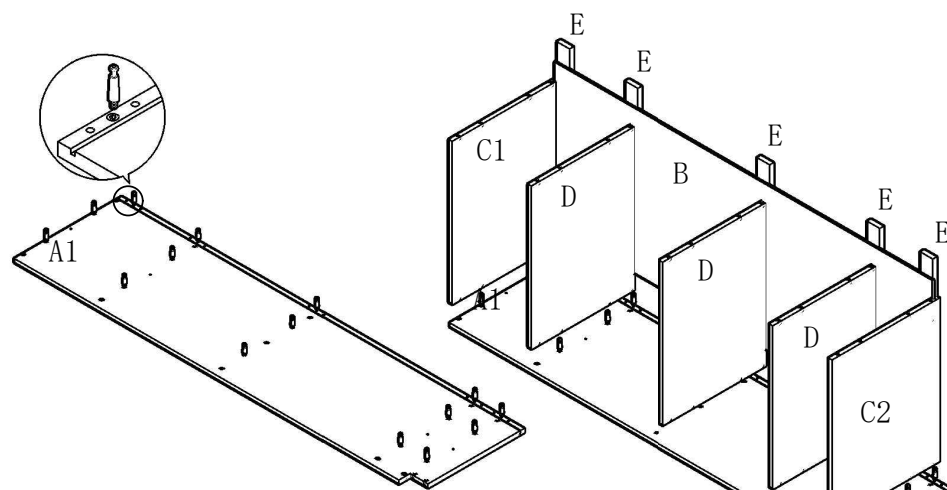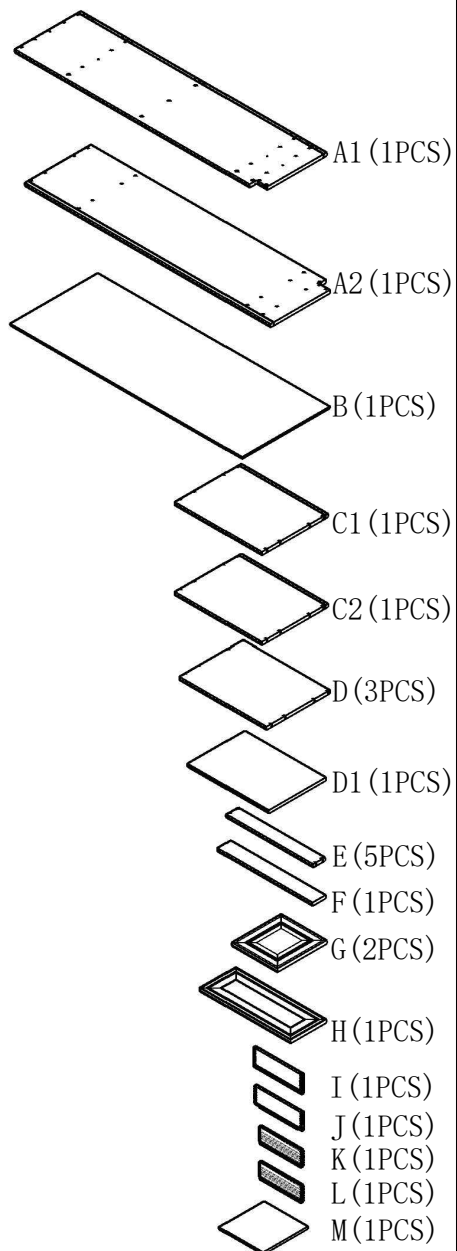


step 1

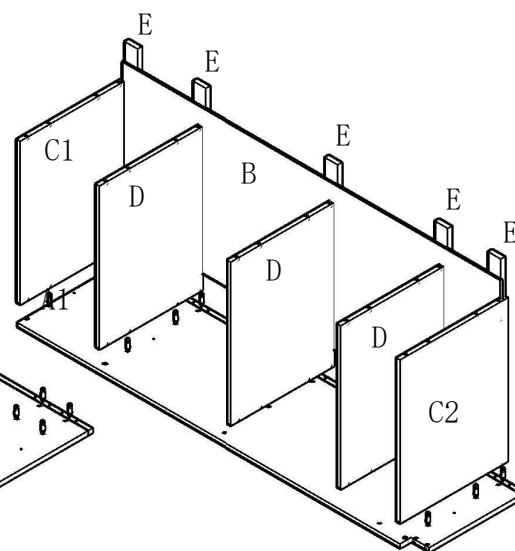


step 2

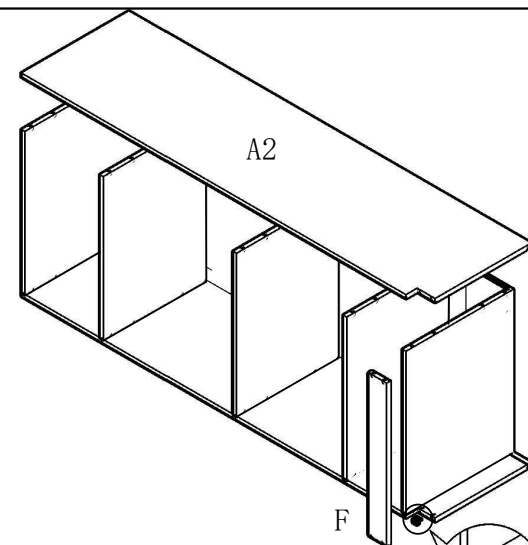


step 3

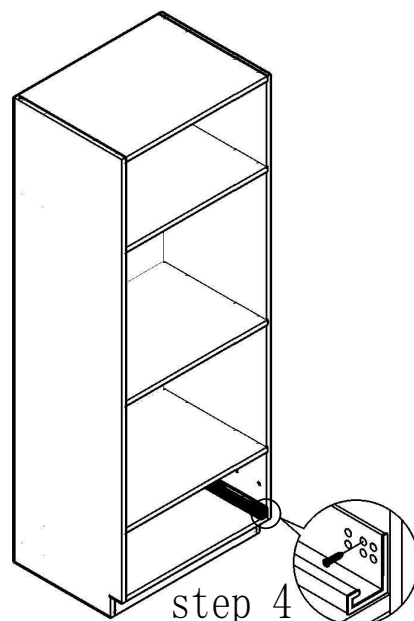

step 4

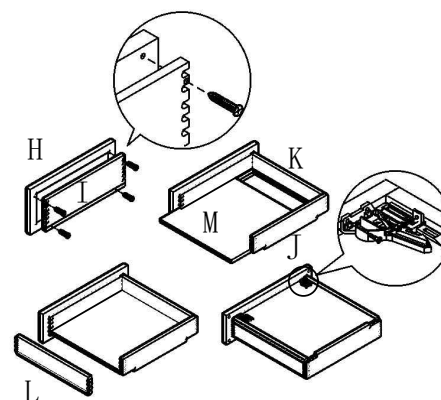

step 5

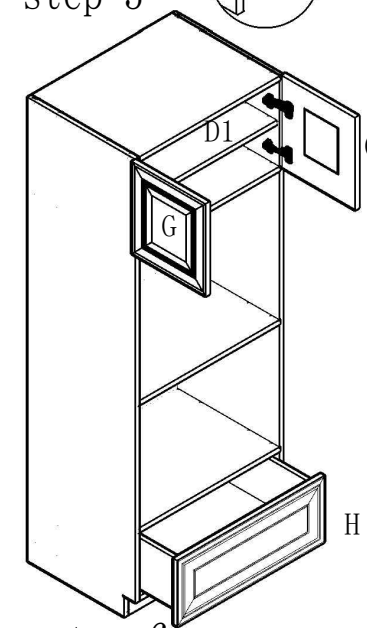







step 6



Note: The plastic support of the glide was useless.

OC2496-OC3096

ASSEMBLY INSTRUCTION

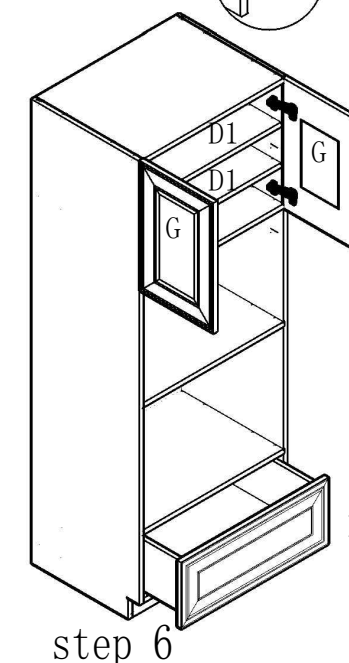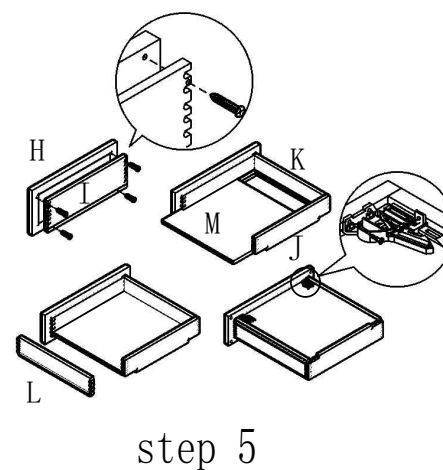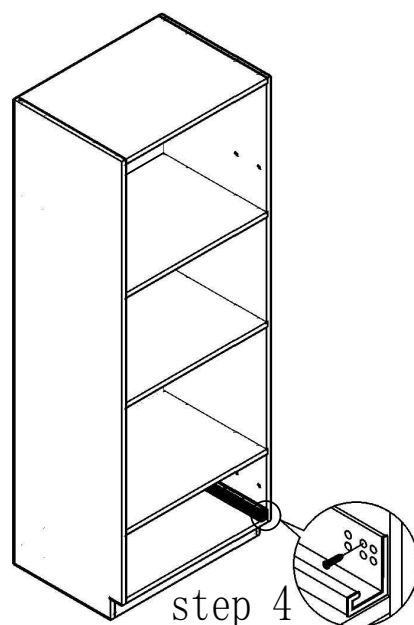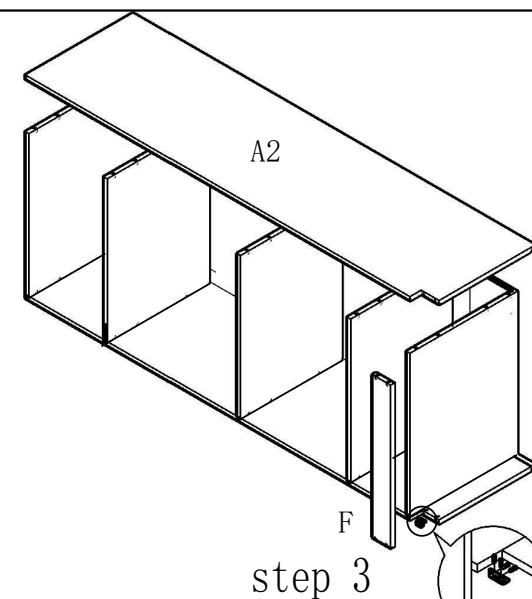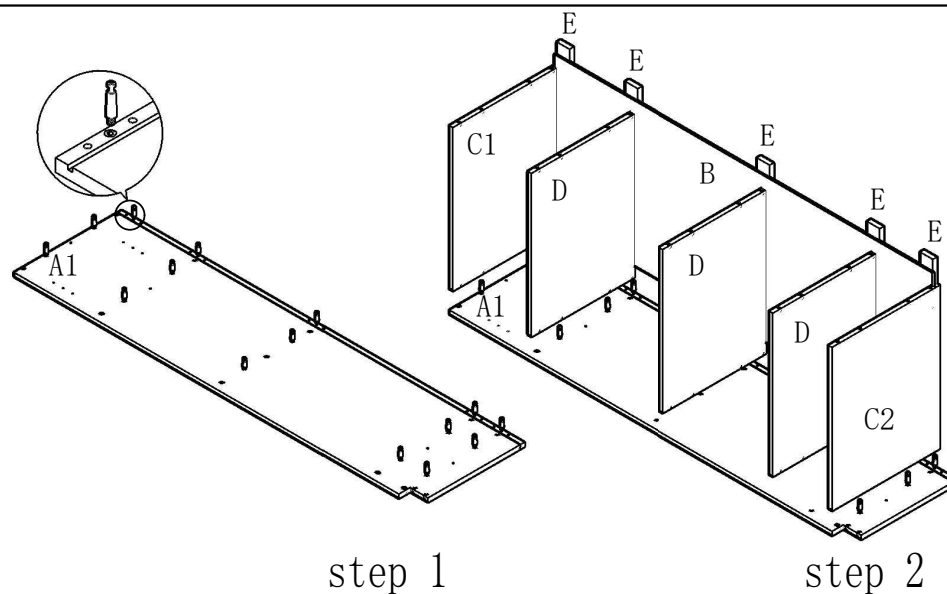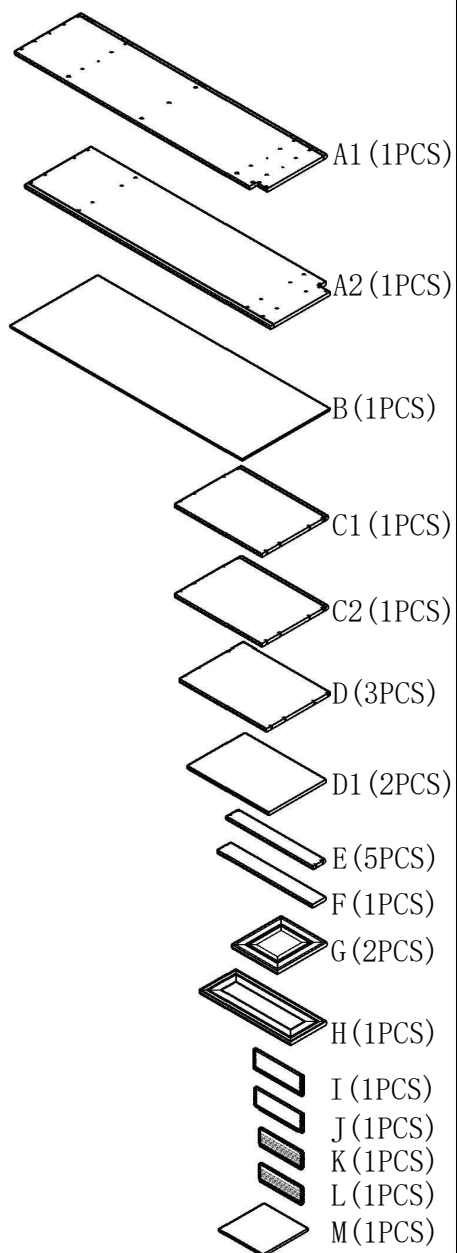

Note: The plastic support of the glide was useless.