

## MODEL 500 500R PRO 500R80 BENCHES & CONSOLES INSTALLATION INSTRUCTIONS



Secure, stable, impact resistant, practical and durable!

## Installation Instructions of the benches/consoles to the PE Floor Plates Whaly 500 - 500R Professional

(only by professional authorized Whaly dealer/workshop)


## Please note; Below instruction are very important because of the risks of leaks!

- 1. Never take out any floor plates.
- 2. Use only original Whaly Screws to install the consoles/benches to the floor plates.
- 3. Pre drill (Ø3 mm) will be necessary to use the original screws to install the Benches/console to the floor plates (also use enough Kit (Sika). Pre drill max 29 mm deep in the floor plates!
- **4.** Be sure to place the screws in the pre drilled hole, so there will be no extra/wrong drilled holes and no leaks! (also use Kit (sika))





Possible position of the Console, and a bench in the back of the boat

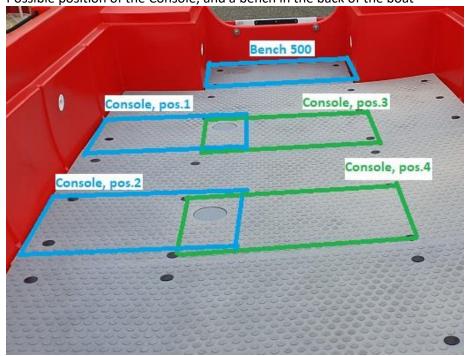


**4.2** Installation of the console and placing of cables under the floorplate. (Note; Never take out any floor plates!)


Take out only the (needed) Caps in the floor plates





Drill both sides of the Caps



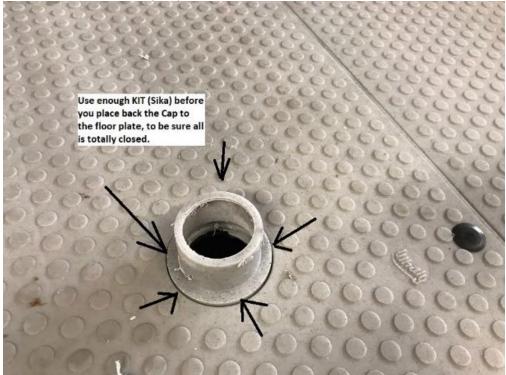

**4.4** You can place the Console and Benches on the floorplates where you like, with the use of the original Whaly screws (delivered with the console/benches).

**Predrill** (ø 3mm) will be necessary max. 29mm deep! (so you will only pre drill in the floor plates and Not into the boat)

You can use 6 screws (+Sikaflex, Kit) for the benches and for the console.

If you like to install the console in the middle without support of a bench in front of the console, You can use more screws 8-10 and the use of Kit (Sikaflex) to install the console.



Pre drill max 29 mm





## **4.5** Some pictures (only as examples)





Inside of the bench



Bench in front of console



Fuel tank inside of a bench



Steering Console

















Secure, stable, impact resistant, practical and durable!