



PHOMI  
PHOMI

UNFIRED FLEXI CLAY

## INSTALLATION GUIDE



External cladding



Internal cladding



Ceiling



Landscaping



Furniture




Flooring


# MCM CLADDING

MCM panels can have groove pattern as well as butt joint-as per the Architect's choice.

Although ,to get a seamless finish, we recommend butt joint in a staggered pattern .

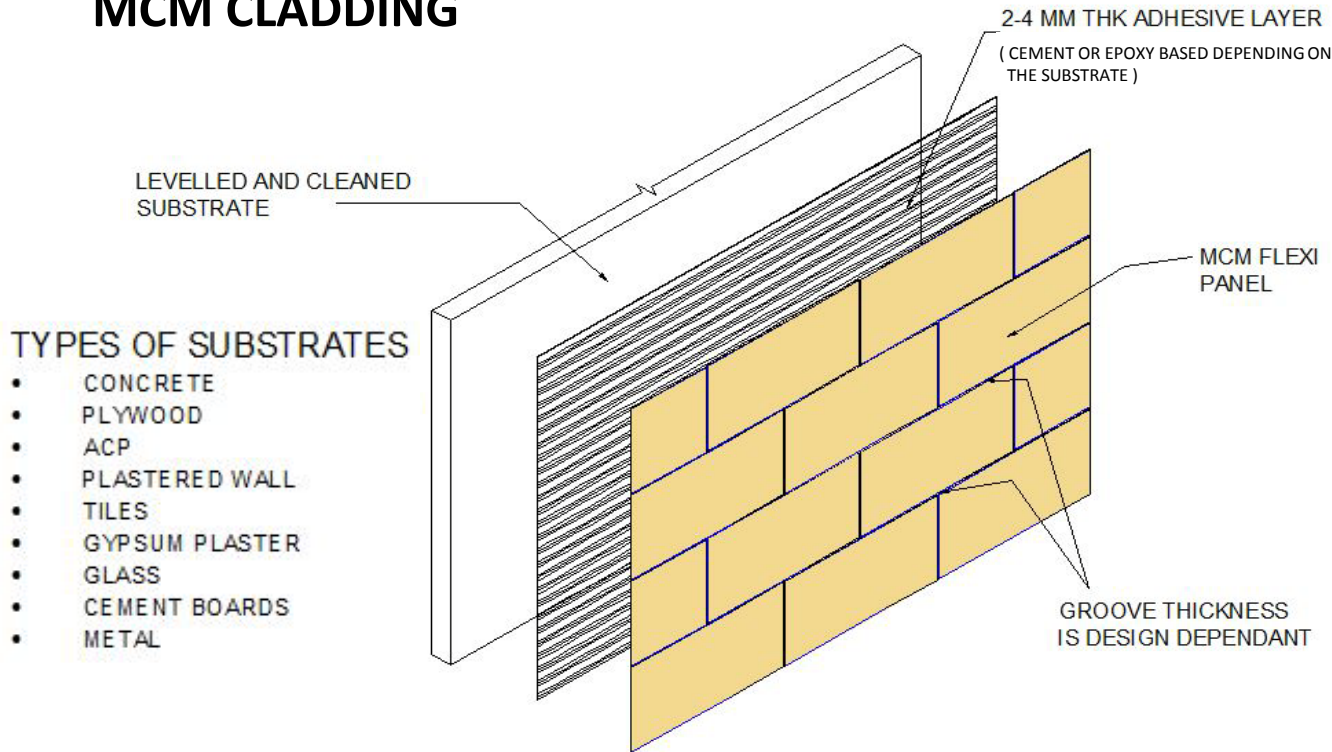


## DESIRED EDGE FINISH

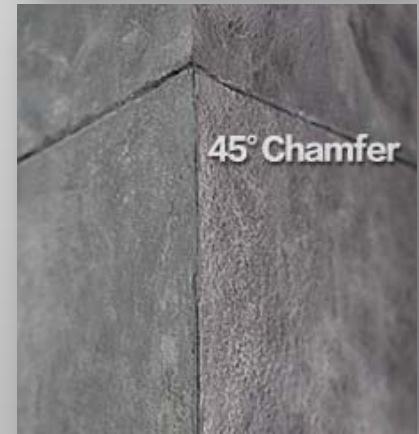


MCM panels can be applied in any given pattern :

### Staggered pattern

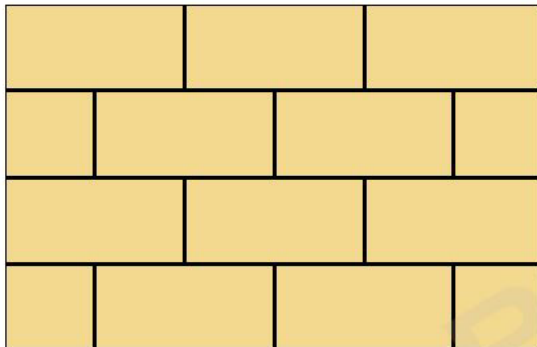

### Stacked pattern

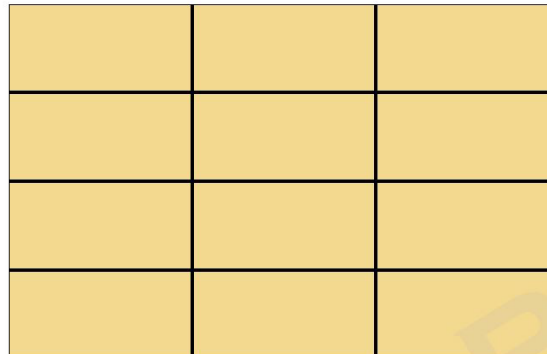

Apart from stacked and staggered pattern, various different patterns can be used as per Architect's design.

# INSTALLATION PROCESS

## STEP 1 : Surface Preparation



- Wash the surface area and allow it to dry
- Remove any debris, raised or uneven surfaces

## STEP 2 : Cleaning and cutting




- Clean the MCM panels properly and use a lead pencil to mark the cut line.
- Use a tile cutting machine for cutting.

## STEP 3 : Pasting



- Apply 1-2mm thickness of the recommended specific adhesive onto the back side of panel and paste the MCM Product on the wall.

## STEP 4 : Spacers (In case of grooves)

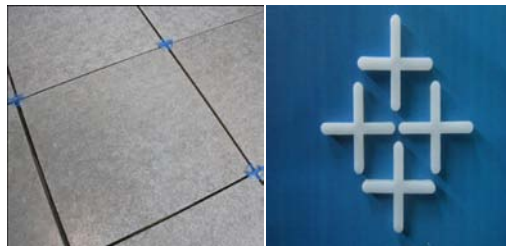

- Next step is to Put spacers in between the grouts to maintain uniform grooves between the panels .

## STEP 5 : Grouting



- Use a Masking tape along the periphery of the tiles to secure the edges from the grout if and feed grouts into the joints using the grout bag.
- Smooth the filled joints using a Pointing bar and use the scraper to remove excess grout.


## STEP 6 : Cleaning



- Use a Sponge to remove any dirty blots off the installed MCM Tile.

## BASIC NOTES

- The substrate should be levelled and cleaned.
- Applicator should wear gloves while laying MCM panels and make sure there are no dirt stains or smudges on the sheets during installation.
- Type of ADHESIVES to be chosen according to the substrate.
- Use SPACERS to maintain the groove thickness throughout while installing.
- Our products contain few Residual mesh fringed, small variation in size (on diagonal less than 2 mm) ,small air holes or surface anomalies and some color variation. These variations are intentional and do not affect the installation, and add to the overall character of the stone.
- We recommend the Authorized executive from the respective adhesive company to verify the adhesive, substrate and installation method prior to fixing MCM Products.

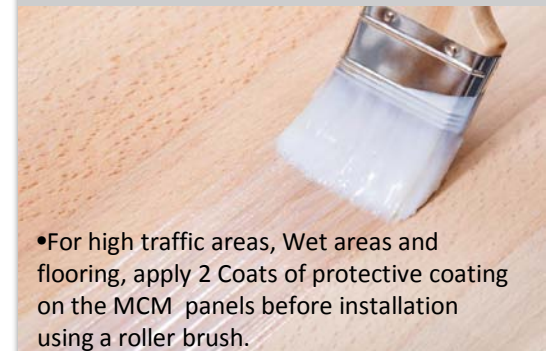

- For high traffic areas, Wet areas and flooring, apply 2 Coats of protective coating on the MCM panels before installation using a roller brush.