

# ROCK SLIDERS & MONKEY BARS INSTALLATION INSTRUCTIONS

**This product should be installed by a qualified professional.**

The safety and functionality of your product depends on its correct installation. Please follow these instructions carefully, as 6 Monkeys LLC is not liable for any damages or injuries, including death, as a result of faulty installation. Please install this product according to these instructions and use this product as intended. Technicians are advised to contact us with any questions prior to installation.

1. Only install this product on 2011 - 2021 Jeep Grand Cherokee models.


**DO NOT INSTALL THIS PRODUCT ON A DIFFERENT MODEL VEHICLE.**

## 2. PARTS LIST:

- A. Driver's Side Rail (1)
- B. Passenger Side Rail (1)
- C. LED Eagle Eye Lights (8)
- D.  $\frac{3}{8}$ " Tab Bolts (12)
- E.  $\frac{3}{8}$ " Nuts (12)
- F.  $\frac{3}{8}$ " Washers (12)
- G.  $\frac{1}{2}$ " Washers (12)
- H.  $\frac{1}{4}$ " Bolts (12)
- I.  $\frac{1}{4}$ " Nuts (12)
- J.  $\frac{1}{4}$ " Washers (12)
- K. Foam Tape Tabs (12)
- L. Foam Rolls (2)

3. It is easiest to install lights at this time, but it is not necessary. Current models have rubber grommet style lights. Simply insert the grommet and push the led light into the grommet.

Old style- Place side lights and wires into the lower rail. Use a long socket to secure. Pull the wires through the socket. Insert the nut and socket into the access hole and secure the nut to the bolt. **DO NOT OVER TIGHTEN. See Figure 1.**

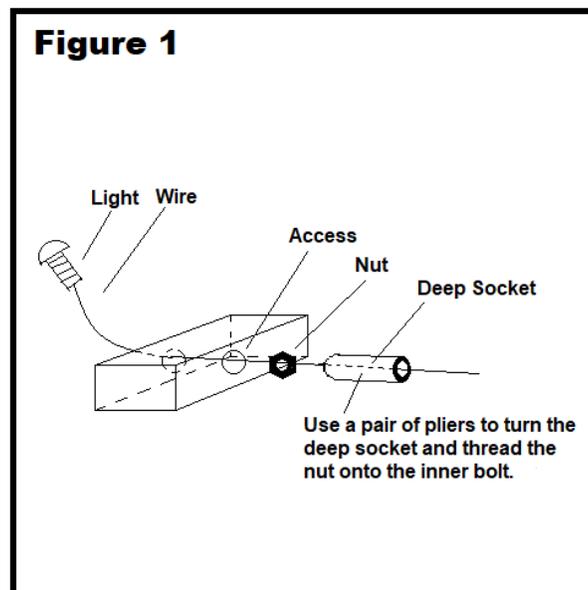

4. Install foam tabs. Remove the adhesive backing and place on the top side of the mount tubes. Make sure the holes are corresponding. We typically do this step for you before shipping out. **See Figure 2.**

5. Insert tab bolts into the slots while tipping and maneuvering the tabs into place. Once in place, place a 1/2" washer on the tab bolt, then tip it and insert it into the body slot. This will ensure good clamping force, regardless of the tab orientation. **See Figure 3.**

6. A second technician is required for this step. Starting at the front, lift the slider into place. Be careful not to push the tab bolt into the body. Once a washer, lock washer, and nut are started, tip the back of the slider up slightly and proceed with the next bolt. Repeat this process until all nuts are started. **DO NOT TIGHTEN NUTS - LEAVE THEM LOOSE FOR NOW.**

7. Center the sliders to the vehicle and choose which set of pinch weld holes works best.

8. Place washers on 1/4" bolts and insert them into the slider mount tabs.

Secure 1/4" nut on the inside. Once all fasteners are in place, tighten them all. Pinch weld bolts may require bending the pinch weld or slider tab for alignment, using a crescent wrench. It is ok if all these bolts are not applied, and there should be a small gap between the tab and pinch weld.

9. Lastly, locate the cosmetic strips. These are long steel strips with adhesive backing applied to them. The strips are designed to sit on top of the slider, behind the doors. They will conceal and seal off the exposed slots that are left from removing the factory cladding. Cleaning this area with mild soap and water will promote adhesion. Allow the area to fully dry before applying the cosmetic strip. Prior to removing the adhesive backing, set the strip in place. Once an understanding of placement has been achieved, remove the cosmetic strip, and peel a few inches of the backing upward. Place the cosmetic strip in its final place, and remove the backing while pressing the strip firmly into place.

10. Enjoy your new rock sliders!

