


INSTRUCTIONS FOR DANFOSS* TEMPRESS* ESCUTCHEON INSTALATION ES-DT1K SERIES

Also Fits Some Models Of:

American Standard, Dornbracht*, Eljer*, Emco*, Gerber*, J.L. Barill*, Jado*, Indiana*, K.W.C.* , Newport Brass*, Nibco*, Phoenix*, Rohl*, Union Brass*, Valley* Zurn**

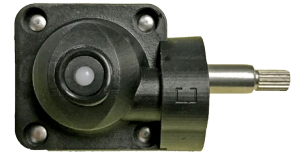

A. Removal of Existing Escutcheon

1. Remove handle by removing handle cap and screw that attach the handle.
2. Remove escutcheon after removing the 2 screws that hold it to the wall. Pull off.
3. Clean the wall surface thoroughly.

B. Installing the New Escutcheon Assembly

1. Remove old stem adapter screw and pull it off, install new one provided with screw.
2. Screw in threaded studs provided into valve body.
3. Look at back of escutcheon. Install a thin bead of clear silicone caulk into the groove marked "caulk groove."
4. Slide escutcheon body assembly over threaded studs and push against the wall.
5. Screw small nuts provided onto studs and tighten (*careful ... do not over tighten*)
6. Temporarily install handle and turn clockwise until it stops ... if it will not rotate then try again making sure that the stop inside the handle is on the correct side of the escutcheon stop.
7. Install brass stop so that the handle stops on it once the handle is fully rotate clockriseor, if you want to limit the hot water temperature, at that location.
8. Re-Install handle and screw it on ... then install the handle cap.

