

INSTRUCTIONS

ANCHOR FLANGE



1. TURN OFF WATER SUPPLY AND REMOVE TOILET.
2. REMOVE ALL OF OLD WAX SEAL RING FROM OLD FLANGE.
3. CENTER THE ANCHOR FLANGE UNDER THE BROKEN SECTION OF THE TOILET FLANGE.
4. USING THE SCREWS AND INSERTS PROVIDED, INSTALL THE ANCHOR FLANGE TO FLOOR, USING THE WASHERS PROVIDED TO BALANCE THE ANCHOR FLANGE AND TO KEEP THE FLANGE AWAY FROM THE FLOOR. THIS ALLOWS ROOM TO INSERT TOILET SCREWS.

NOTE: QUICK SET CEMENT MAY BE USED IN FLOOR TO "SET" SCREWS AND INSERTS

5. ANCHOR FLANGE MAY BE CUT AND SHAPED AS NEEDED.
6. INSERT TOILET SCREWS, INSTALL WAX RING ON TOILET, AND RE-MOUNT TOILET.
7. INSTALL AND TIGHTEN TOILET SCREWS DO NOT OVER-TIGHTEN
8. TURN ON WATER AND TEST TOILET FOR PROPER BALANCE.

NOTE: USING PLIERS, INSTALL THE "LINKSTERS" WITH 3 FLANGES TO MAKE A FULL 360° BACK-UP ANCHOR FLANGE!

"LINKSTER"

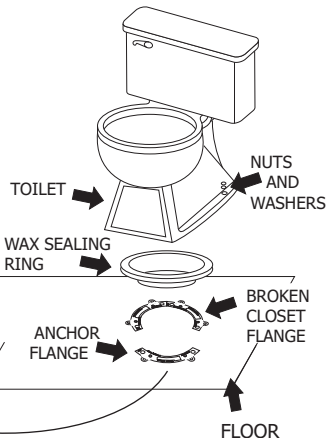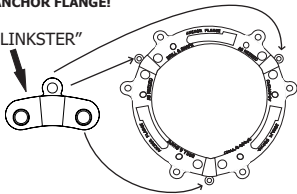

NOTE: MOUNT ANCHOR FLANGE SECURELY TO FLOOR USING SCREWS & INSERTS PROVIDED