




2023-25 SUPER DUTY APEX-L FOG KIT ASSEMBLY

Instructions are for the specific assembly differences from our 23-25 Standard fog .

Parts for APEX-L upright assembly

- (L & R) LOWER BASE BRACKETS
- (2) S1 UPRIGHTS AND HARDWARE
- (2) APEX-L INJECTION MOLD COVERS

General installation of the kit is the same as our standard SD kit and you can refer to our general instructions for installation on BMCLights.com or our Youtube page for video installation of our 23+ SD Fog Kit

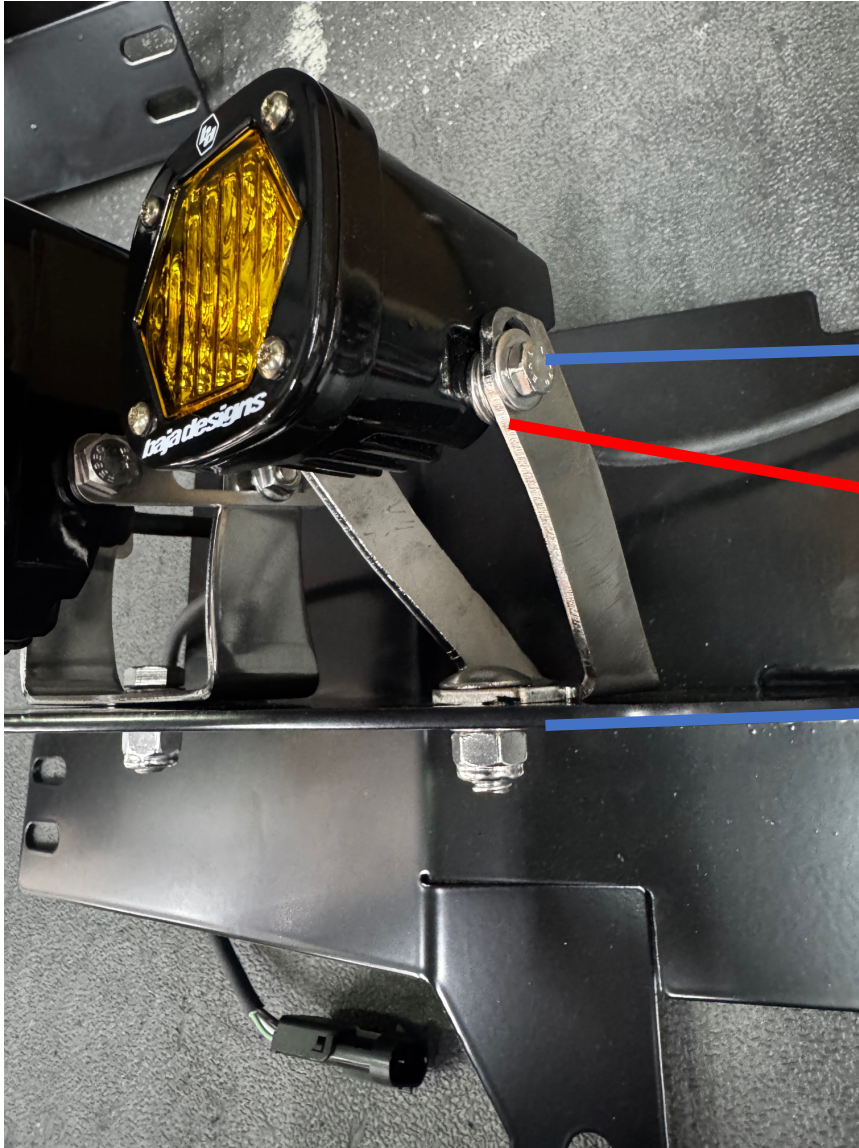


S1 UPRIGHT ASSEMBLY

THIS HARDWARE IS REUSED FROM THE S1 KIT

INSTALL SMALL WASHER BETWEEN LIGHT AND UPRIGHT

CARRAIGE BOLT, WASHER AND NUT INCLUDED IN BMC KIT

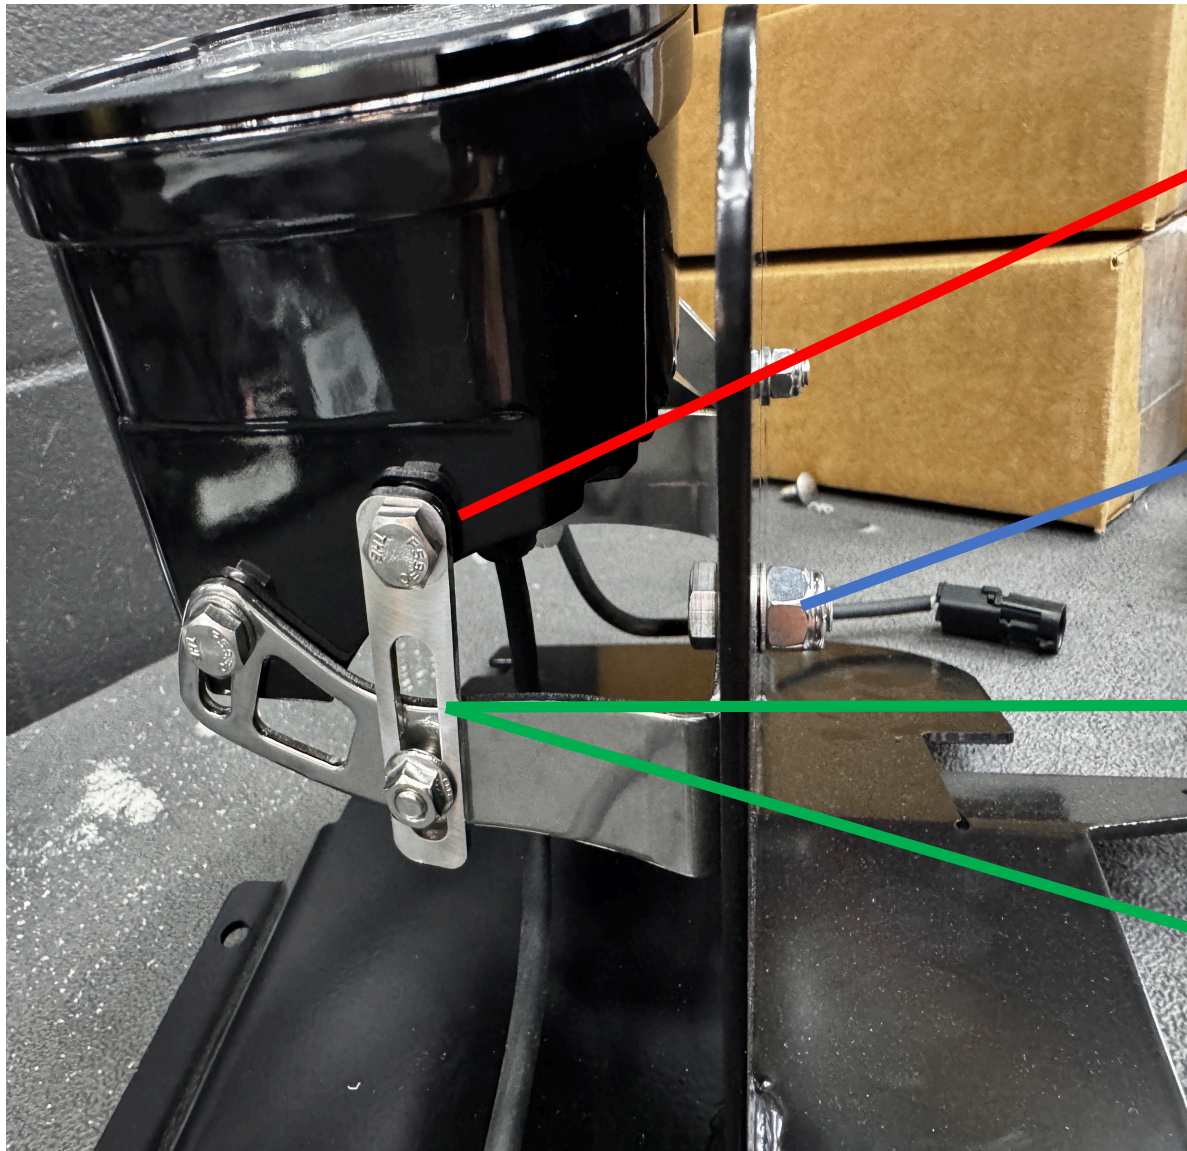

INSTALL SMALL WASHER BETWEEN LIGHT AND USE HARDWARE THAT CAME WITH LIGHT TO ATTACH THE “UPRIGHT BRIDGE “

TO MOUNT THE XL TO THE BASE, USE THE BOLTS INCLUDED IN THE LIGHT KIT, IT’S A SNUG FIT, TWIST THE BOLT TO INSTALL. BE SURE TO USE A WASHER (9/16 NUT)

UPRIGHT AND INSTALL SLIDER TO THE LIGHT WITH THE SINGLE HOLE ON THE LIGHT. THIS WILL ALLOW THE SLIDER TO MOVE WHEN ADJUSTING

***THE UPRIGHT BRIDGE SHOULD BE ON THE SAME SIDE AS THE S1 SO YOU CAN ACCESS