

Dodge RAM 2500


Installation Instructions



- Kit Contents:**
 (2) Hitch Bar™ Lights (Left & Right)
 (1) 25' 2-Output Power Harness


Step-1 HITCH BAR™ INSTALL

- Install the Hitch Bars into the end of Hitch (FIG A), the single bolt hole will be immediately available (FIG B), remove bolt from 2500 truck, Rotate bars into place and reinstall stock bolt.

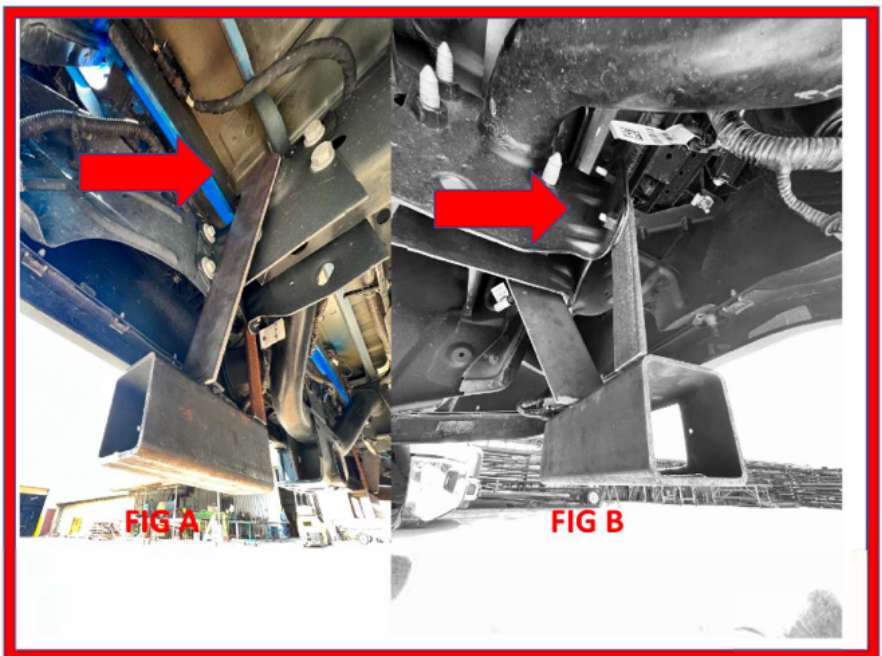

STEP 2 – HARNESS INSTALLATION

- STARTING AT THE PASSENGER REAR CORNER LAY OUT YOUR HARNESS SO THAT THE LONG SIDE (A) OF THE HARNESS IS FACING THE LEFT SIDE
- ROUTE THE (A) SIDE OF THE HARNESS OVER THE TRAILER HITCH TO THE LEFT HITCH BAR
- ROUTE THE (B) SIDE OF THE HARNESS TO THE RIGHT SIDE HITCH BAR
- SECURE BY INSERTING AND TWISTING THE IP68 WATERPROOF CONNECTORS TO EACH HITCH BAR
- ROUTE THE (C) SIDE OF HARNESS ALONG PASSENGER SIDE FRAME RAIL TO POWER SOURCE OR SWITCH
- GO BACK THRU YOUR WIRING AND SECURE WIRES AS NEEDED. ENSURE HARNESS DOES NOT CONTACT ANY MOVING OR HOT PARTS OF THE TRUCK
- HOOK UP YOUR POWER SUPPLY TO THE END OF (C)
- ADJUST HITCH BARS AS NEEDED TO OPTIMAL COVERAGE

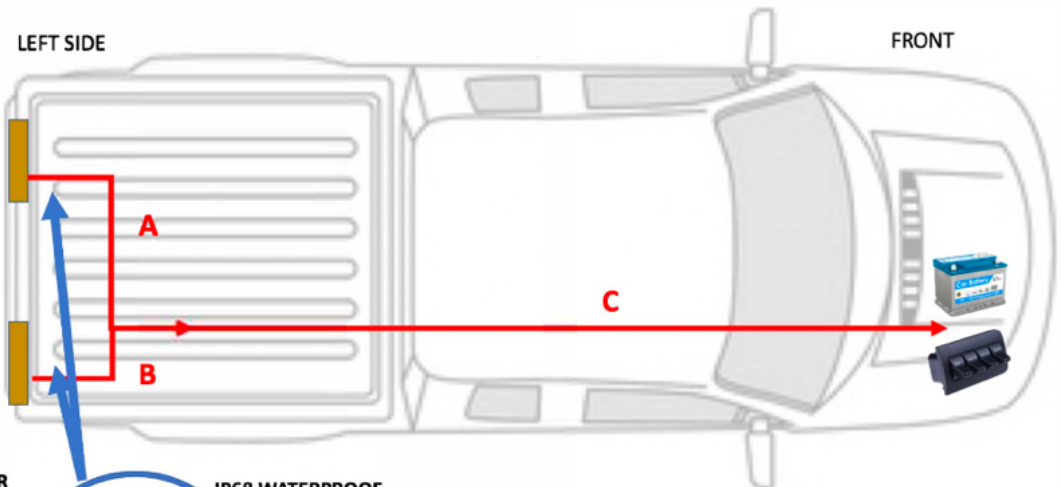

IP68 WATERPROOF CONNECTORS

HARNESS ORIENTATION

- A) 5' SIDE OF HARNESS
- B) 3' SIDE OF HARNESS
- C) 25' EXTENSION TO POWER SUPPLY