

MOUNTING INSTRUCTION - PERMANENT WINDSCREEN

Thanks for choosing the ProSpec windscreen extender. The extender is a two position adjustable to ensure added riding comfort.


Please follow the instruction carefully to ensure the desired benefit of the extender.

Check the dimensional instruction and mark the existing as per guidelines provided, follow two step drilling (small pilot drill of 2mm and final 6 mm).

Note: Some parts are pre-assembled, though ProSpec performance parts are designed for DIY installation is it is recommended you have the spoiler installed by a technician if you face difficulty.



Use the template by sticking it as seen in the pictures.

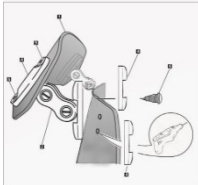

Extender to be cleaned using water, neutral soap and sponge or microfiber cloth. Never wipe using dry cloth or use solvent as they may scratch or damage the surface texture permanently.

| Sl. | DESCRIPTION | QTY. |
|-----|-------------------------------------|------|
| 1 | Screen | 1 |
| 2 | 2 Position adjuster mechanism (set) | 1 |
| 3 | Clip on mount (set) | NA |
| 4 | Front & Rear cap | 2+2 |
| 5 | Type B Philips head screw M6 x 10 | 8 |
| 6 | Philips head screw M6 X 15 | NA |

Note: For windscreen thickness 3 – 5 mm

No 14 Orchid, 6/5 Ganga Garden,
HM Road, Kalyan Nagar,
Bangalore -560043,
Karnataka, INDIA.
+91 9620484111

