


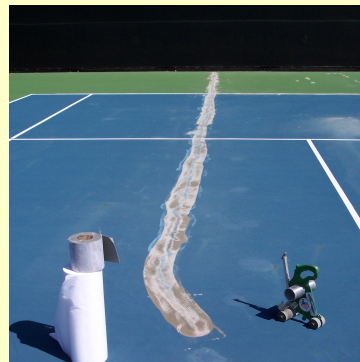

Properly Prepared Crack



When You Fix
a CRACK
"Do It The RiteWay"

Easy as:

1



Applying Exclusive
RiteWay Tape

2



Applying RiteWay
Stress Mat

3




Applying RiteWay
Bonding Edge

NO Drying Time Between Steps

Saves Time and Labor Cost

Finished Repair Ready for Color Coating

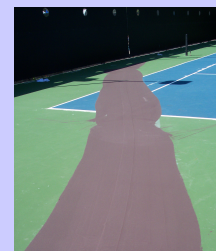

US Patent No.
7,597,503

Guaranteed
Crack Repair