


STEP 0:

INSERT THE SAFETY PIN, MAKE SURE THE GRENADE IS INSTALLED CORRECTLY.



STEP 1:


FIND THE TOP THREE SCREWS AND UNSCREW THEM.

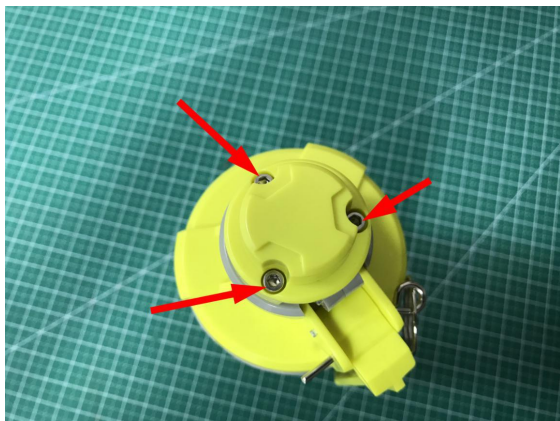


STEP 2:

TAKE OUT THE COVER AND YOU WILL SEE THE O RING CLIP. FIRST UNSCREW THE CLIP SCREW,

SECOND REMOVE THE CLIP PARTS.

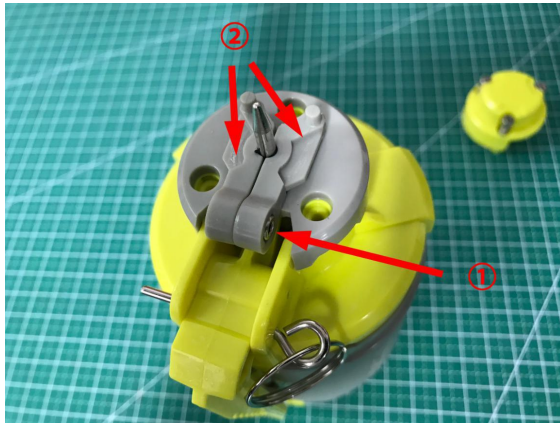


THEN REMOVE THE O RING.

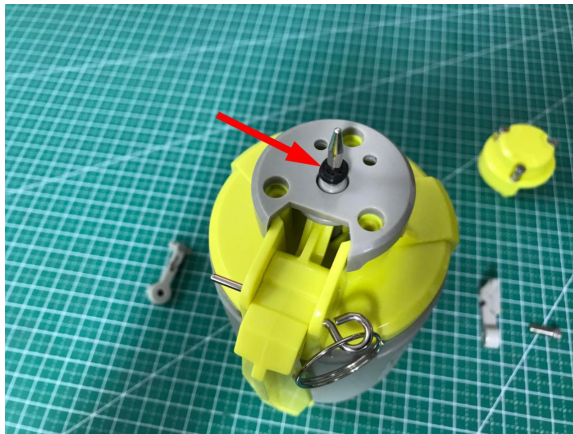


STEP 3:

**INSTALL A NEW O RING ON THE METAL SHAFT,
MAKE SURE THERE IS A 2MM GAP UNDER THE O
RING.**

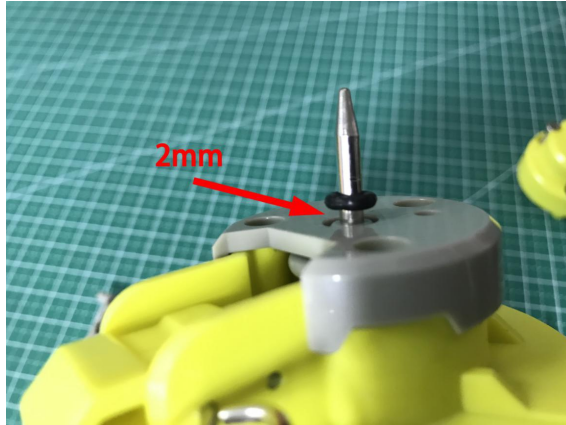

STEP 4:

INSTALL THE TWO CLIP PARTS AND ROTATE THEM TO THE MIDDLE POSITION. THEN INSTALL THE CLIP SCREW.

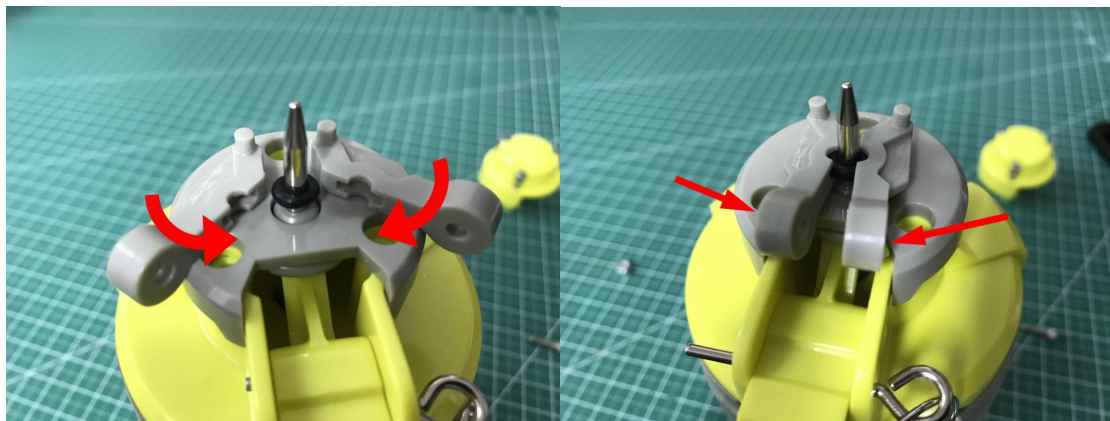

STEP 5:

PUT THE TOP COVER ON, INSTALL THREE SCREWS AND SCREW UP THEM.

