

# Essence Framed Shower Door Installation Manual

Size:60"

Color:Chrome



# Thank you for your purchase.

If you encounter any challenges during installation or if the product dimensions don't align with your designated space, kindly reach out directly to MoSweet for assistance. Please refrain from returning the product to the place of purchase. We are committed to ensuring your satisfaction and offer the option to exchange panels or parts to accommodate your specific needs.

At MoSweet, we take pride in delivering quality products and exceptional customer service. Our goal is to guarantee your contentment with your purchase for years to come. With an extensive range of sizes available, MoSweet can provide panels/hardware to suit any measurements.





For any inquiries or assistance, please feel free to contact us. We appreciate your choice of MoSweet products and look forward to serving you. Thank you!

Best Regards,



The Team at  
MoSweet  
(888) 661-1653  
[Info@mosweet.com](mailto:Info@mosweet.com)

**Caution:** The corners of tempered glass panels are particularly delicate. It is crucial to use the provided rubber blocks, ensuring the glass never contacts the tile surface during installation. Always place the glass on cardboard packaging or rubber blocks when outside the packaging. If needed, you can utilize wood, cardboard, or other rubber materials for added protection against breakage. Please exercise care in handling the glass to prevent damage.

# Spare Parts

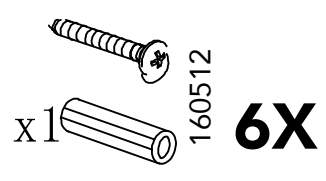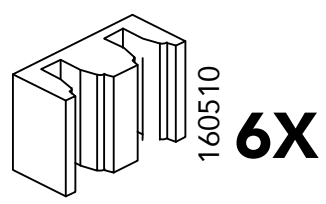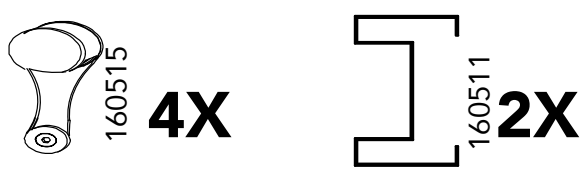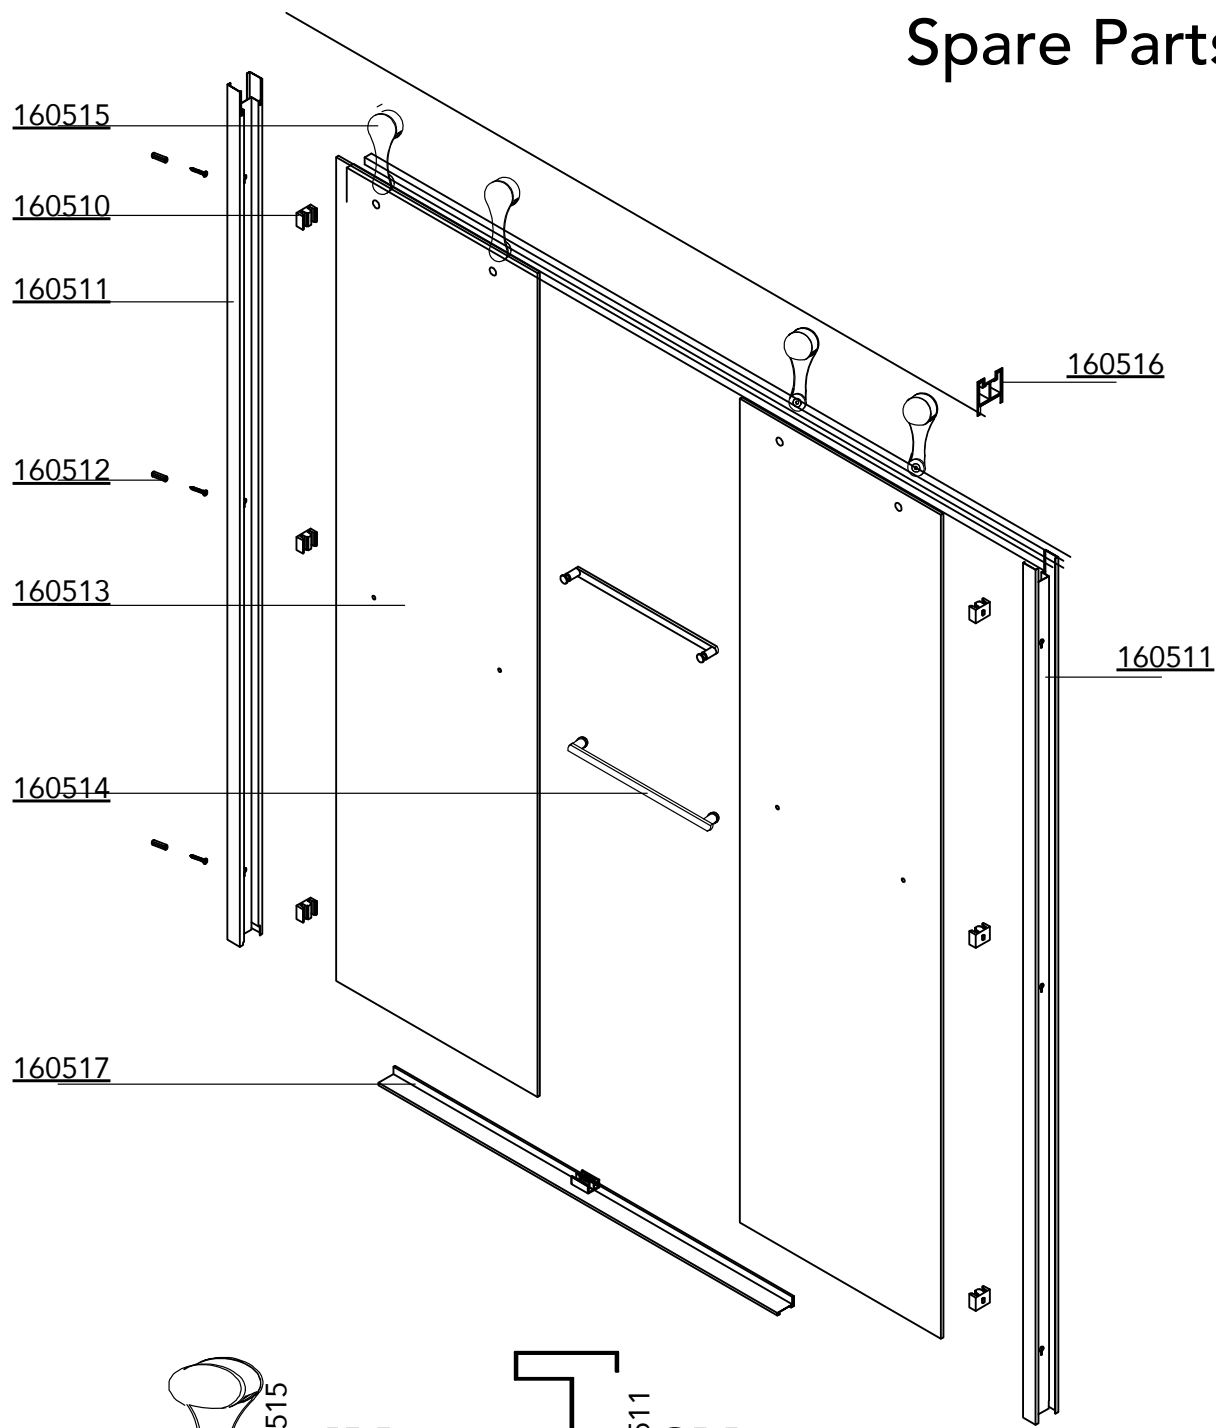


# Tools and Measurements

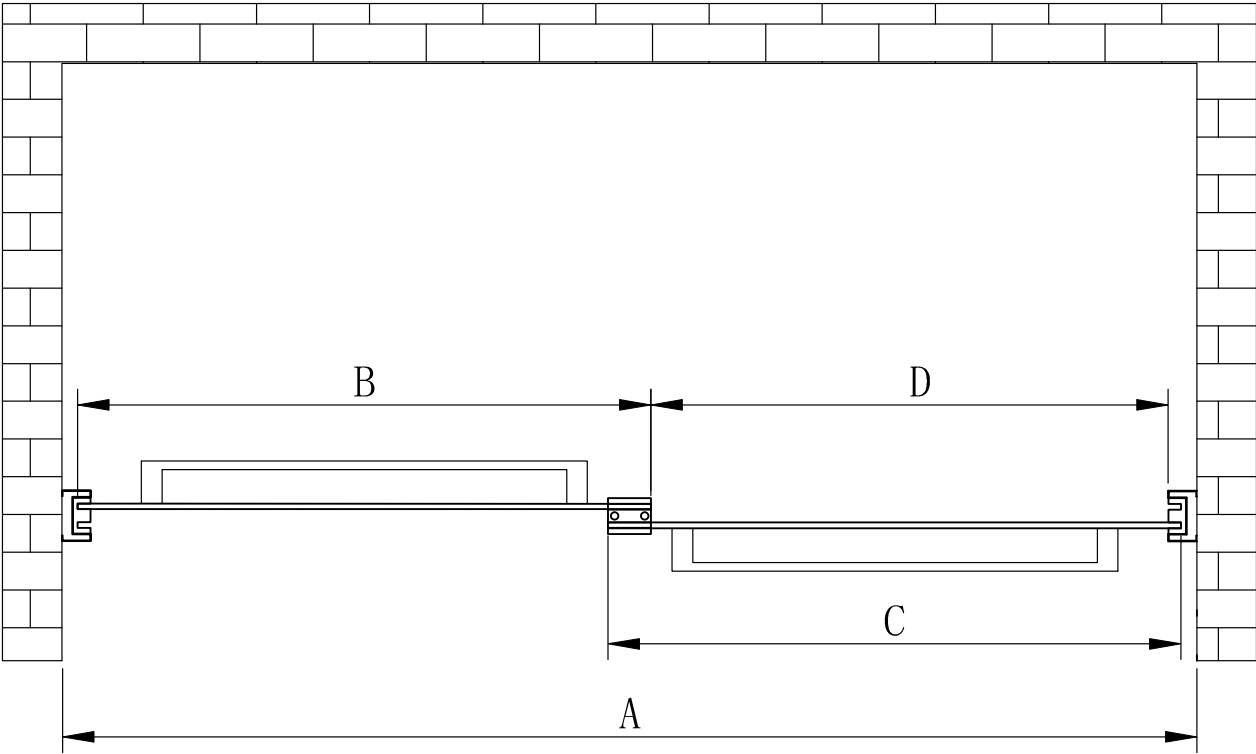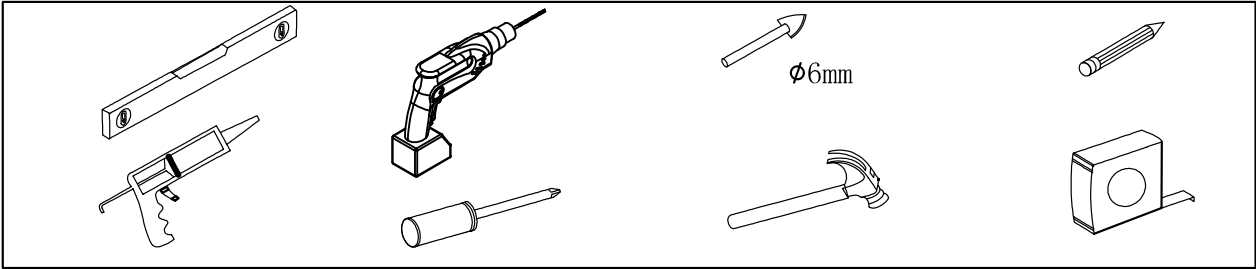

| Door Size | Width A | Width B | Width C | Width D |
|-----------|---------|---------|---------|---------|
| 48"       | 48"     | 24"     | 24"     | 21"     |
| 54"       | 54"     | 27"     | 27"     | 24"     |
| 60"       | 60"     | 30"     | 30"     | 27"     |
| 66"       | 66"     | 33"     | 33"     | 30"     |
| 72"       | 72"     | 36"     | 36"     | 33"     |


## Step 1

**Level**



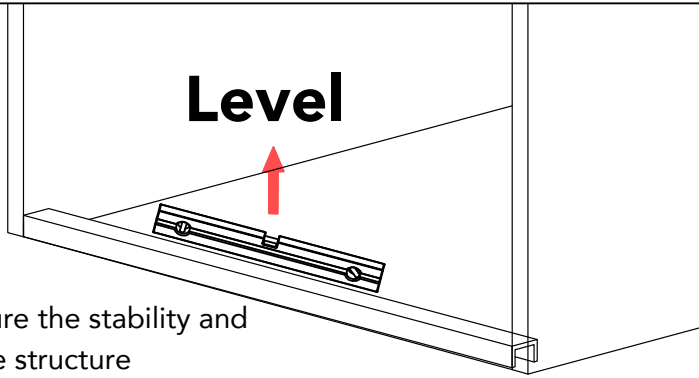


level the bottom track to ensure the stability and proper alignment of the entire structure

## Step 2

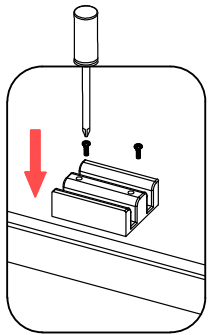

**160510**

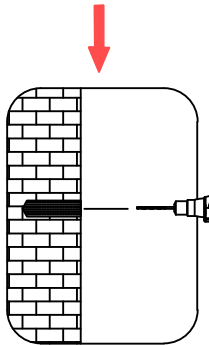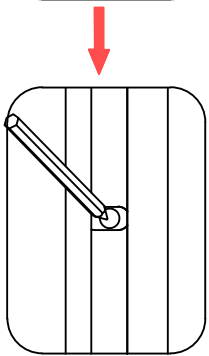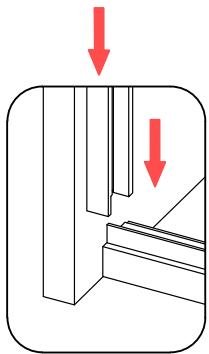



**Thrill holes**




**160512**




**160511**

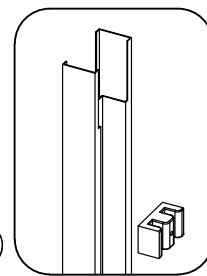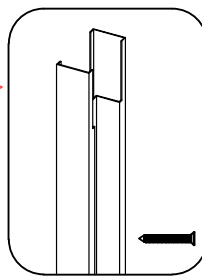


**160510**

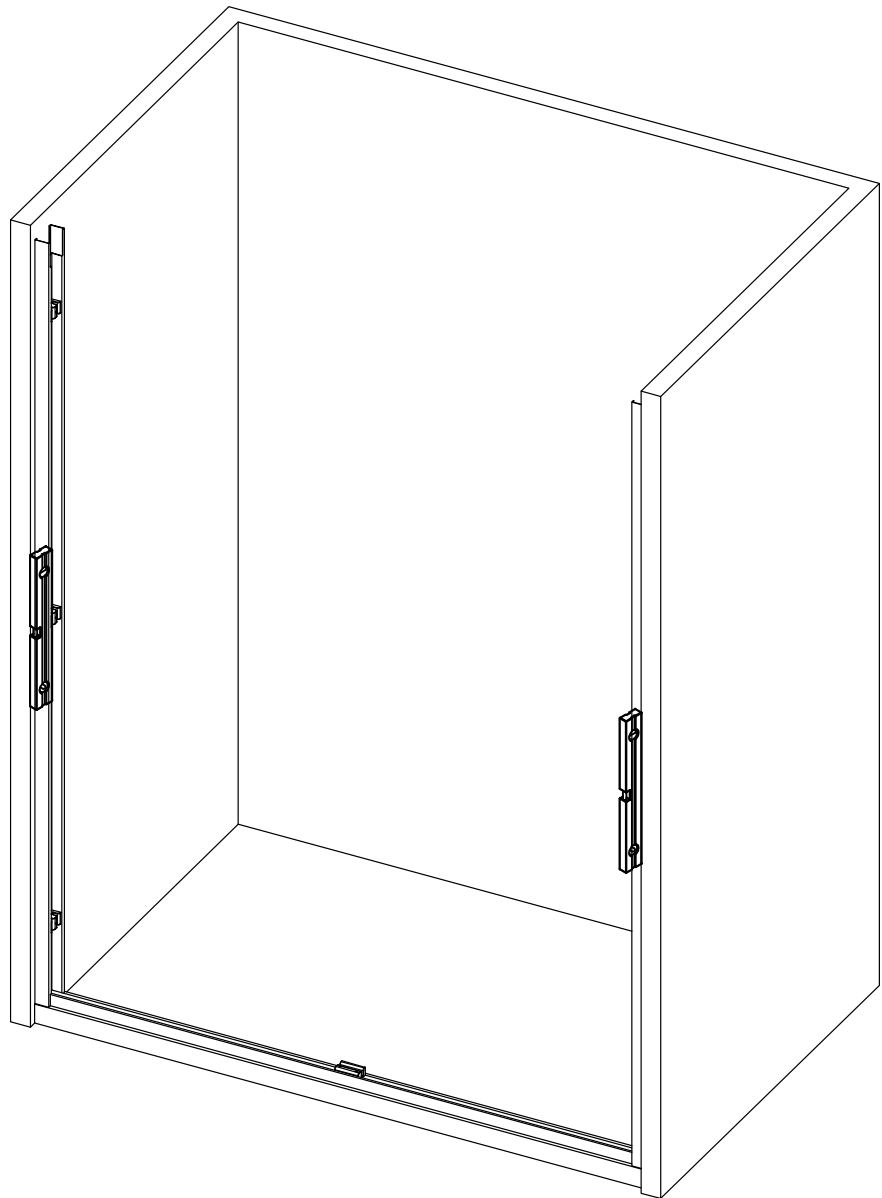




### Step 3

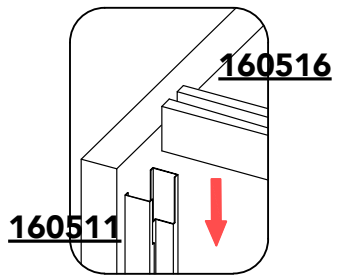

### Step 4

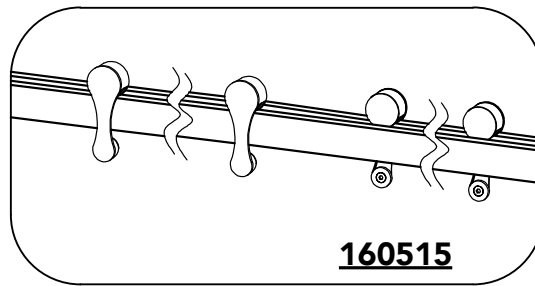


### Step 5

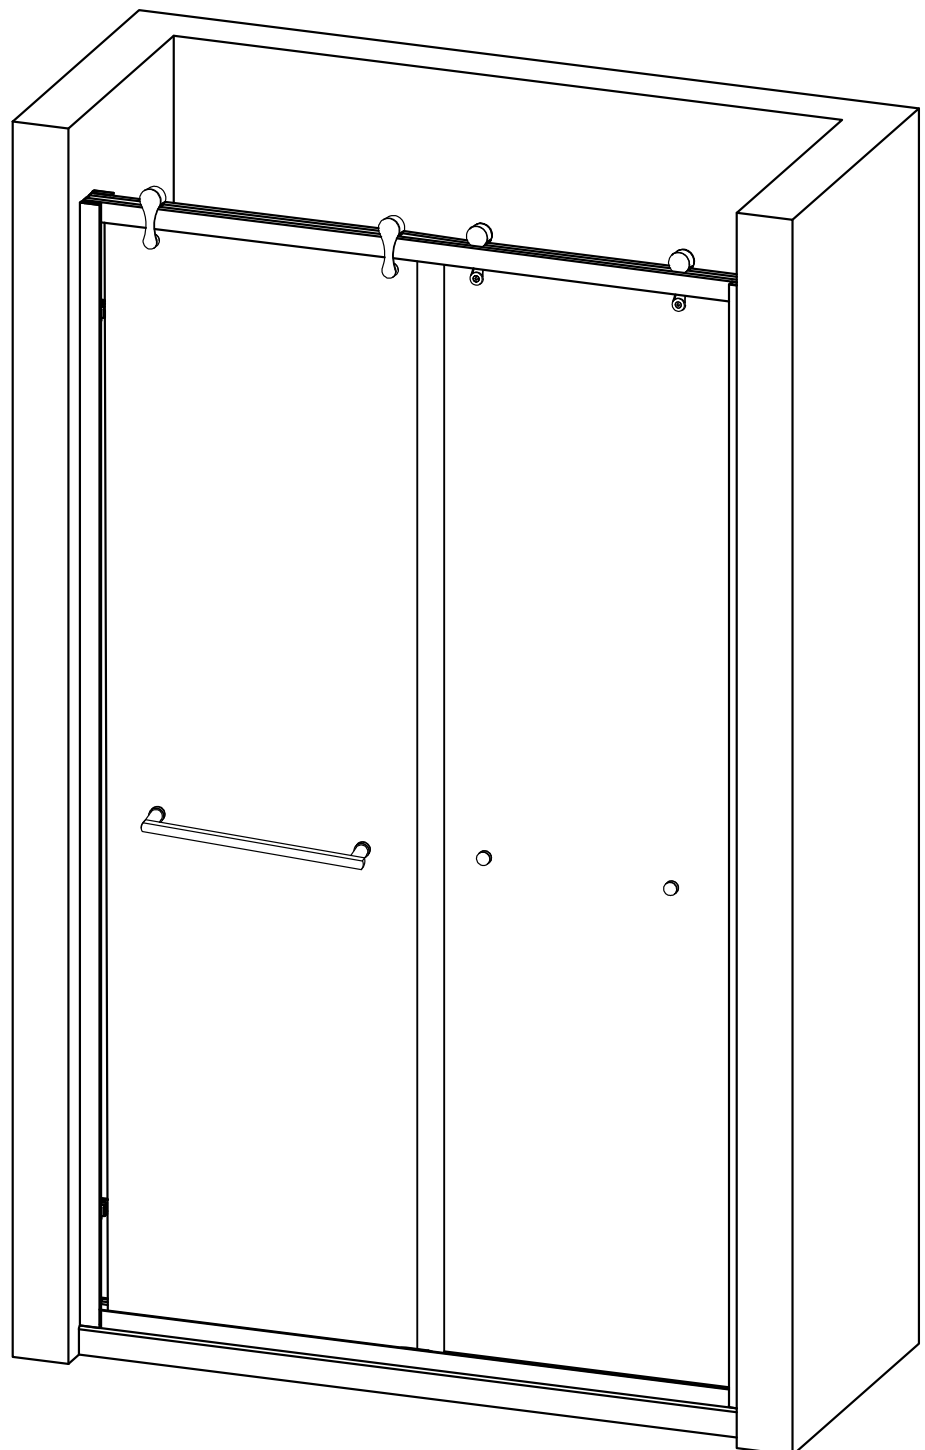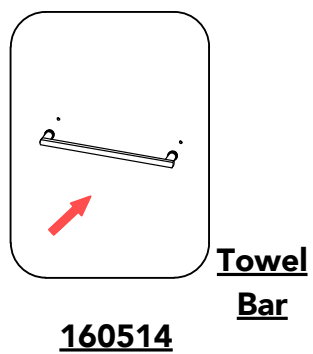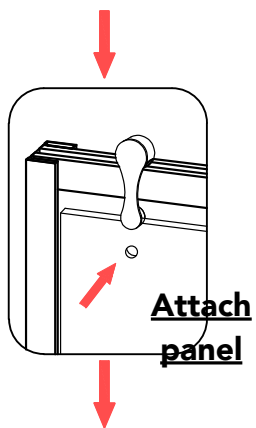

## Step 6

Apply silicone sealant around the edges for a watertight seal. Wait **24 hours** before using the shower

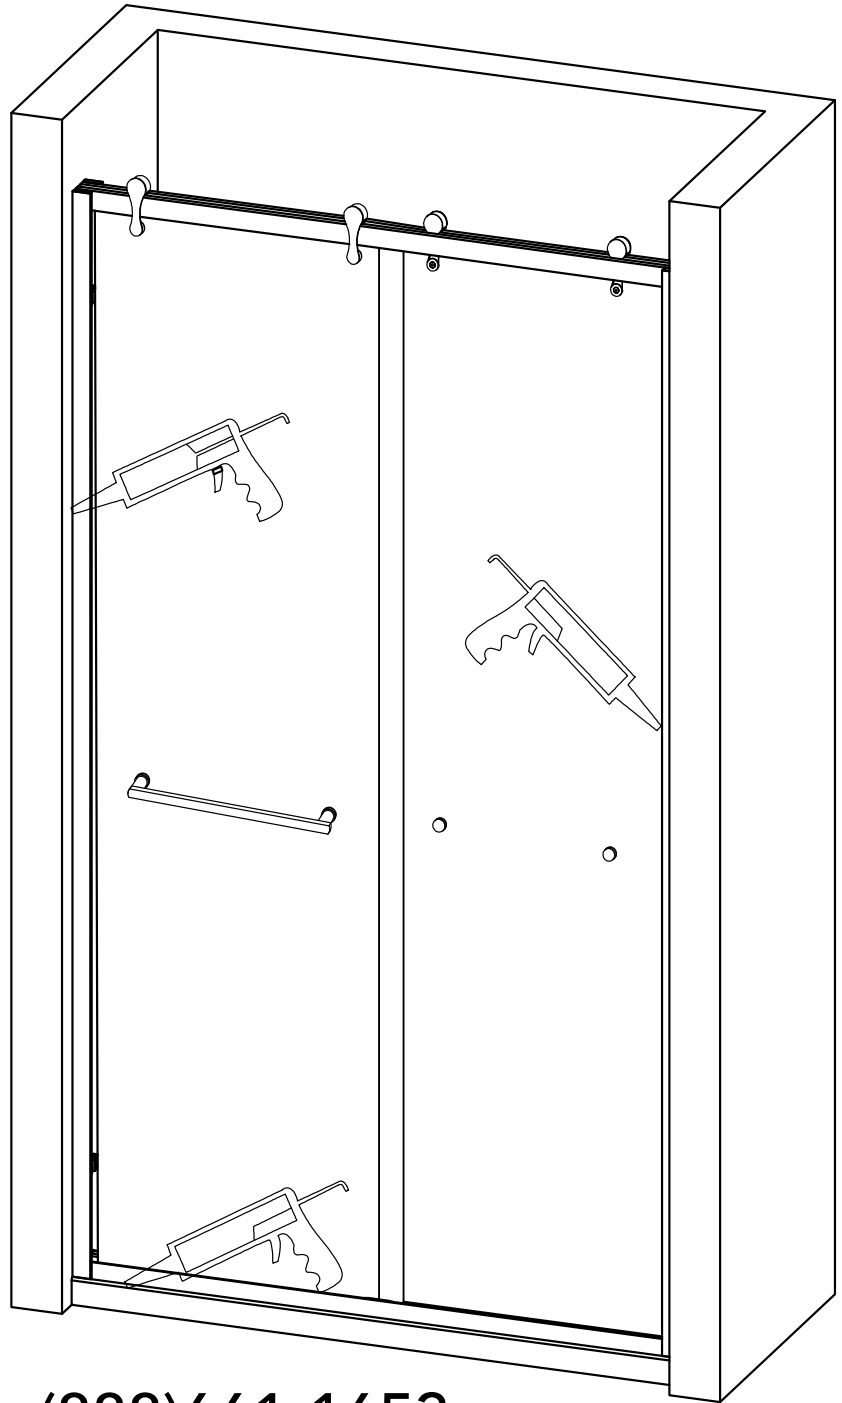

Customer Service (888)661-1653

Email: [Info@mosweet.com](mailto:Info@mosweet.com)