

SANI-BUCKET BRACKET™


Installation Instructions

Wooden Studs

- Use bracket with a level to mark desired location of holes
- Drill 1/4" pilot holes
- Hold bracket against wall and begin threading screws into pilot holes
- While holding the bracket in place, use a drill to finish driving screws

Drywall

- Use bracket with a level to mark desired location of holes
- Drill 1/2" pilot holes
- Follow anchor instructions in image below

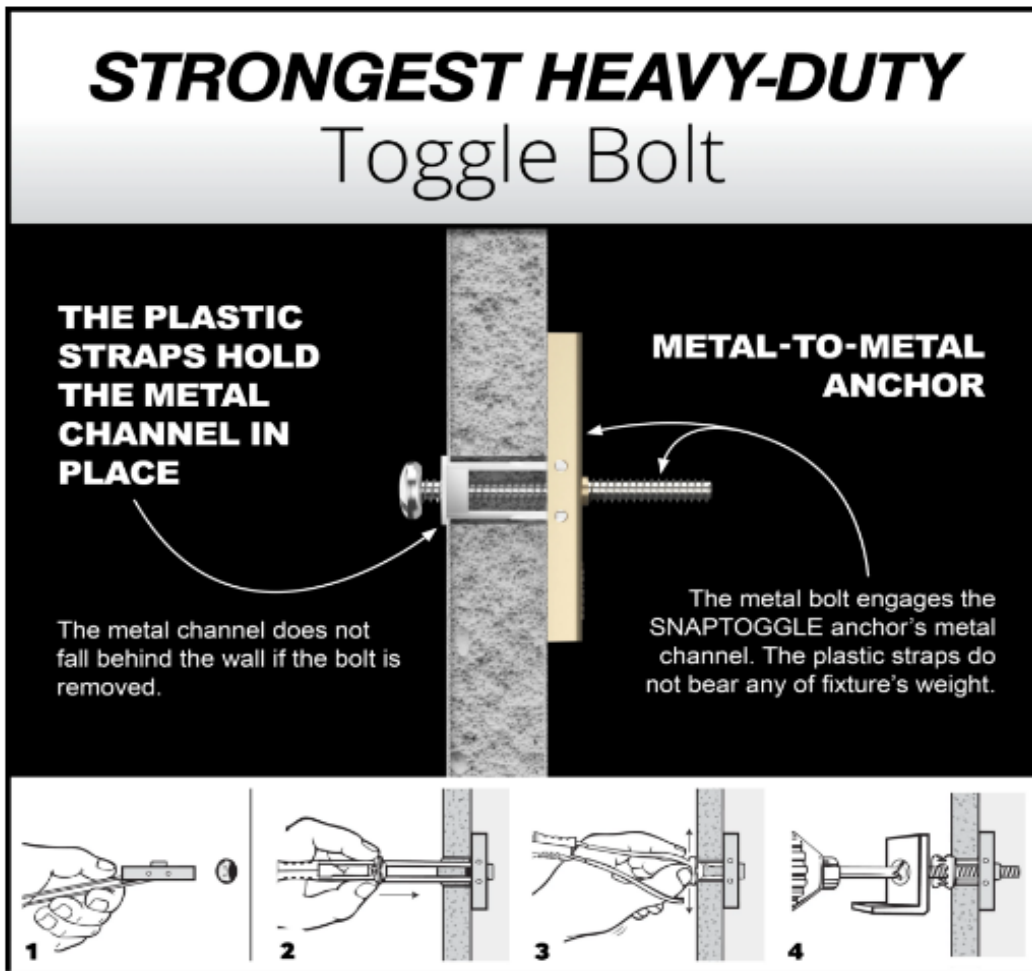

- Hold bracket against wall and finger thread bolts into anchor channel
- Finish driving bolts fully into anchors (drill recommended)