

1. Remove all six allen screws that hold the door skin onto the door frame. Set door skin aside.
2. Using a wrench or socket remove the two 10mm bolts that are holding the door latch on to the steel frame. Set latch aside.



3. Remove the four allen screws that are holding steel frame on to the door.



4. Remove the stamped steel frame and door handle from the door frame.




5. Remove the c-clip and pull the pin to remove the factory handle from the steel frame. Wipe the steel frame clean of any debris.



6. Using the four allen screws that were removed in step 3, reinstall the stamped steel frame back onto the door. Pay attention to the witness marks of where the allen screws were tightened before.




7. Install the new billet handle! “You may need to squeeze or slightly spread the two steel ears so that they align in the slots on the new handle.”

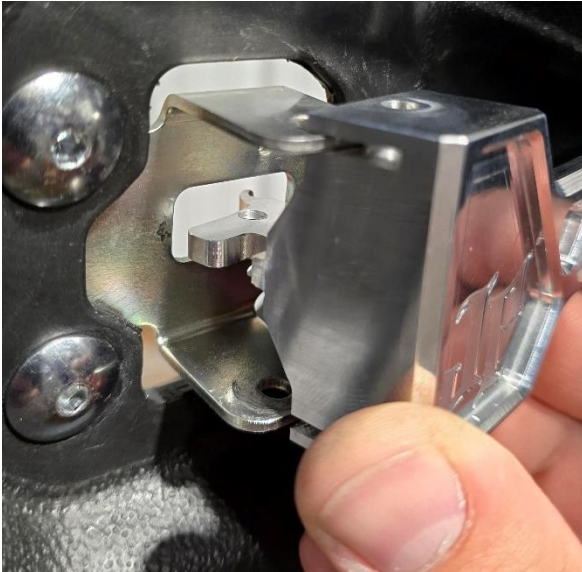

8. Apply a small amount of blue Loctite to the shoulder bolts and screw them into the handle.

9. Insert the latch linkage into the hole in the new billet handle.

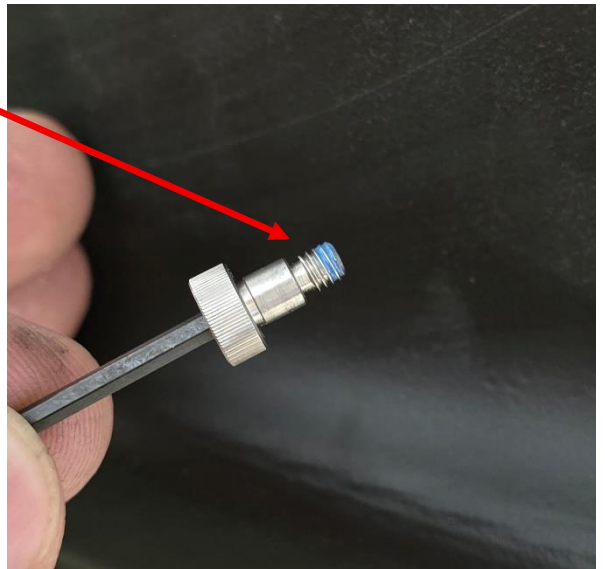


10. Reinstall the handle latch using the two 10mm bolts that were removed in step 2. “Be sure you align the latch as accurately as possible with the latch ring so that your door will close and open nicely.”



11. Install the spring mount and apply a small amount of blue Loctite to the threads before installing the two nuts.

12. Use an allen wrench on the back side to keep the allen screws from spinning and tighten the nuts.

13. Attach one end of the spring onto the door handle and slide the other end onto the post.

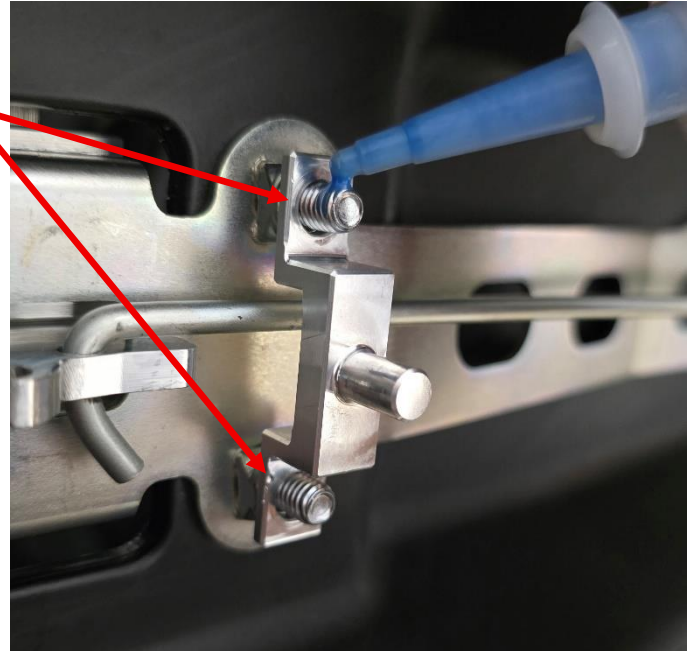

14. Reinstall door skin and enjoy your new handles!



If you have any questions, please contact me.

Thank you for your business!