


CUSTOMSHUTTERGURU

Direct Inside Mount

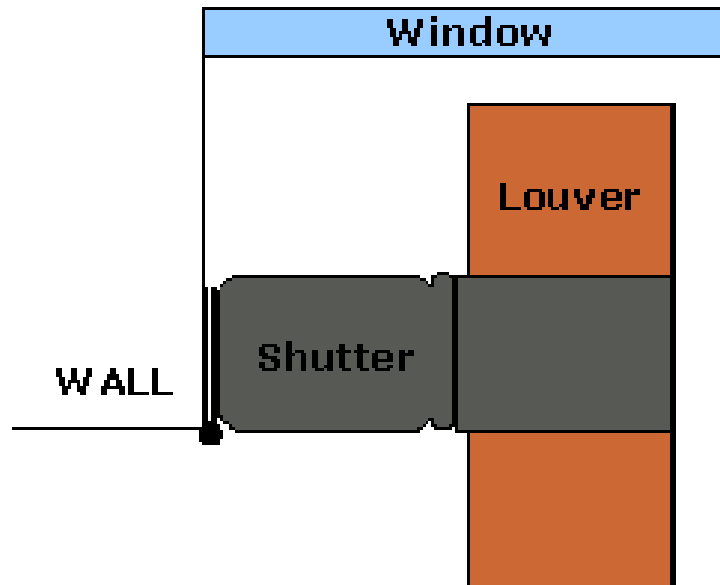

DIRECT INSIDE MOUNT

The direct inside mount is a popular mounting option. The shutters can be mounted directly to drywall or wooden window jam. To use this option the window jams must be plumb and square and the jam depth deep enough for the louvers to operate.


- Install hinges to the panel.
- Place the panel in the window and insert a 1/8" shim at the bottom of the panel.
- Mark the hinge locations with a pencil onto the window jam.
- Remove panel and pull pins from hinges.
- Place removed half of hinges at pencil marks and

mark screw locations in the hinge adjustable screw holes and install hinges at that location. (note; depending upon the surface, you may need to install drywall anchors or other screw anchors in the window jam)

- Return panel into the window and install hinge pins.
- Make any final adjustments, install final screw in center location and tighten screws.
- Install magnetic catches at top and bottom of the panel.

***CUSTOMSHUTTERS*GURU**

FRAME SQUARENESS CHECK

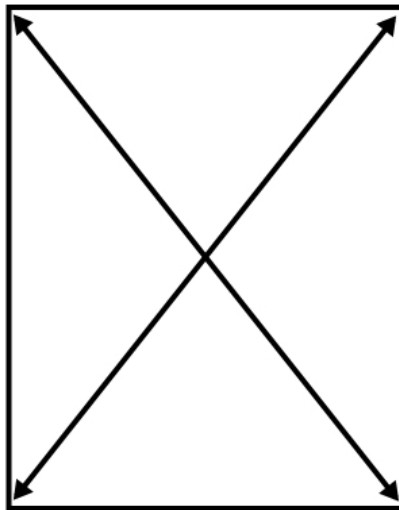

DIAGONAL SQUARENESS CHECK