


CUSTOMSHUTTERGURU

L FRAME/DECO OUTSIDE MOUNT

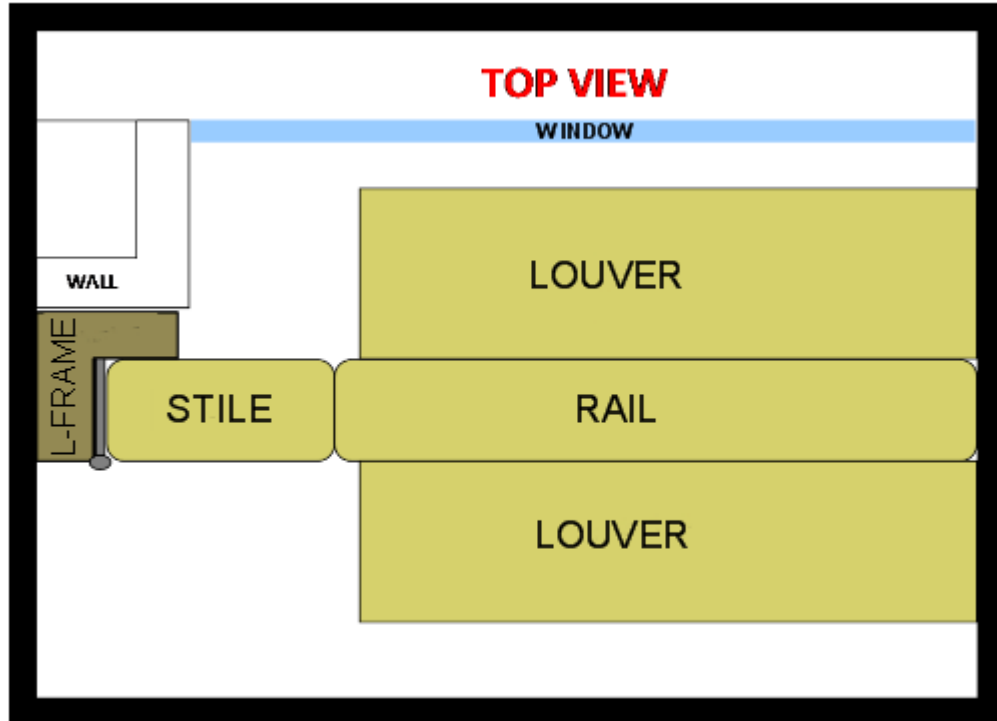


OUTSIDE MOUNT L- FRAME/DECO P

The outside L-Frame and also DECO frame is popular and versatile outside mounting option. It can be mounted directly to drywall, on top of existing trim or outside existing trim (depending on the distance). It allows the shutters to be mounted far enough away from the window for the louvers to clear most obstructions while providing a framed, finished look to the window. The L frame can also be mounted inside of the window jam if clearance is adequate and window jam is close to square and plum.

- Outside mount is great for out of square windows and for windows with little backspace

CUSTOMSHUTTERSGURU

FRAME SQUARENESS CHECK

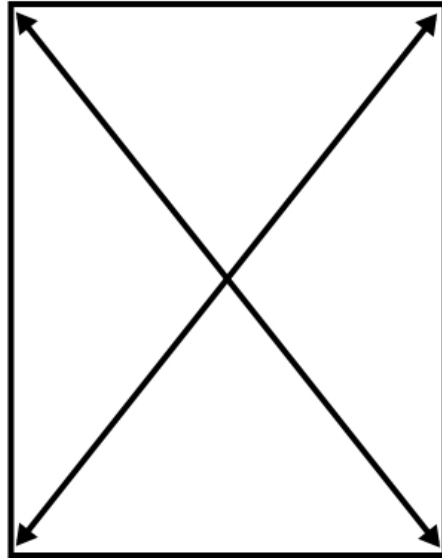

DIAGONAL SQUARENESS CHECK

Frames are cut at 45 degrees at the corners to the required dimensions. Glue and tack nail at the corners check frame for square by measuring diagonally across the frame adjust as needed and do final nailing. Install frame around the window to hang shutter, check for plum/level, nailing or using screws. Install shutter as you would hang a door.

(drilling pilot holes and installing screws at the corners and centers to the window is an option)