


CUSTOMSHUTTERGURU

Z Frame/Inside Mount

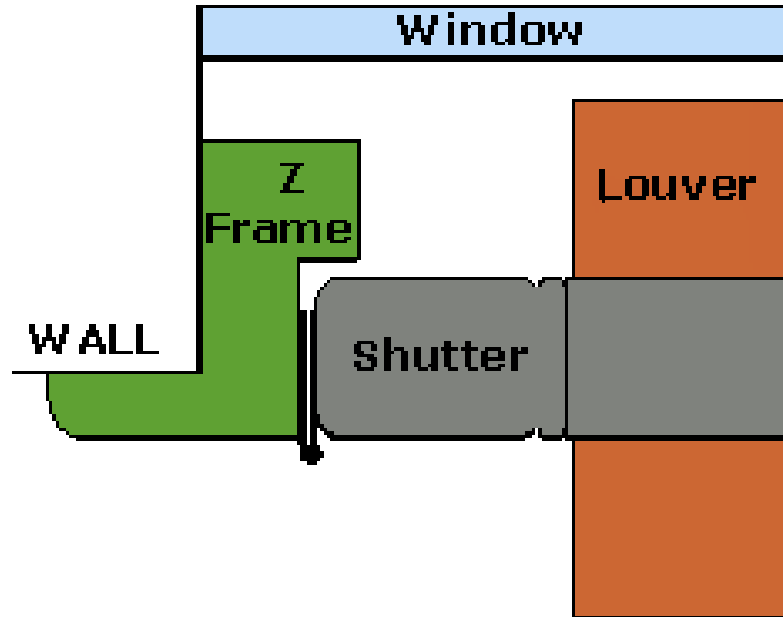


INSIDE MOUNT Z FRAME

A Z-Frame/Inside Mount can be mounted directly to inside of the window jam. If windows do not have existing trim, the Z-Frame/Inside Mount can provide a finished look. This option requires sufficient depth for louver clearance (the bigger the louver, the bigger the depth required) and clearance for handles must also be taken into account.

- Great for squaring and plumbing up windows
- Gives a casement finish look to the window

CUSTOMSHUTTERSGURU

FRAME SQUARENESS CHECK

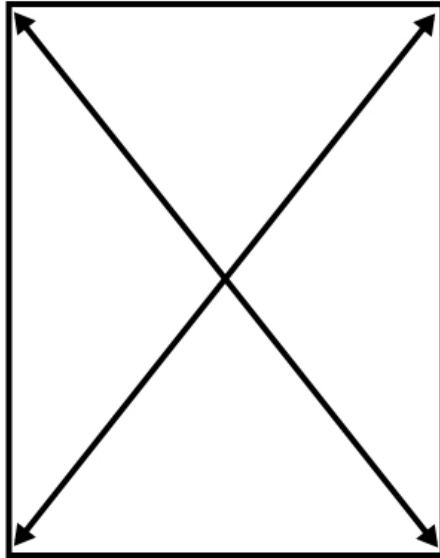

DIAGONAL SQUARENESS CHECK

Z Frames are cut at 45 degrees at the corners to the required dimensions. Glue and tack nail at the corners. Check the frame for square by measuring diagonally across the frame, adjust as needed and do final nailing. Install frame inside the window to hang shutter nailing or using screws (shim as needed). Install shutter as you would hang a door.

(drilling a pilot hole and installing screws at the corners and to the window is an option)