


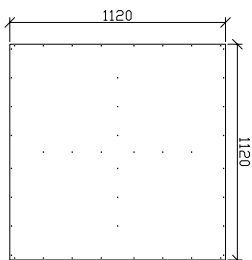
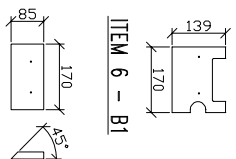
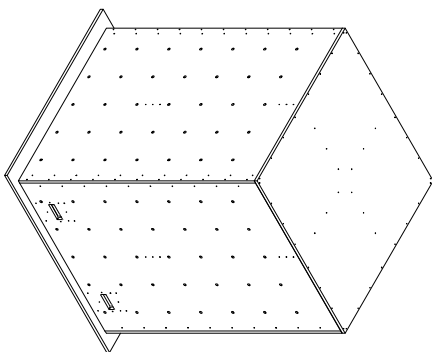
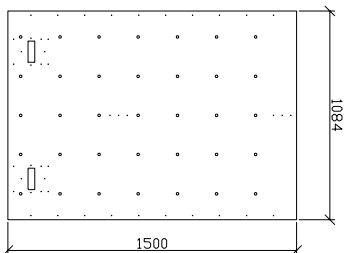
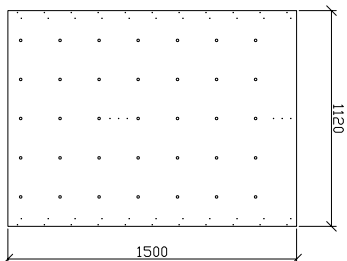
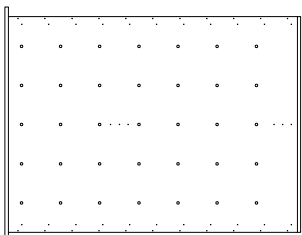
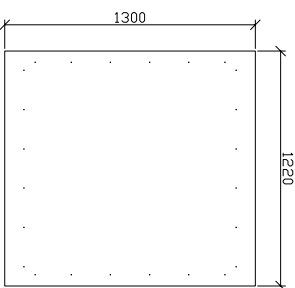
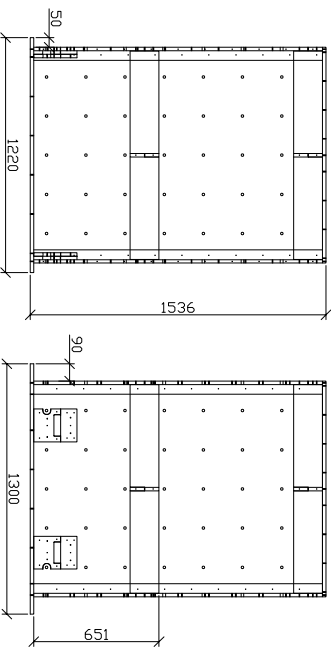
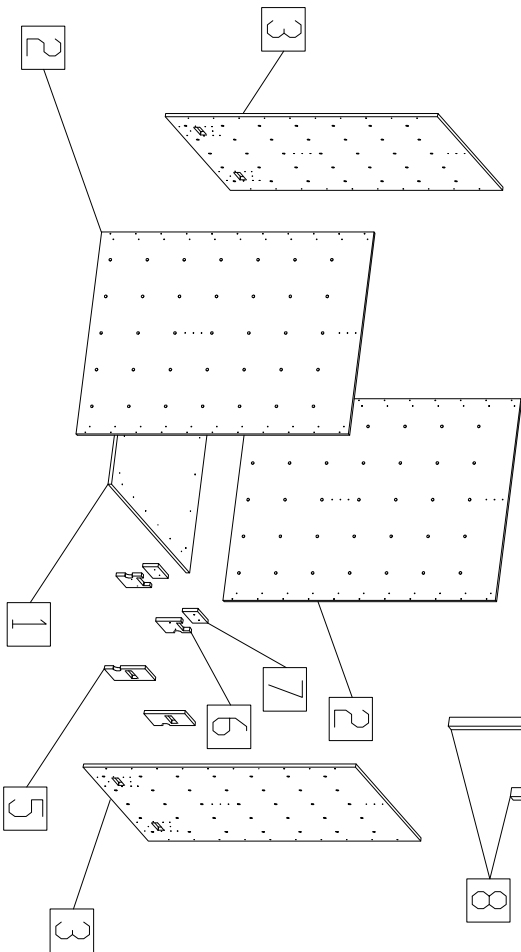
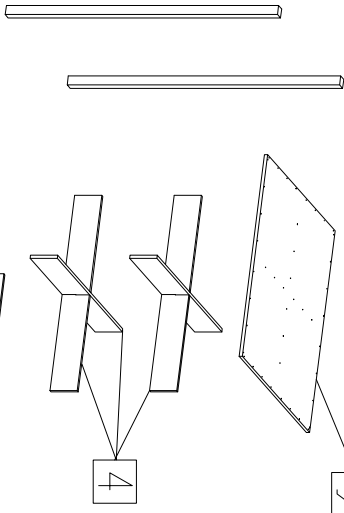
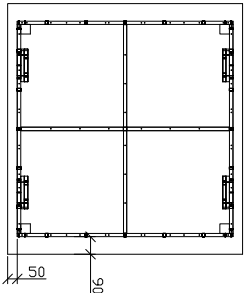


MUSCLE UP BOX 1.5 MTR

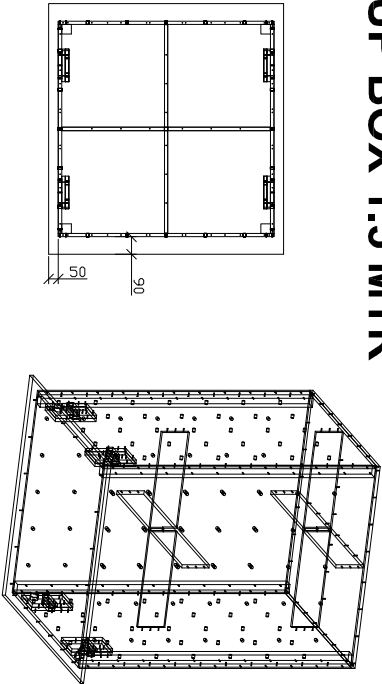

DELTA STRENGTH FITNESS

TITLE: MUSCLE UP BOX 1.5 MTR

DWG NUMBER: -----


CLIENT: PIN POINT

DWG BY: E.A. 22/04/2026


REV:

SHEET 1/2


STEP 3

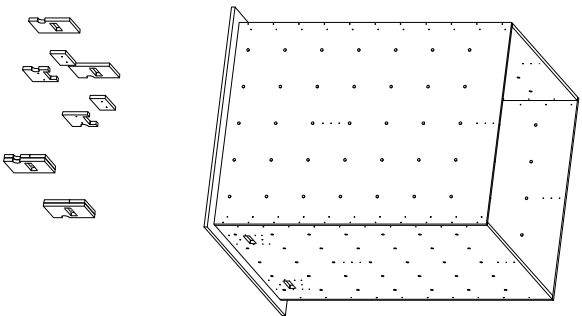

STEP 5&6

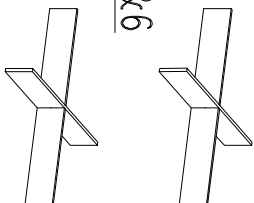


STEP 7

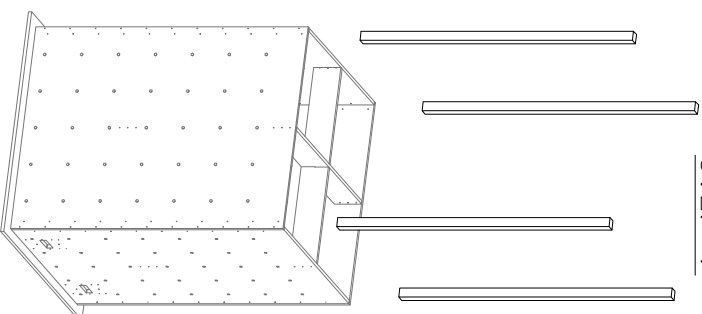


MUSCLE UP BOX 1.5 MTR

STEP 8

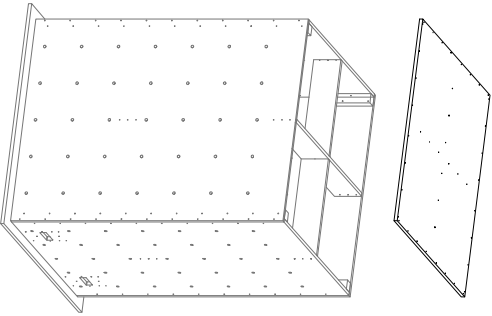

STEP 4

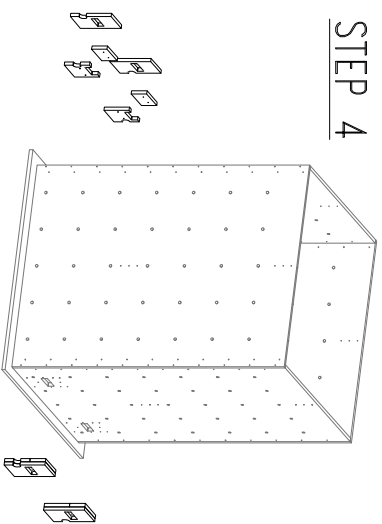

STEP 1: CHAMFER #7

STEP 2: HAMMER ALL TEETH NUT

STEP 3: ASSEMBLE BOTTOM WITH SIDES #1,2,3 USE THE TEMPLATE FROM B1 FOR EASY ALIGNMENT, NOTE ORIENTATION OF SIDES #2&3 AND PLACEMENT AS SHOWN IN DRAWING

STEP 4: ASSEMBLE MOVING DOLLY REINFORCEMENT

ITEM #5&6&7 AND ASSEMBLE THEM WITH ITEM #3

STEP 5: ASSEMBLE MIDDLE BRACE ITEM #4 AS SHOWN IN THE DRAWING

STEP 6: ASSEMBLE TOP SUPPORT ITEM #4 TOP FLUSH WITH SIDES

STEP 7: SLIDE IN THE TIMBER 50X50 AND SCREW WITH THE SIDES ITEMS #2&3

STEP 8: ASSEMBLE TOP COVER ITEM #9

STEP 9: ROUNDS ALL EDGES

DELTA STRENGTH FITNESS

TITLE: MUSCLE UP BOX 1.5 MTR

DWG NUMBER: -----

CLIENT: PIN POINT

DWG BY: E.A. 22/04/2026

REV:

SHEET 2/2