

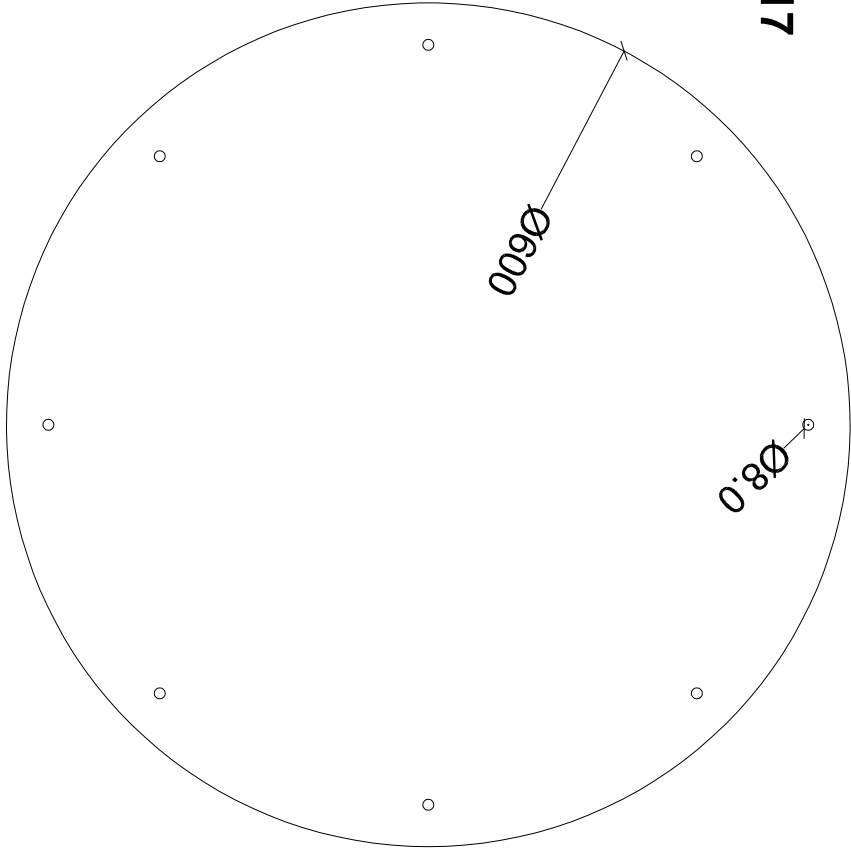
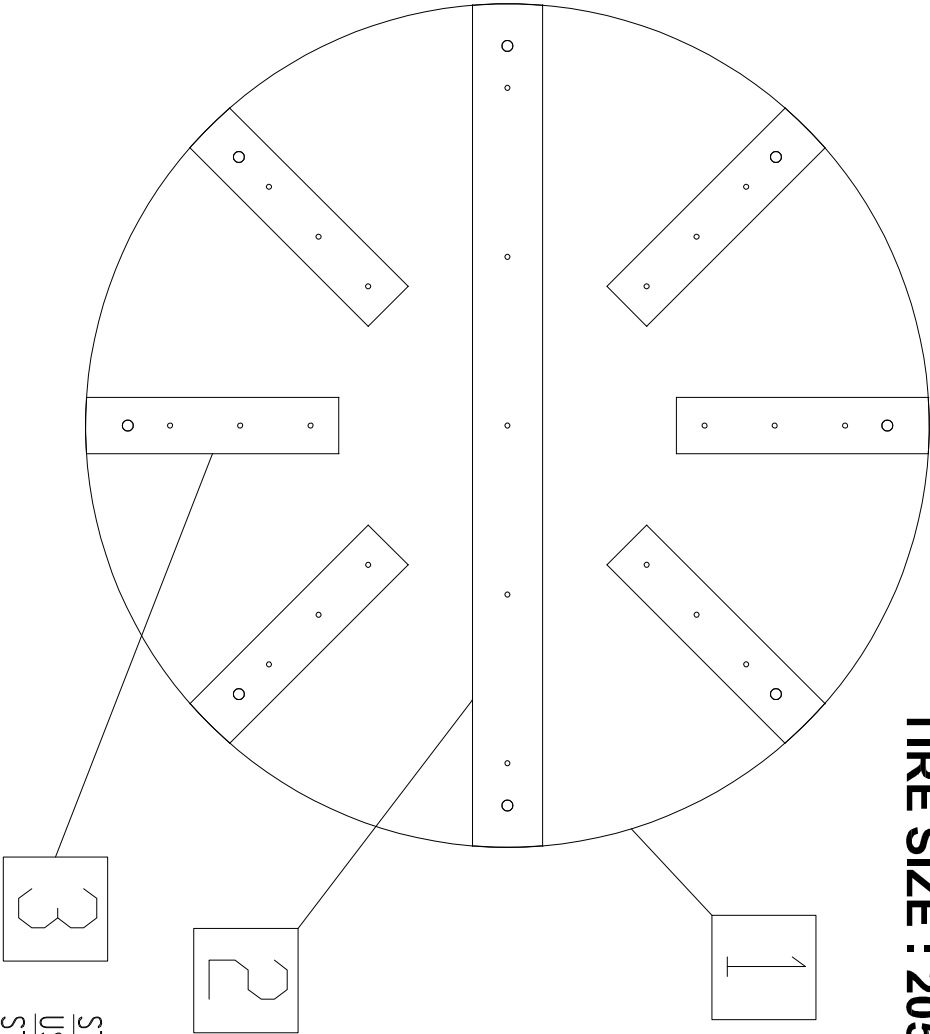


TIRE STEPS

TIRE SIZE : 205/50R17

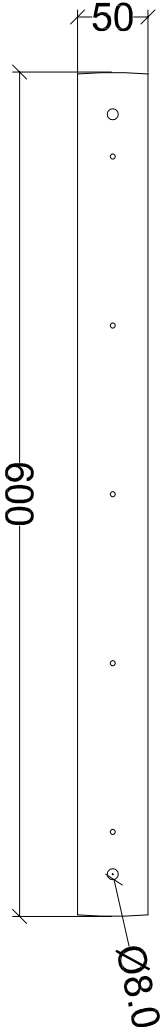

- STEP 01: ASSEMBLE ITEM #1 AND #2, MAKE SURE TO ALIGN 8 MM HOLES USING 8 MM BOLT
- STEP 02: ASSEMBLE ITEM #1 AND #3, MAKE SURE TO ALIGN 8 MM HOLES AND ALIGN ITEM #3 DIAGONALLY TO OPPOSITE PART
- STEP 03: USING STEP DRILL BIT, DRILL ITEM #1 8 MM HOLES FROM TOP SIDE TO ENABLE M8 COUNTERSUNK BOLT TO DROP IN FACE FLUSH
- STEP 04: ROUND ITEM #1 EDGES, AND SAND DOWN ALL WOOD
- STEP 05: APPLY 2 COAT PU SANDING SEALER, AND 2 COAT PU TOP COAT

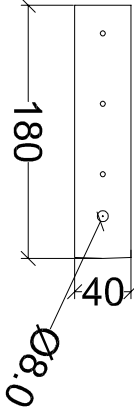

DELTA STRENGTH FITNESS

TITLE:		TIRE STEPS	
DWG NUMBER:		-----	
CLIENT:		PIN POINT	
DWG BY: E.A.		29/04/2026	REV:
		SHEET 1/1	