


MUSCLE UP BOX 2 MTR

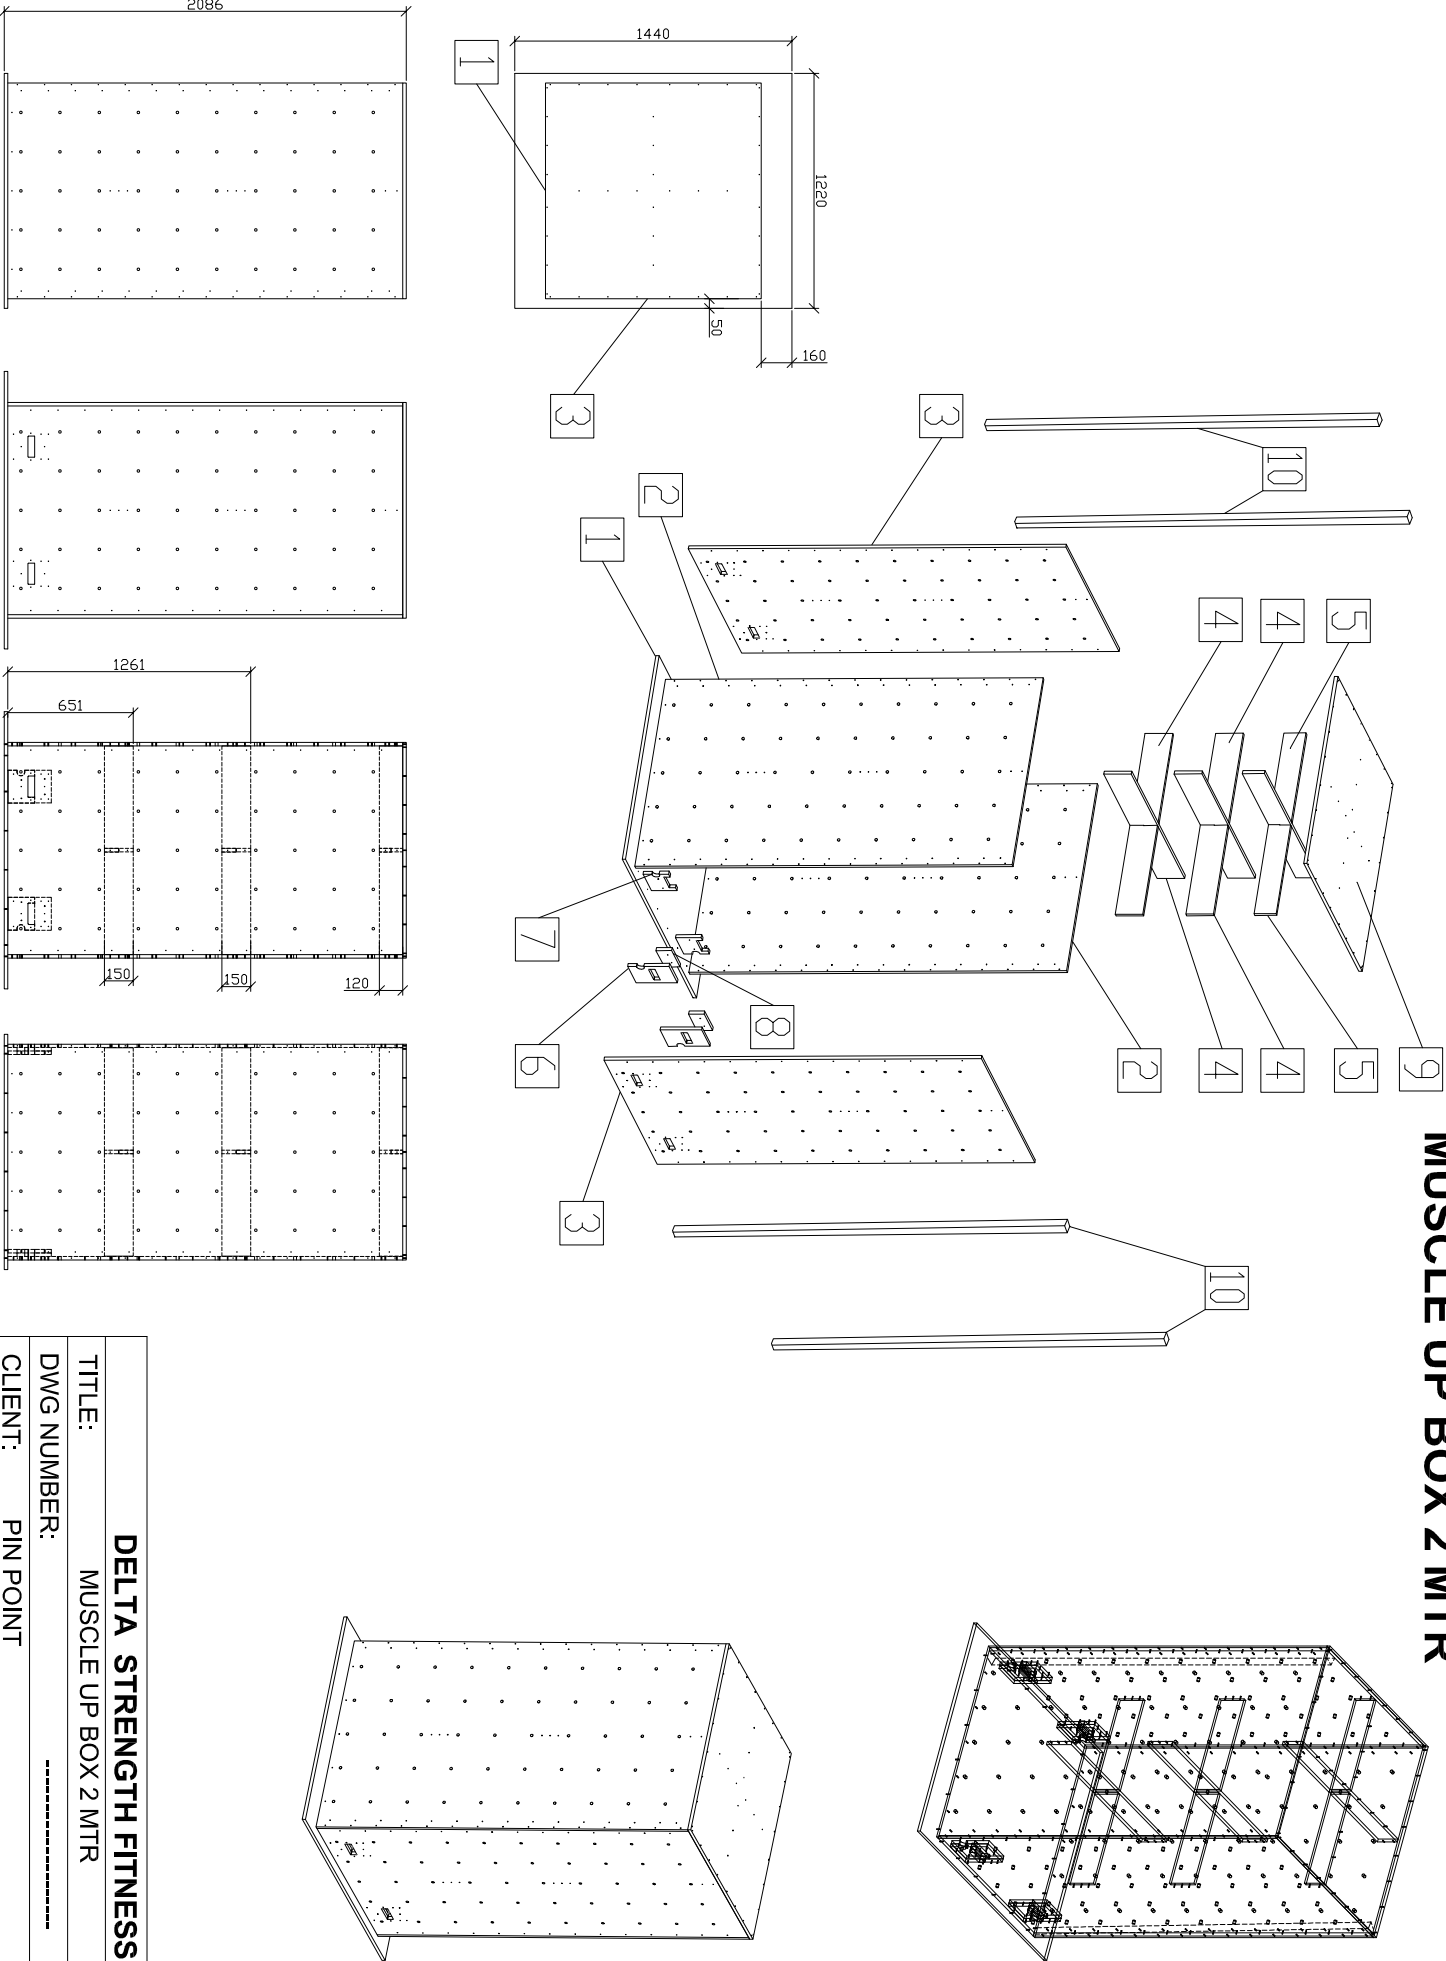

DELTA STRENGTH FITNESS

TITLE: MUSCLE UP BOX 2 MTR

DWG NUMBER: -----


CLIENT: PIN POINT

DWG BY: E.A. 22/04/2026


REV:

SHEET 1/2


MUSCLE UP BOX 2 MTR

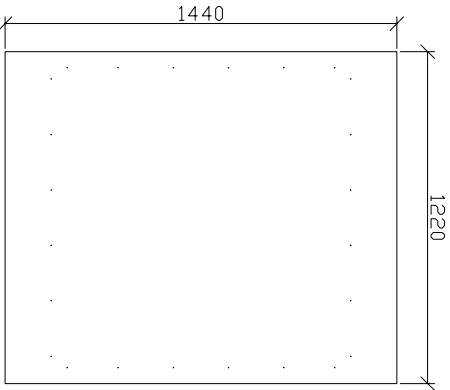


ITEM 1 – B4

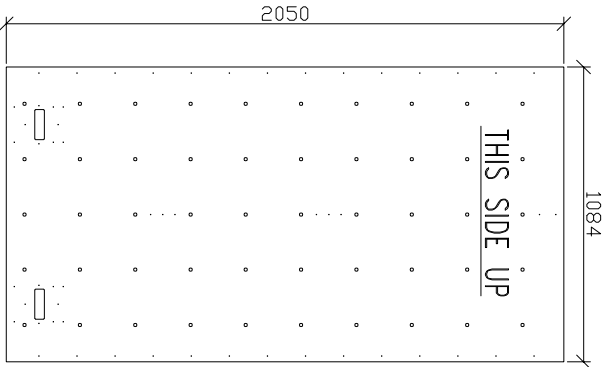


ITEM 3 – B2

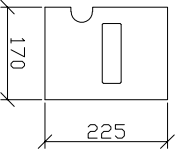



ITEM 6 – B4

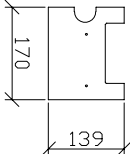

ITEM 7 – B2





ITEM 8 – B2
CHAMFER AT 45DEG

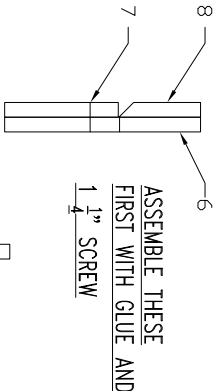

ITEM 4 – B1



ITEM 5 – B4

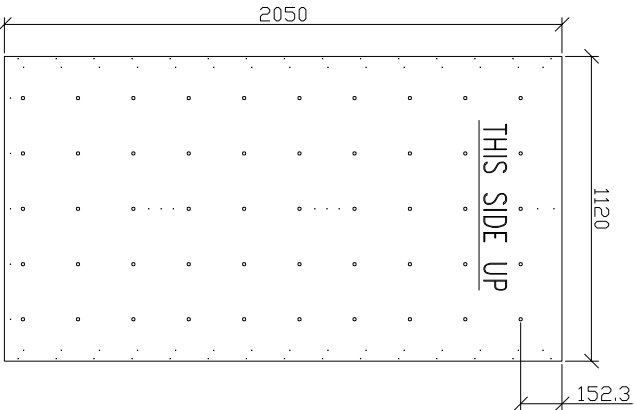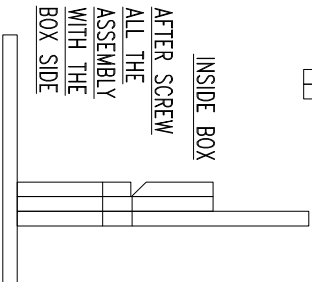

ITEM 2 – B1

STEP 1: CHAMFER #8

STEP 2: HAMMER ALL TEETH NUT

STEP 3: ASSEMBLE BOTTOM WITH

SIDES #1,2,3 USE THE TEMPLATE FROM B2 FOR EASY ALIGNMENT, NOTE ORIENTATION OF SIDES #2&3 AND

PLACEMENT AS SHOWN IN DRAWING

STEP 4: ASSEMBLE MOVING DOLLY REINFORCEMENT

ITEM #6&7&8 AND ASSEMBLE THEM WITH ITEM #3

STEP 5: ASSEMBLE MIDDLE BRACE ITEM #4 FOR BOTTOM AND

MIDDLE SUPPORT AS SHOWN IN THE DRAWING

STEP 6: ASSEMBLE TOP SUPPORT ITEM #5 TOP FLUSH WITH


SIDES

STEP 7: SLIDE IN THE TIMBER 50X50 AND SCREW WITH THE


SIDES ITEMS #2&3

STEP 8: ASSEMBLE TOP COVER ITEM #9

STEP 9: ROUNDS ALL EDGES

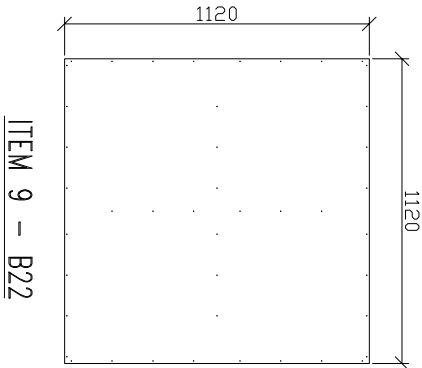

ITEM 9 – B22

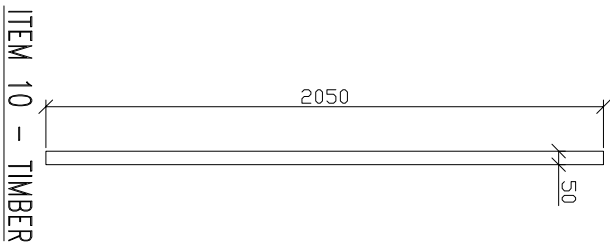

ITEM 10 – TIMBER

DELTA STRENGTH FITNESS

TITLE: MUSCLE UP BOX 2 MTR

DWG NUMBER: -----

CLIENT: PIN POINT

DWG BY: E.A. 22/04/2026

REV:

SHEET 2/2