
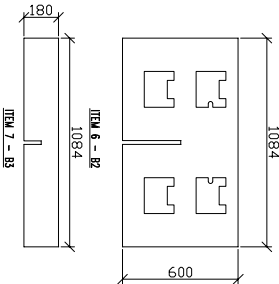
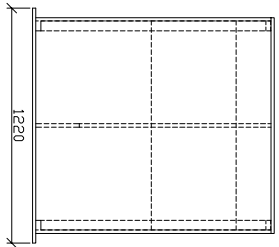
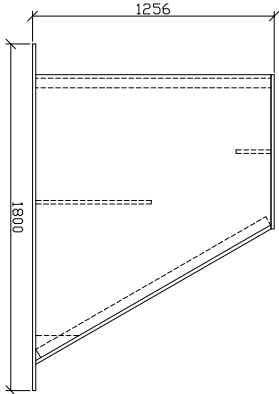



INCLINE MUSCLE UP BOX 1.25 MTR

- STEP 1: CHAMFER #10
STEP 2: HAMMER ALL TEETH NUT
STEP 3: ASSEMBLE BOTTOM WITH SIDES #1,2,3 USE THE TEMPLATE FROM B24
STEP 4: ASSEMBLE MIDDLE BRACE ITEM #5,6,7
STEP 5: ASSEMBLE TIMBER, MAKE SURE FRONT ONE IS FLUSH WITH ITEM 3-4
STEP 6: ASSEMBLE TOP ITEM #11
STEP 7: ROUNDS ALL EDGES

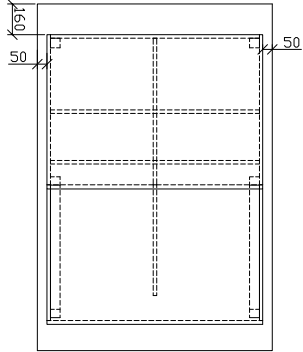


ITEM 6 - B2

ITEM 7 - B3

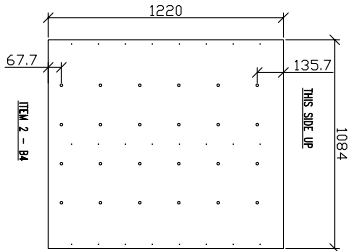


ITEM 2 - B4

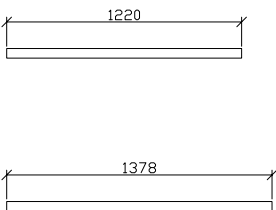


ITEM 8 - 50x50 TIMBER



ITEM 9 - 50x50 TIMBER

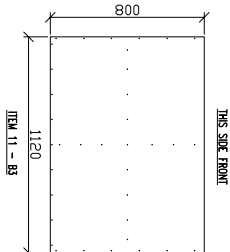


ITEM 11 - B3

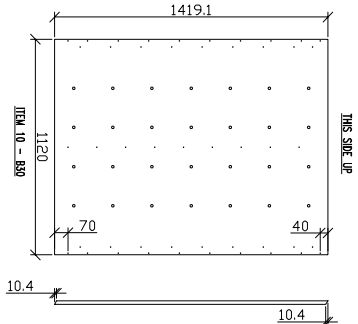


ITEM 10 - B30

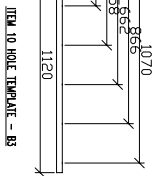


ITEM 10 HOLE TEMPLATE - B3

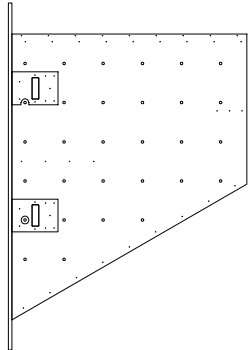

ITEM 1 - B2

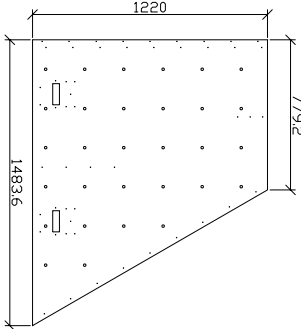

ITEM 3A - B1



ITEM 4 - B4



ITEM 5 - B4



ITEM 6 - B2



ITEM 7 - B3



ITEM 8 - 50x50 TIMBER



ITEM 9 - 50x50 TIMBER



ITEM 10 - B30



ITEM 11 - B3



ITEM 1 - B2



ITEM 2 - B4



ITEM 3 - B1



ITEM 4 - B4



ITEM 5 - B4



ITEM 6 - B2



ITEM 7 - B3



ITEM 8 - 50x50 TIMBER




ITEM 9 - 50x50 TIMBER



ITEM 10 - B30



ITEM 11 - B3

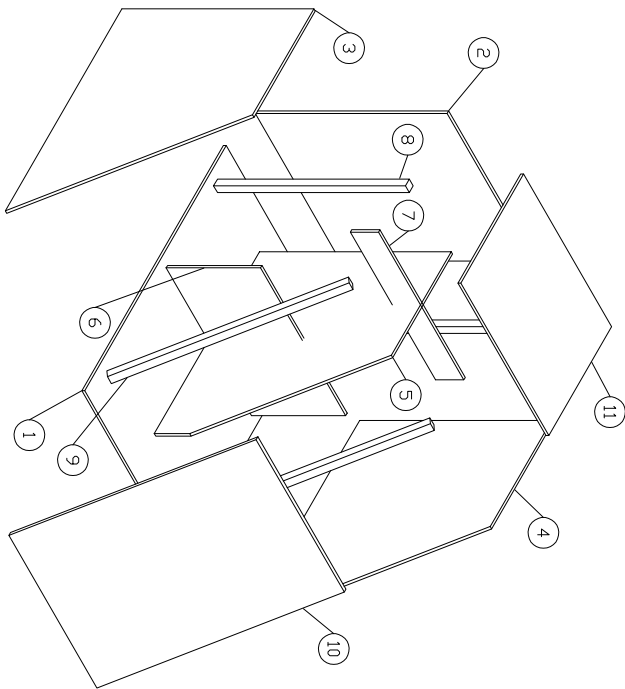

DELTA STRENGTH FITNESS

TITLE: INCLINE MUSCLE UP BOX 1.25 MTR

DWG NUMBER: -----

CLIENT: PIN POINT

DWG BY: E.A.

19/04/2026

REV: