


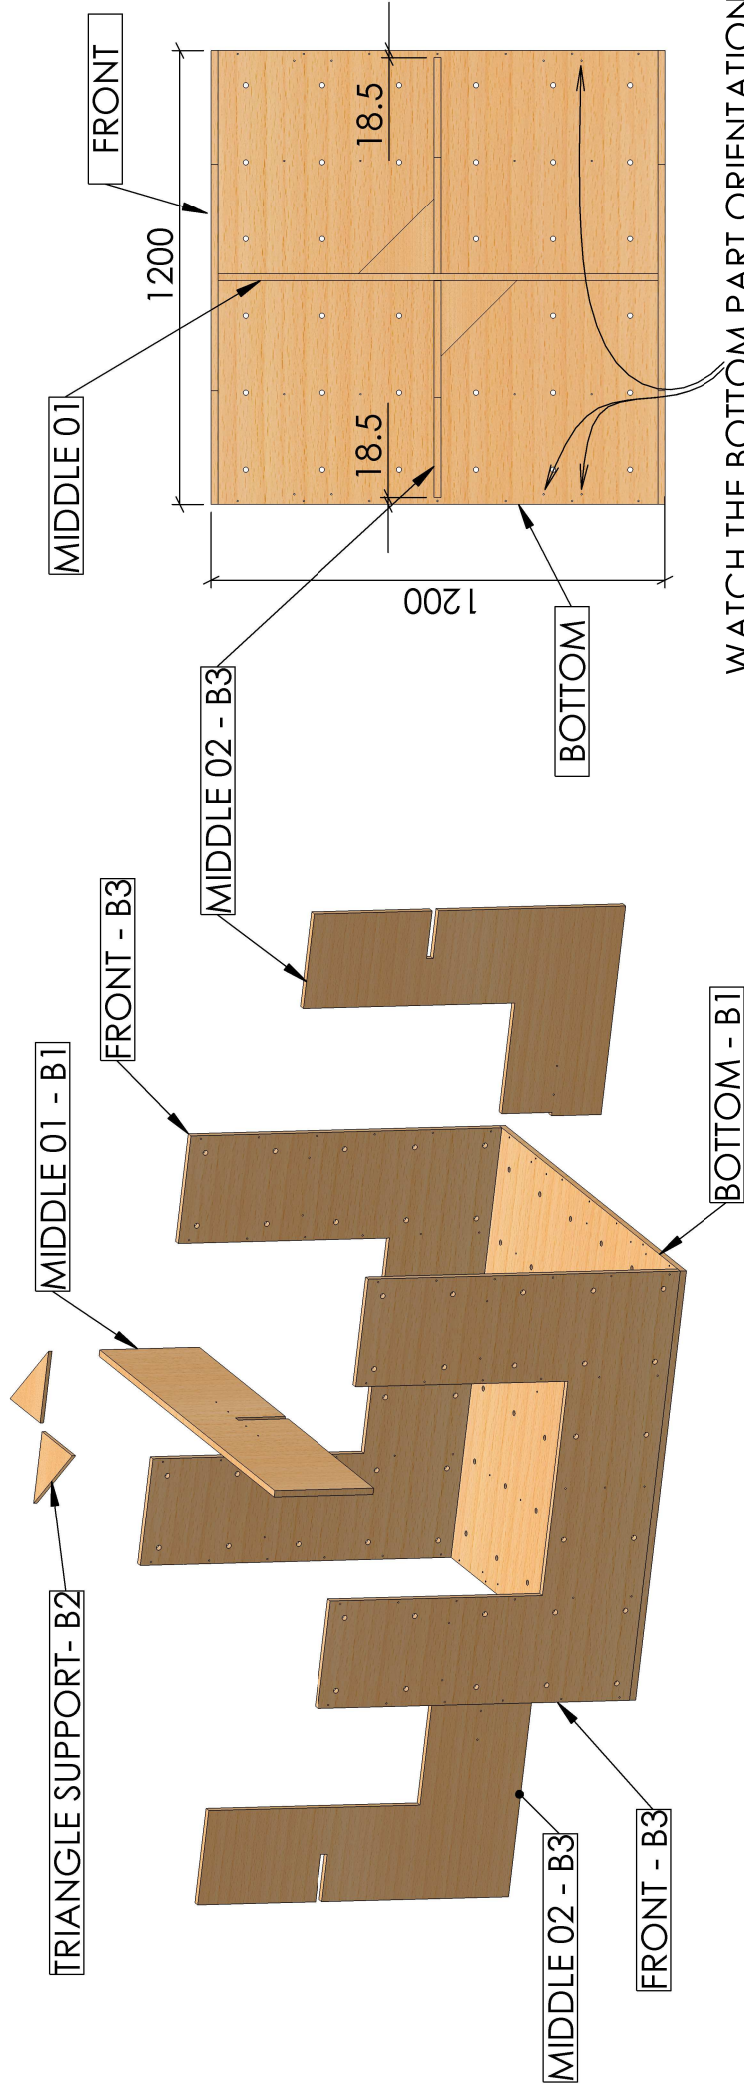

INSTALLATION STEPS:

1. HAMMER ALL TEETH NUTS IN
2. LIGTH SAND ALL THE BOARD EDGES AND REMOVE ANY SHARP SPLINTER
3. ORIENT THE BOTTOM PART CORRECTLY AS SHOWN IN THE TOP VIEW NOTES
4. ASSEMBLE THE "FRONT" PARTS , FACE FLUSH WITH "BOTTOM" PART BY FEW WOOD SCREWS (2" #8) ONLY
5. ASSEMBLE THE "MIDDLE 01" BY FEW SCREWS FROM BOTTOM, ALIGN IT PROPERLY IN CENTER, ADD ONE SCREW WITH EACH FRONT PART JUST TO HOLD IT IN PLACE
6. ASSEMBLE THE "MIDDLE 02" BY FEW SCREWS FROM BOTTOM
7. ASSEMBLE THE "TRIANGLE SUPPORT" WITH THE "MIDDLE 01 & 02"

SHEET 01

DELTA STRENGTH FITNESS

TITLE: U SHAPE BOX ASSEMBLY MANUAL

DWG NUMBER:

CLIENT: PIN POINT FITNESS

DWG BY: E.A. **JANUARY 12, 2026** **REV:** 00



INNER SIDE - B2

INNER SIDE - B2

MIDDLE 03 - B1&3

MIDDLE 03 - B1&3

INSTALLATION STEPS:

8. SLIDE IN AND ASSEMBLE THE "INNER SIDES" , MAKE SURE IT IS FLUSH WITH "FRONT" PARTS AND "MIDDLE 02"
9. SLIDE IN "MIDDLE 03" PART INTO "MIDDLE 02" AND ADD FEW WOOD SCREWS TO HOLD IT IN PLACE

SHEET 02

DELTA STRENGTH FITNESS

TITLE: U SHAPE BOX ASSEMBLY MANUAL


DWG NUMBER:

CLIENT: PIN POINT FITNESS

DWG BY: E.A. **JANUARY 12, 2026** **REV:** 00




TOP 01 - B1

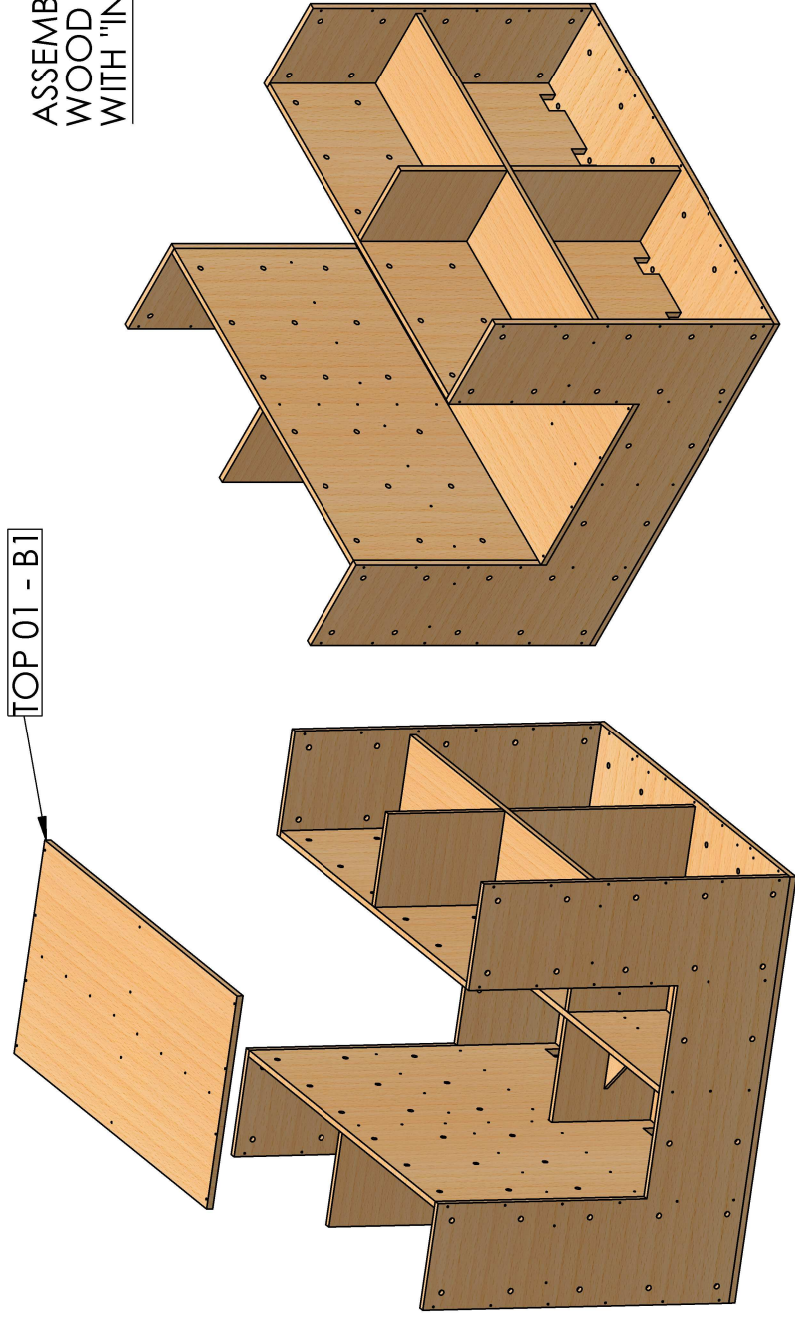

ASSEMBLE ALL THESE
WOOD SCREWS
WITH "INNER SIDE"



OUTER SIDE - B2

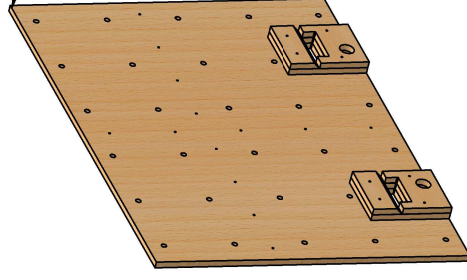


CHAMFER @45

SUPPORT 02 - B2

SUPPORT 01 - B2

A

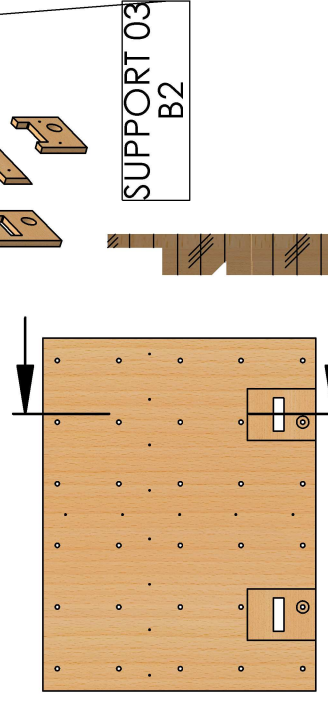

SHEET 03

INSTALLATION STEPS:

10. SLIDE IN THE "TOP 01" PART AND SCREW IT IN PLACE, MAKE SURE IT IS FACE FLUSH WITH "FRONT" PART
11. ASSEMBLE ALL THE WOOD SCREWS BETWEEN "INNER SIDE" AND "TOP 01" PARTS.
12. CHAMFER CUT "SUPPORT 02" @ 45 DEG AS SHOWN
13. ASSEMBLE "SUPPORT 01" & "SUPPORT 02" & "SUPPORT 03" USING WOOD GLUE AND 30 MM WOOD SCREWS
14. ASSEMBLE THE PREVIOUS ITEMS WITH "OUTER SIDE" PART USING 50 MM WOOD SCREWS, MAKE SURE TO ALIGN THE LIFTING DEVICE OPENING AND KEEP ALL OF THEM BOTTOM FLUSH

DELTA STRENGTH FITNESS

TITLE: U SHAPE BOX ASSEMBLY MANUAL

DWG NUMBER:

CLIENT: PIN POINT FITNESS

DWG BY: E.A. JANUARY 12, 2026

REV: 00





TOP 02 - B2

TOP 02 - B2

OUTER SIDE - B2

OUTER SIDE - B2

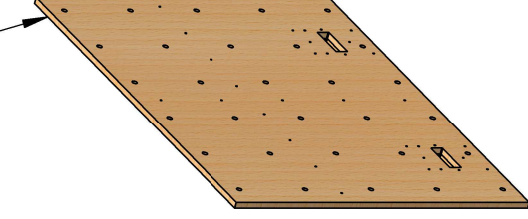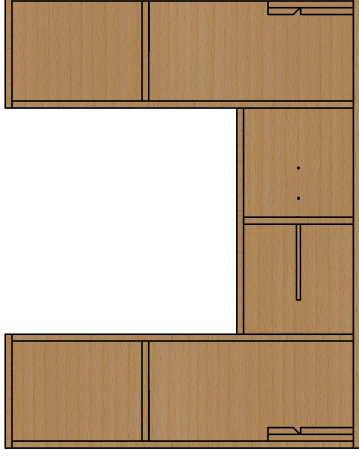

INSTALLATION STEPS:

15. ASSEMBLE THE "OUTER SIDE" PARTS , MAKE SURE IT IS TOP FLUSH WITH THE BOX
16. ASSEMBLE THE "TOP 02" PARTS
17. ADD ALL THE WOOD SCREWS
18. ROUNDS ALL THE OUTSIDE EDGES USING 6 MM ROUTER BIT
19. SAND ALL THE BOX WITH 180 GRIT SAND PAPER AND CLEAN ALL THE DUST
20. APPLY 2 COATS OF SANDING SEALER AND SAND IN BETWEEN COATS WITH 220 GRIT
21. APPLY 2 COATS OF PU TOP COAT

SHEET 04

DELTA STRENGTH FITNESS

TITLE: U SHAPE BOX ASSEMBLY MANUAL

DWG NUMBER:

CLIENT: PIN POINT FITNESS

DWG BY: E.A. JANUARY 12 ,2026 REV: 00

