


# Excavation Guidelines Underground Propane Tanks

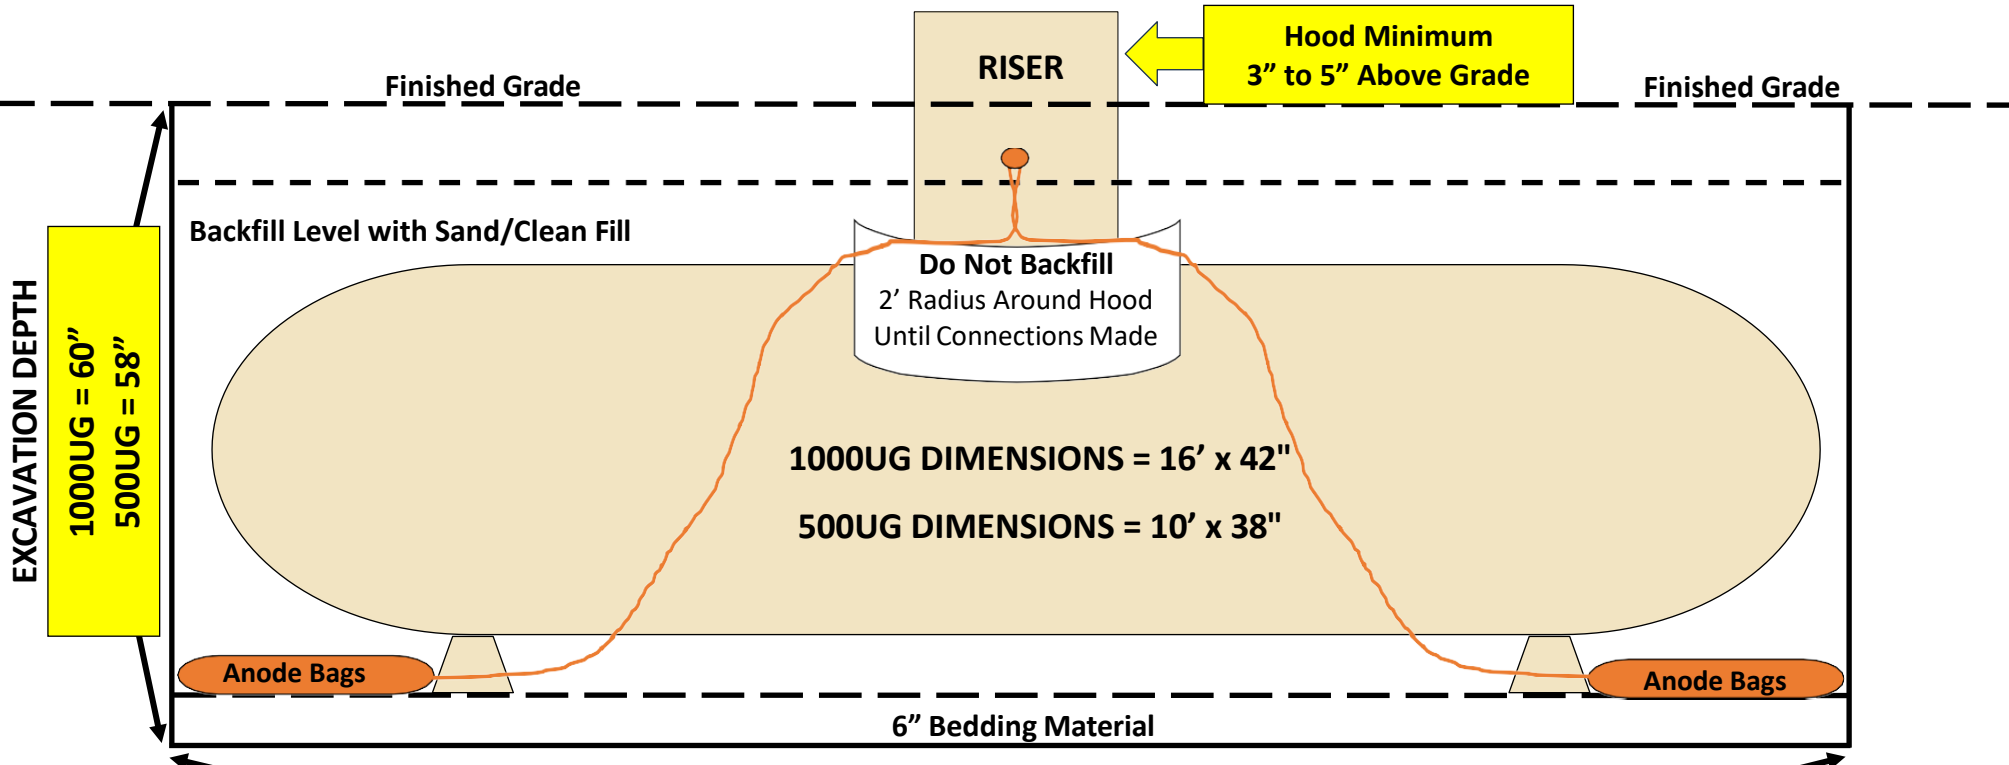

### Trench Line To House

- MIN 18" Deep
- With 6" Clean fill
- Cover Polly Tubing
- Lay Detect Wire

### House Connections

- Only Backfill up to 3' from house
- Do Not Cover or fill in riser area
- Once Connections are made backfill can be completed

**TANK MUST BE BACKFILLED TO TOP OF VESSEL with CLEAN FILL**

**CLEAN FILL DEFINITION: SCREENED TOPSOIL OR SAND.**

**NO ROCKS, NO CHIP MATERIAL, NO CRUSH, NO MATERIAL WITH SHARP EDGES  
(THESE WILL SCRATCH THE PROTECTIVE COATING AND CAUSE PREMATURE TANK FAILURE)**

**500UG - 5-7 YARDS OF FILL , 1000UG 8-10 YARDS OF FILL**