

**1993 - 1996 HARLEY-DAVIDSON™
FLT - FLHT - FLHS - FLHR**

PARTS LIST


Qty	Description
<input type="checkbox"/> 1	45-Degree clamp with two 1/2" bolts and nuts
<input type="checkbox"/> 1	70-Degree clamp with two 1/2" bolts and nuts
<input type="checkbox"/> 1	U-Clamp
<input type="checkbox"/> 1	— Lower rear bolt-on clevis bracket, one 7/16" x 14 x 1-1/2" bolt Gr.#8, one 7/16" x 14 x 1-3/4" bolt Gr.#8 and two flat washers and two lock washers
<input type="checkbox"/> 1	— Lower front clevis plate with one 5/8 x 18 x 2-1/2 bolt, two 5/8 Gr.#8 flat washer and 5/8 x 18 nyloc nut
<input type="checkbox"/> 1	70-Degree boss with two 1/2" bolts and nuts
<input type="checkbox"/> 1	45-Degree boss with two 1/2" bolts and nuts
<input type="checkbox"/> 1	Bent strut with two clevis, two jam nuts, two 3/8" bolts and nuts, 3/4" x 4" eye bolt and nylon lock nut
<input type="checkbox"/> 1	Bent strut with two clevis, two jam nuts, two 3/8" bolts and nuts, 3/4" x 4" eye bolt and nylon lock nut
<input type="checkbox"/> 1	90-Degree adaptor with two 1/2" bolts and nuts
<input type="checkbox"/> 1	— Bolt-on upper rear eye bracket with two 3/8" u-bolts and four 3/8" x 16 nylock nuts, four flat washers, one 5/16" u-bolt with two 5/16" x 18 nylock nuts and two flat washers
<input type="checkbox"/> 2	5/8" Rod end with one 5/8 x 18 jam nut
<input type="checkbox"/> 1	Shock with 5/8" x 20 x 2" and 5/8" x 20 x 2-1/4" bolts
<input type="checkbox"/> 1	Brake line banjo bolt crush washer, quick coupler
<input type="checkbox"/> 1	Optional: Damper, 1-1/2" strut clamp 2-1/2" fork leg clamp.
<input type="checkbox"/> 1	Mounting Instructions, Manual and Warranty card

California Sidecar, Inc.

15641 Computer Lane, Huntington Beach, CA 92649 • Tel. (714) 891-1033 • Service (714) 372-3616

UPPER FRONT - U-CLAMP & EYE

Place on bike frame on down tube just in front of heads high as possible at 90-degrees to the bike. Torque to 60 foot pounds.

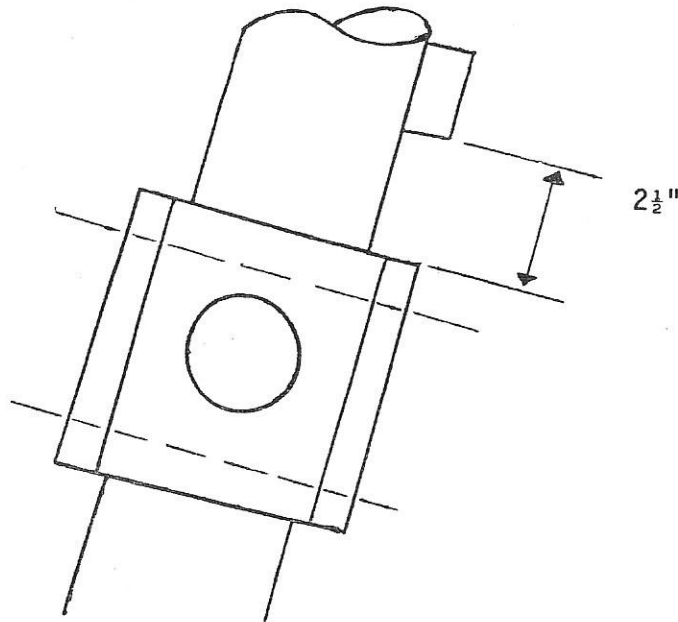


LOWER FRONT - CLEVIS PLATE


Remove driver's floor board on right side. Place plate in same location, then replace floor board.

1993 HARLEY DAVIDSON FLT - FLHT - FLHS


UPPER REAR

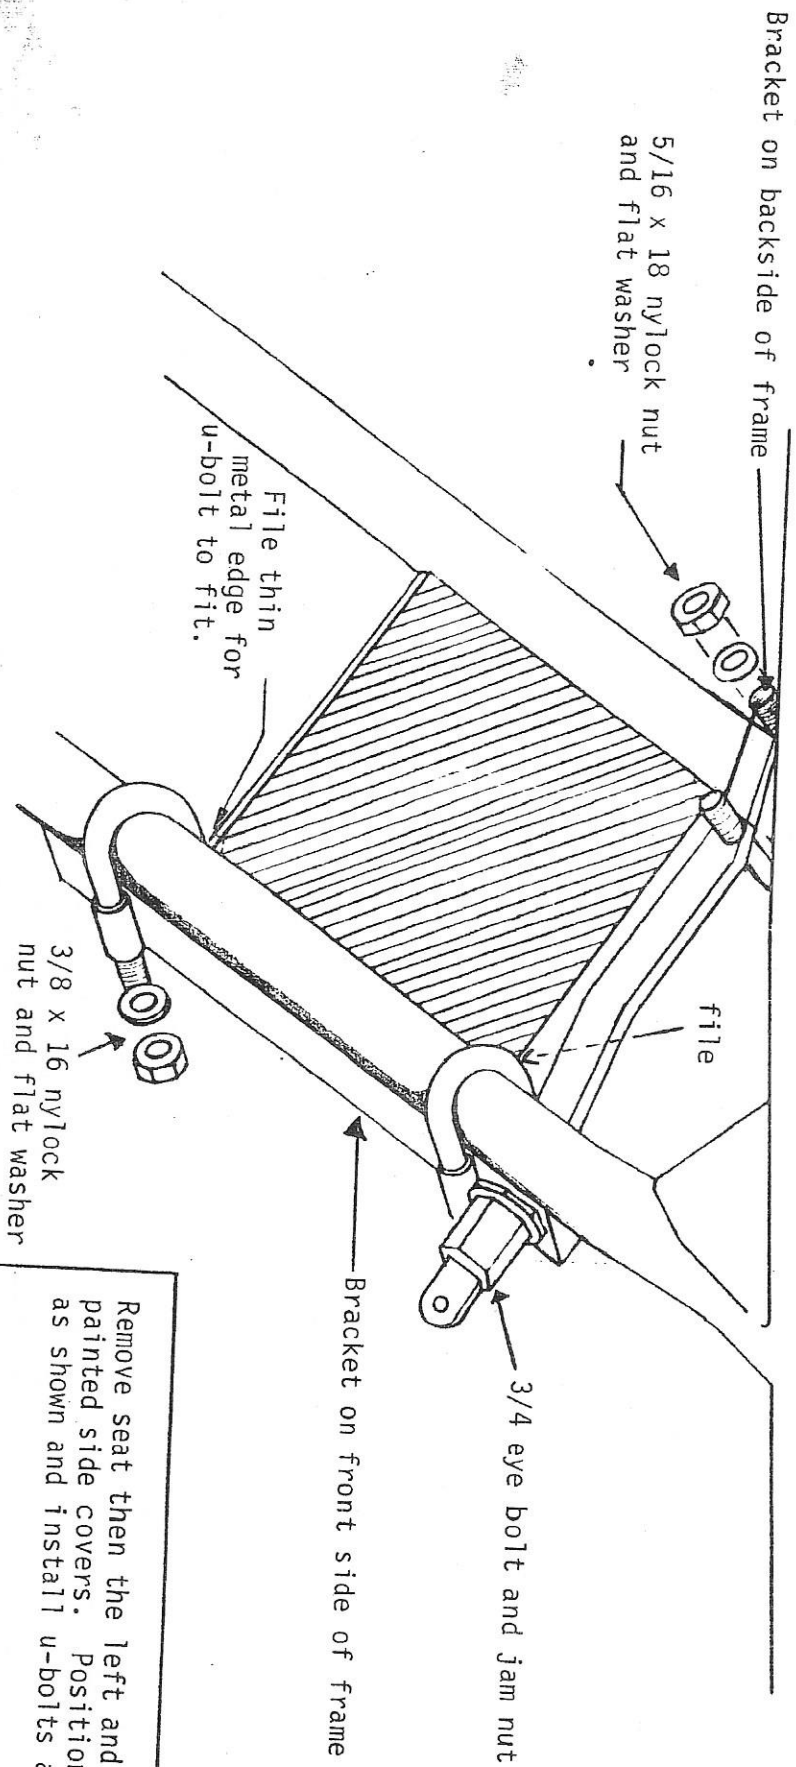


Remove seat then the left and right painted side covers. Position bracket as shown and install u-bolts and tighten.

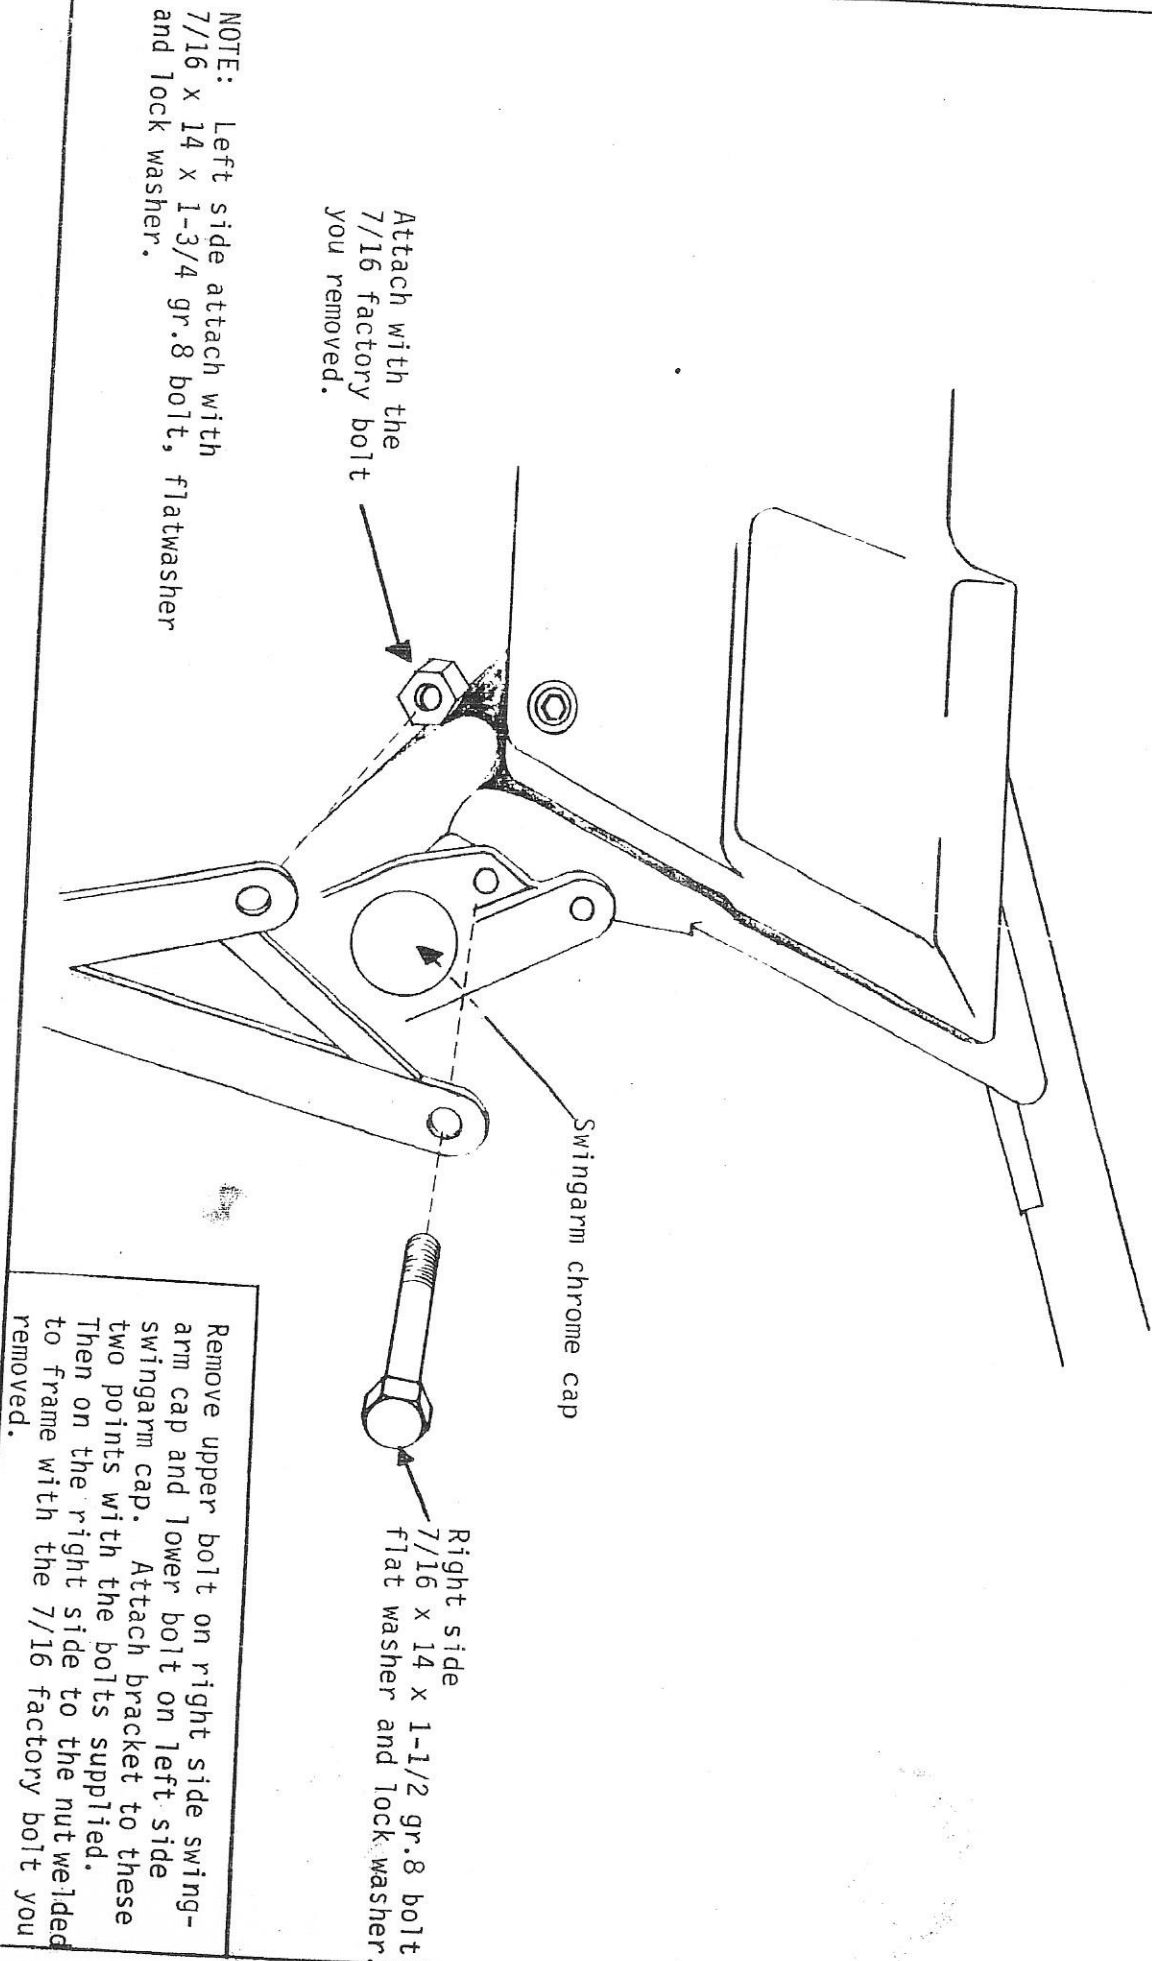

TORSION SET Pcs []

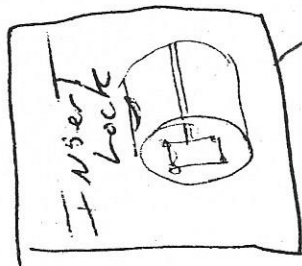

FRONT

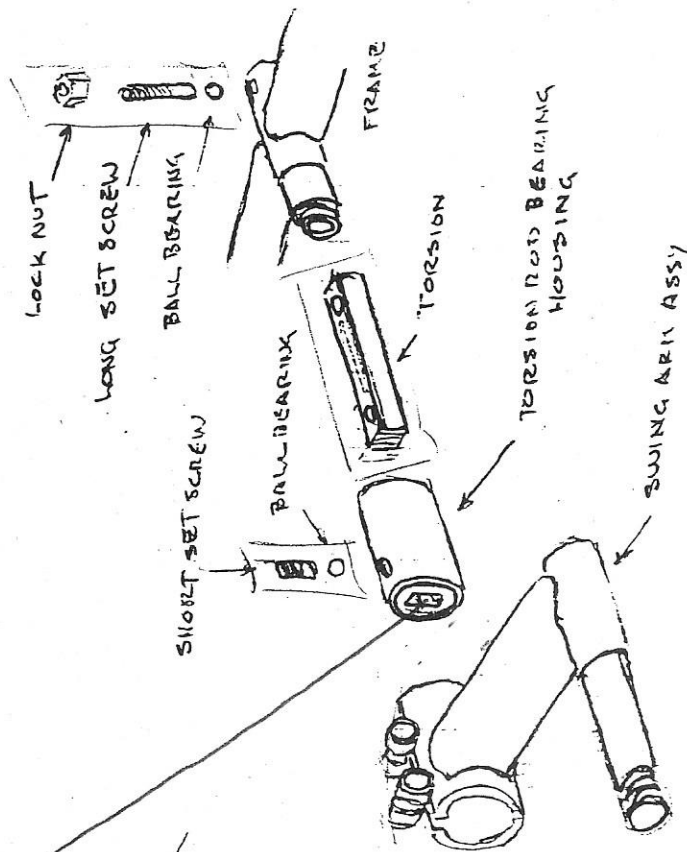

'91 Last Year

'92 New Body